

WAVE/WAVE_PTX
Release 9.1



Dispatch User Guide

MAY 2020

MN006590A01-A

Copyrights

The Motorola Solutions products described in this document may include copyrighted Motorola Solutions computer programs. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola Solutions.

© 2020 Motorola Solutions, Inc. All Rights Reserved

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a specific system, or may be dependent upon the characteristics of a specific mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola Solutions contact for further information.

Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive



■ The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trash bin label on the product (or the package in some cases).

As defined by the WEEE directive, this cross-out trash bin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.

Contact Us

The Solutions Support Center (SSC) is the primary contact for technical support included in your organization's service agreement with Motorola Solutions.

Service agreement customers should be sure to call the SSC in all situations listed under Customer Responsibilities in their agreement, such as:

- Before reloading software
- To confirm troubleshooting results and analysis before taking action

Your organization received support device numbers and other contact information appropriate for your geographic region and service agreement. Use that contact information for the most efficient response. However, if needed, you can also find general support contact information on the Motorola Solutions website, by following these steps:

- 1 Enter motorolasolutions.com in your browser.
- 2 Ensure that your organization's country or region is displayed on the page. Clicking or tapping the name of the region provides a way to change it.
- 3 Select "Support" on the motorolasolutions.com page.

Comments

Send questions and comments regarding user documentation to documentation@motorolasolutions.com.

Provide the following information when reporting a documentation error:

- The document title and part number
- The page number or title of the section with the error
- A description of the error

Motorola Solutions offers various courses designed to assist in learning about the system. For information, go to <https://learning.motorolasolutions.com> to view the current course offerings and technology paths.

Document History

Version	Description	Date
MN006590A01-A	Initial Revision	May 2020

Contents

Copyrights	2
Contact Us	3
Document History	4
List of Figures	12
List of Tables	21
List of Procedures	22
Chapter 1: Introduction and Key Features	26
1.1 What's New?.....	26
1.2 Key Features.....	26
Chapter 2: Hardware and Software Prerequisites	30
2.1 Hardware and Network Requirements.....	30
2.2 Software Requirements.....	30
2.3 Browser Requirements.....	30
2.4 Ensuring Correct Display of the Website.....	31
2.5 Network Requirements and Settings.....	31
2.5.1 Enabling File download option.....	32
Chapter 3: Getting Started	33
3.1 Signing in to Dispatch.....	33
3.2 Cookies.....	34
3.3 End User License Agreement.....	35
3.4 Take a Tour.....	35
3.5 Desktop Notifications.....	35
3.6 Signing out from Dispatch.....	36
3.7 Password Management.....	36
3.7.1 Change Password.....	37
3.7.2 Forgot Password.....	37
3.7.3 Reset Password.....	40
3.8 Blocked Account.....	40
3.9 Dispatcher Signing in More than One Session.....	40
Chapter 4: Dispatch Plug-in	41
4.1 Install Dispatch Plug-in.....	41
4.1.1 Installing Dispatch Plug-in.....	41
4.1.2 Using Internet Explorer (IE) to sign in to Dispatch.....	43
4.1.3 Checking the add-on settings for Plug-in.....	44
4.2 Uninstall Dispatch Plug-in.....	45

4.3 Upgrading Dispatch Plug-in.....	46
Chapter 5: Navigating the Dispatch.....	48
5.1 Navigation Areas.....	48
5.2 Docking/Undocking.....	49
5.3 Resetting the Layout.....	50
5.4 Help.....	51
5.5 Scrolling.....	51
5.6 Icons and Tones.....	51
5.7 Avatars.....	67
Chapter 6: Contacts and Talkgroups.....	69
6.1 Searching.....	70
6.2 Favorites Tab.....	70
6.2.1 Adding Contacts to the Favorites.....	70
6.2.2 Removing Contacts from the Favorites.....	71
6.2.3 Adding Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup to the Favorites.....	72
6.2.4 Removing Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup from the Favorites.....	73
6.3 Contacts Tab.....	74
6.4 Talkgroups Tab.....	76
6.5 Broadcast Groups Tab.....	77
6.6 My Talkgroups Tab.....	78
6.6.1 Creating My Talkgroups.....	78
6.6.2 Placing Call or Sending Message or Locating Members of a My Talkgroup.....	80
6.6.3 Removing Fleet Members from a My Talkgroup.....	81
6.6.4 Renaming a My Talkgroup.....	82
6.6.5 Adding Members to an Existing My Talkgroup.....	84
6.6.6 Deleting a My Talkgroup.....	85
6.7 Area Talkgroups.....	86
6.8 Change Avatar of a Contact.....	86
Chapter 7: PTT Calls.....	88
7.1 Call Ready State.....	88
7.2 Making Calls.....	88
7.2.1 Placing a Talkgroup Call.....	88
7.2.2 Placing a Quick Group Call.....	90
7.2.3 Placing a Broadcast Call.....	91
7.2.4 Placing an Area Talkgroup Call.....	93
7.2.5 Placing a One-to-one (1-1) Call.....	94
7.2.6 Placing a Call from the Alerts Window.....	95

7.2.7 Placing a Call from the Map.....	95
7.2.8	
Placing a Call from the Selection List window on the map.....	96
7.2.9 Placing a Call from Call Logs.....	96
7.2.10 Placing a Call from Alert Logs.....	97
7.2.11 Placing a Call from Geofence Logs.....	98
7.2.12 Placing a Call from Message.....	99
7.3 Receiving Calls.....	99
7.4 Voice Message Fall Back.....	100
7.5 Rejoining a Talkgroup Call.....	101
7.6 Setting the PTT Call Volume.....	102
Chapter 8: Emergency.....	103
8.1 Initiate an Emergency.....	103
8.2 Received Emergency.....	105
8.3 Emergency Cancellation.....	106
Chapter 9: Integrated Secured Messaging.....	108
9.1 Supported Formats for the Multimedia.....	108
9.2 Sending Message to a Contact.....	109
9.2.1 Sending document to a contact.....	109
9.2.2 Discarding the attached document.....	111
9.2.3 Sending a photo to a contact.....	111
9.2.4 Discarding the attached photo.....	112
9.2.5 Sending video to a contact.....	112
9.2.6 Discarding the attached video.....	114
9.2.7 Sending audio to a contact.....	114
9.2.8 Sending a pre-recorded audio file from your local PC.....	116
9.2.9 Discarding the attached audio.....	117
9.2.10 Sharing Location to a contact.....	117
9.3 Sending Message to Quick Group.....	119
9.3.1 Sending text message to a quick group.....	119
9.3.2 Sending file to a quick group.....	119
9.3.3 Discarding the attached document.....	120
9.3.4 Sending a photo to a quick group.....	121
9.3.5 Discarding the attached photo.....	122
9.3.6 Sending video to a quick group.....	122
9.3.7 Discarding the attached video.....	123
9.3.8 Sending audio to a Quick Group.....	124
9.3.9 Sending a pre-recorded audio file from your local PC.....	125
9.3.10 Discarding the attached audio.....	126

9.3.11 Sharing Location to a quick group.....	126
9.4 Sending Message to Talkgroup.....	128
9.4.1 Sending text message to a talkgroup, follow these steps:.....	128
9.4.2 Sending file to a talkgroup.....	128
9.4.3 Discarding the attached document.....	129
9.4.4 Sending photo to a talkgroup.....	130
9.4.5 Discarding the attached photo.....	131
9.4.6 Sending video to a talkgroup.....	131
9.4.7 Discarding the attached video.....	133
9.4.8 Sending audio to a talkgroup.....	133
9.4.9 Sending a pre-recorded audio file from your local PC.....	135
9.4.10 Discarding the attached audio.....	136
9.4.11 Sharing Location to a talkgroup.....	136
9.5 Sending Message to Broadcast Group.....	138
9.5.1 Sending text message to a broadcast group.....	138
9.6 Search Message.....	139
9.7 Quick Text.....	139
9.8 Delete Conversation History.....	140
9.9 Delete or Forward Single and Multiple Text or Multimedia Message.....	141
9.9.1 Deleting text or multimedia message.....	141
9.9.2 Forwarding text or multimedia message.....	142
9.10 View and Download Received file.....	144
9.11 View Shared Geo Location by the Fleet Member.....	145
9.12 Metadata of the Multimedia Files or Location.....	145
9.13 Export.....	146
9.13.1 Exporting conversation history.....	146
9.13.2 Exporting individual message.....	147
Chapter 10: Status Alerts.....	149
Chapter 11: Recording Calls.....	150
11.1 Record Always.....	150
11.2 Record Manually.....	150
11.3 Playing Back the recorded calls.....	151
11.4 Exporting the Recorded Call Conversation.....	151
11.4.1 Exporting multiple call recordings.....	152
11.5 Backup- Call Recordings.....	153
Chapter 12: Supervisory Override.....	156
Chapter 13: Alerts.....	157
13.1 Instant Personal Alert (IPA).....	157
13.2 Missed Call Alerts.....	158

13.3 Geofence Alerts.....	160
13.4 Emergency Alerts.....	160
13.5 Status Alerts.....	160
13.6 Geofence Alerts.....	165
13.7 Emergency Alert.....	165
Chapter 14: Talkgroup Scanning.....	166
14.1 Setting the Talkgroup Priority.....	166
14.2 Enabling Talkgroup Scanning for a Talkgroup.....	167
14.3 Turning off Talkgroup Scanning for a Talkgroup.....	167
14.4 View Dispatchers on the Monitored Talkgroup.....	167
Chapter 15: Monitoring Talkgroups.....	169
15.1 Adding a Talkgroup to a Monitored Talkgroup Activity.....	169
15.2 Removing a Talkgroup from the Monitored Talkgroup Activity Window.....	169
15.3 Replacing a Talkgroup from the Monitored Talkgroup Activity Window.....	170
15.4 Actions on a Monitored Talkgroup.....	170
Chapter 16: Using the Map.....	172
16.1 Locating Fleet Members.....	172
16.1.1 Locating a Single Fleet Member.....	172
16.1.2 Locating Multiple Fleet Members.....	173
16.1.3 Locating Talkgroup Members.....	174
16.2 Clear Located Fleet Members off the Map.....	175
16.3 Fleet Member Information Window.....	175
16.4 Selecting Multiple Fleet Members on a Map.....	176
16.5 On Demand Location Update.....	178
16.5.1 Performing a One Time Location Update of a Fleet Member.....	178
16.6 Periodic Location Update.....	180
16.6.1 Starting a Periodic Location Update of a Fleet Member.....	180
16.7 Finding an Address.....	181
16.8 Centering the Map.....	182
16.9 Zooming in and out on a Map.....	183
16.10 Changing Views of the Map.....	183
16.11 Overlapped Map Markers.....	188
Chapter 17: Location History.....	190
17.1 Tracking the path of a fleet member on the map.....	190
Chapter 18: Geofence.....	193
18.1 Creating Geofence for a Talkgroup.....	193
18.2 Add Fence coordinates to the Favorites.....	196
18.3 Removing Fence coordinates from the Favorites.....	196
18.4 Editing fence.....	197

18.5 Deleting fence.....	198
18.6 Geofence Event View.....	198
Chapter 19: Video Streaming.....	200
19.1 Initiate Video Call (Video Stream Pull).....	200
19.2 Received Video Call (Video Stream Push).....	202
19.2.1 Talkgroup (when not scanned) or One-to-one video call.....	203
19.2.2 Talkgroup video call (when scanned in Monitored Talkgroup tab).....	203
Chapter 20: Area Talkgroup.....	206
20.1 Creating Area Talkgroup.....	207
20.1.1 Call, Send Message or Locate or Refresh the location of an Area Talkgroup.....	209
20.2 Adding members to Area Talkgroup.....	210
20.3 Deleting Members of Area Talkgroup.....	212
20.3.1 Deleting Area Talkgroups.....	212
20.4 Actions on Area Talkgroup Members.....	213
20.5 Dynamic Active and Inactive Area Talkgroup member.....	214
Chapter 21: User Monitoring.....	215
21.1 User Check.....	215
21.2 Ambient Listen.....	217
21.3 Discreet Listen.....	218
21.4 Remote Disable or Enable Fleet Member.....	220
Chapter 22: Real-Time Presence.....	222
22.1 Presence of the PTT Contact or Fleet Member.....	222
22.2 Your Presence.....	223
Chapter 23: Using Accessories.....	224
23.1 Notification Message on Connection.....	224
23.2 Accessory Connection and Disconnection Notifications on a Different Operating System.....	224
23.3 Accessory Specifications.....	225
23.4 Using a Desktop Microphone with PTT Button.....	226
23.5 Using a Headset.....	227
23.6 Using a Wide-base Table Microphone.....	229
23.7 Using a Foot switch.....	230
Chapter 24: Logs.....	231
24.1 Alert Logs.....	231
24.2 Call Logs.....	232
24.3 Video Logs.....	234
24.4 Audit Logs.....	235
24.5 Geofence Logs.....	236
24.6 Location Report.....	237

Chapter 25: Backing up.....	239
Chapter 26: Settings.....	242
26.1 General.....	242
26.2 Account Settings.....	243
26.3 Alert Settings.....	244
26.3.1 Generic Alerts.....	244
26.3.2 Status Alerts.....	244
26.4 Recording Settings.....	245
26.5 Devices Settings.....	246
26.6 Tones.....	247
26.7 Notifications.....	248
26.8 Map Settings.....	248
26.8.1 Setting the Default Color for a Talkgroup:.....	250
26.8.2 Setting a Color for a Common Member in Multiple Talkgroups.....	251
26.8.3 Setting a Color for a Talkgroup.....	252
26.8.4 Setting a Color to a Default Contact and Talkgroup Color for a Talkgroup.....	253
26.8.5 Auto Zoom.....	254
26.9 Location.....	254
26.10 About.....	256
Chapter 27: Troubleshooting.....	257
27.1 Sign in and Plug-in Issue.....	257
27.2 User Interface Issues.....	258
Chapter 28: Glossary.....	260
28.1 Call Types.....	260
28.2 Secured Message.....	261
28.3 Dispatch Dispatcher Identity.....	261
28.4 Floor Control.....	261
28.5 Talkgroup.....	262
28.6 Quick Group.....	262
28.7 Area Talkgroup.....	262
28.8 Geofence.....	262
28.9 Location History.....	262
28.10 On-demand Location Updates.....	262
28.11 User Monitoring.....	262
28.12 Emergency.....	263
28.13 Backup.....	263
28.14 Status Alerts.....	263

List of Figures

Figure 1: Internet Explorer File Download Enabled Option.....	32
Figure 2: Sign in Mail.....	33
Figure 3: Choose Password.....	34
Figure 4: Sign In Page.....	34
Figure 5: Desktop Notification.....	35
Figure 6: Desktop Notification - Incoming Call Alert.....	36
Figure 7: Sign out.....	36
Figure 8: Change password.....	37
Figure 9: Forgot password.....	38
Figure 10: Enter Registered Email ID - Forgot Password.....	38
Figure 11: New Password Window- Forgot Password.....	39
Figure 12: Account Blocked- Multiple Password Attempt Fail.....	40
Figure 13: Sign in More Than One Session Pop-up.....	40
Figure 14: Dispatch Sign In Page.....	41
Figure 15: Add Chrome Extension.....	42
Figure 16: Add Extension Error.....	42
Figure 17: Add Extension to Chrome.....	42
Figure 18: Add Extension Pop-up Block.....	43
Figure 19: Extension Added to the Chrome.....	43
Figure 20: Add Plug-in pop-up block- IE.....	44
Figure 21: Dispatch Plug-in Setup.....	45
Figure 22: Dispatch Plug-in Installer.....	45
Figure 23: Uninstall Dispatch Plug-in.....	46
Figure 24: Dispatch Plug-in Upgrade Notification.....	46
Figure 25: Dispatch Plug-in upgrade Confirmation.....	46
Figure 26: Dispatch Plug-in Upgrade Error Dialog Box.....	47
Figure 27: Dispatch Plug-in Setup.....	47
Figure 28: Dispatch Upgrade Plug-in Installer.....	47
Figure 29: Dispatch Layout.....	49
Figure 30: Docked window.....	49
Figure 31: Undocked windows.....	50
Figure 32: Reset layout option.....	50
Figure 33: Reset Layout Confirmation Window.....	50
Figure 34: Contacts and Talkgroups Window.....	69
Figure 35: Search bar.....	70
Figure 36: Add Contact to Favorites.....	70

Figure 37: Contact Added to Favorites.....	71
Figure 38: Favorite Icon in the Contacts tab.....	71
Figure 39: Remove Contact from Favorites.....	71
Figure 40: Remove from favorites- Confirmation Dialog box.....	72
Figure 41: Add Talkgroup to Favorites.....	72
Figure 42: Talkgroup Added to Favorites.....	73
Figure 43: Favorite Icon in the Talkgroup tab.....	73
Figure 44: Remove Talkgroup from Favorites.....	74
Figure 45: Contacts Tab Window.....	74
Figure 46: Total Contacts Assigned.....	75
Figure 47: Fleet Member Authorization.....	75
Figure 48: Talkgroups Tab Window.....	76
Figure 49: Total Talkgroup Assigned.....	77
Figure 50: Broadcast Groups Tab.....	77
Figure 51: Total Broadcast Groups Assigned.....	78
Figure 52: Total Broadcast Group Members.....	78
Figure 53: Creating My Talkgroups.....	79
Figure 54: Create My Talkgroups Window.....	79
Figure 55: My Talkgroup Created- Confirmation Dialog Box.....	79
Figure 56: View Members of the My Talkgroup.....	80
Figure 57: Selecting a Talkgroup from My Talkgroup.....	80
Figure 58: My Talkgroup Tab Window.....	81
Figure 59: Remove My Talkgroup Members.....	81
Figure 60: Selecting Members to Remove.....	82
Figure 61: My Talkgroup Tab Window.....	82
Figure 62: Rename My Talkgroup.....	83
Figure 63: My Talkgroup- Rename.....	83
Figure 64: My Talkgroup Renamed - Confirmation Dialog Box.....	83
Figure 65: Adding Member to My Talkgroup.....	84
Figure 66: Adding Member to My Talkgroup Window.....	84
Figure 67: Delete My Talkgroup.....	85
Figure 68: Delete My Talkgroup - Confirmation Dialog Box.....	85
Figure 69: Contacts and Talkgroups Window.....	86
Figure 70: Change Avatar- Contact.....	86
Figure 71: Select and Apply New Avatar to Contact.....	87
Figure 72: Call Activity Screen.....	88
Figure 73: Talkgroups Tab Window.....	89
Figure 74: Talkgroup Call- Call Ready screen.....	89
Figure 75: Talkgroup Call Active Window.....	89

Figure 76: Quick Group Call- Call Ready screen.....	90
Figure 77: Quick Group Call Active Window.....	91
Figure 78: Broadcast Groups Tab.....	91
Figure 79: Broadcast Call Dialog.....	91
Figure 80: Broadcast Call - Call Ready Screen.....	92
Figure 81: Broadcast Call - Active Window.....	92
Figure 82: Area Talkgroup Call- Call Ready Screen.....	93
Figure 83: Area Talkgroup Call Active Window.....	93
Figure 84: One-to-One Call - Call Ready Screen.....	94
Figure 85: One-to-one Call Active Window.....	94
Figure 86: Make Call from Alerts Window.....	95
Figure 87: Info Window.....	95
Figure 88: Selection List Window.....	96
Figure 89: Make Call from Call Logs History.....	97
Figure 90: Make Call from Alert Logs History.....	98
Figure 91: Make Call from Geofence Logs History.....	98
Figure 92: Make Call from Message Tab.....	99
Figure 93: Incoming Call Active Window.....	100
Figure 94: Voice Message Fall Back.....	101
Figure 95: Monitored Talkgroup Call.....	101
Figure 96: Call Volume.....	102
Figure 97: Start Emergency - Contacts and Talkgroups Window.....	103
Figure 98: Start Emergency Confirmation Window.....	104
Figure 99: Toast Message- Start Emergency.....	104
Figure 100: Automatic Emergency Initiation.....	105
Figure 101: Emergency Alert tab.....	105
Figure 102: Initiate User Monitoring - Emergency Alerts.....	106
Figure 103: Cancel Emergency - Emergency Alert Window.....	106
Figure 104: Cancel Emergency - User Check Window.....	107
Figure 105: Confirm Emergency Confirmation Box.....	107
Figure 106: Search- Message.....	108
Figure 107: Send Text Message to Contact.....	109
Figure 108: File Selection Window - Document.....	110
Figure 109: Send Document to Contact.....	110
Figure 110: Delete Confirmation Window.....	111
Figure 111: File Selection Window- Photo.....	111
Figure 112: Send Photo to a Contact.....	112
Figure 113: Delete Confirmation Window.....	112
Figure 114: File Selection Window - Video.....	113

Figure 115: Send Video to Contact.....	113
Figure 116: Delete Confirmation Window.....	114
Figure 117: Record Voice message and Send.....	115
Figure 118: Send Recorded Voice Message.....	115
Figure 119: File Selection Window- Audio.....	116
Figure 120: Send Audio to Contact.....	117
Figure 121: Delete Confirmation Window.....	117
Figure 122: Choose Location Window.....	118
Figure 123: Share Location to Contact.....	118
Figure 124: Send Text Message to Quick Group.....	119
Figure 125: File Selection Window - Document - Quick Group.....	120
Figure 126: Send Document to Quick Group.....	120
Figure 127: Delete Confirmation Window.....	121
Figure 128: File Selection Window - Photo - Quick Group.....	121
Figure 129: Send Photo to Quick Group.....	122
Figure 130: Delete Confirmation Window.....	122
Figure 131: File Selection Window- Video- Quick Group.....	123
Figure 132: Send Video to Quick Group.....	123
Figure 133: Delete Confirmation Window.....	124
Figure 134: Record Voice message- Quick Group.....	124
Figure 135: Send Recorded Voice Message- Quick Group.....	125
Figure 136: File Selection Window- Audio- Quick Group.....	125
Figure 137: Send Audio to Quick Group.....	126
Figure 138: Delete Confirmation Window.....	126
Figure 139: Choose Location Window- Quick Group.....	127
Figure 140: Share Location to Quick Group.....	127
Figure 141: Send Text Message to Talkgroup.....	128
Figure 142: File Selection Window- Document- Talkgroup.....	129
Figure 143: Send Document to Talkgroup.....	129
Figure 144: Delete Confirmation Window.....	130
Figure 145: File Selection Window- Photo- Talkgroup.....	130
Figure 146: Send Photo to Talkgroup.....	131
Figure 147: Delete Confirmation Window.....	131
Figure 148: File Selection Window- Video- Talkgroup.....	132
Figure 149: Send Video to Talkgroup.....	132
Figure 150: Delete Confirmation Window.....	133
Figure 151: Record Voice message- Talkgroup.....	134
Figure 152: Send Recorded Voice Message- Talkgroup.....	134
Figure 153: File Selection Window- Audio- Talkgroup.....	135

Figure 154: Send Audio to Talkgroup.....	136
Figure 155: Delete Confirmation Window.....	136
Figure 156: Choose Location Window- Talkgroup.....	137
Figure 157: Share Location to Talkgroup.....	137
Figure 158: Sending Broadcast Message Confirmation Window.....	138
Figure 159: Send Text Message to Broadcast Group.....	138
Figure 160: Search Message- Individual and Conversation.....	139
Figure 161: Quick Text.....	139
Figure 162: Delete Conversation History.....	140
Figure 163: Delete Conversation Confirmation Dialog Box.....	140
Figure 164: Delete Single Text or Multimedia File.....	141
Figure 165: Delete Single Text or Multimedia File Confirmation Dialog Box.....	141
Figure 166: Forward Single Text or Multimedia File.....	142
Figure 167: Forward Message Selections Window.....	143
Figure 168: Forward Message Limitation Error Window.....	143
Figure 169: Forward Message to Contacts and Talkgroup Window.....	143
Figure 170: View and Download Received File.....	144
Figure 171: View Shared Geo Location of the Fleet Member.....	145
Figure 172: Export Conversation History.....	146
Figure 173: Export Message History Confirmation Pop up.....	147
Figure 174: Export Individual Message.....	147
Figure 175: Select Individual Message for Export.....	148
Figure 176: Export Individual Message Confirmation Pop up.....	148
Figure 177: Status Alert.....	149
Figure 178: Manual Record button.....	150
Figure 179: Play Back the Recorded File.....	151
Figure 180: Export Single Recorded File.....	152
Figure 181: Export Multiple Recorded File.....	153
Figure 182: Back up notification- Sign in.....	153
Figure 183: Back up notification.....	154
Figure 184: Backup file download- Confirmation message.....	154
Figure 185: Back up HTML file.....	155
Figure 186: Backup Now- Settings.....	155
Figure 187: Successful Outgoing IPA.....	157
Figure 188: Dispatcher Alerts window.....	157
Figure 189: One-to-one Missed Call Alert on Alerts.....	158
Figure 190: Talkgroup Missed Call Alerts on Alerts Window.....	158
Figure 191: Quick Group Missed Call Alerts on Alerts Window.....	159
Figure 192: Video Missed Call Alerts on Alerts Window.....	159

Figure 193: Geofence Alert.....	160
Figure 194: Emergency Alert.....	160
Figure 195: Status Alerts.....	161
Figure 196: Status Alerts Details.....	161
Figure 197: Actions on Alerts Window.....	162
Figure 198: Attended Status Alerts Window.....	163
Figure 199: Expiring Status Alert Window.....	163
Figure 200: Expired Status Alert Window.....	163
Figure 201: Multiple Selection Alerts Window.....	164
Figure 202: Multiple Selection Status Window.....	165
Figure 203: Emergency Alert.....	165
Figure 204: Talkgroup Scanning - Monitored Talkgroups Activity Window.....	166
Figure 205: Set Talkgroup Priority Icon.....	166
Figure 206: Turn on Talkgroup Scanning.....	167
Figure 207: Turn off Talkgroup Scanning.....	167
Figure 208: Dispatcher List Tray.....	168
Figure 209: Monitored Talkgroups Activity Window.....	169
Figure 210: Monitored talkgroup replacement confirmation.....	170
Figure 211: Single Contact Selected.....	172
Figure 212: Locating Fleet Member.....	173
Figure 213: Multiple Contacts Selected.....	173
Figure 214: Locating Multiple Fleet Members.....	174
Figure 215: Selected My Talkgroup.....	174
Figure 216: Locating My Talkgroup Members.....	175
Figure 217: Info Window.....	175
Figure 218: Fleet Members Selection Drag Option Window.....	176
Figure 219: Selection List Window.....	177
Figure 220: Single Contact selected.....	178
Figure 221: On-demand Location Request.....	179
Figure 222: On-demand Location Response.....	179
Figure 223: Single Contact Selected.....	180
Figure 224: Info window of a fleet member for location update.....	180
Figure 225: Periodic On Demand Location request.....	181
Figure 226: Find Location Window.....	182
Figure 227: Map Center.....	183
Figure 228: Map Mode.....	184
Figure 229: Satellite Mode.....	184
Figure 230: Terrain View Map Window.....	185
Figure 231: Traffic Color Code.....	185

Figure 232: Traffic View Map Window.....	186
Figure 233: 45 Degree Map-location.....	186
Figure 234: Street View Map Window.....	187
Figure 235: Hybrid View Map Window.....	187
Figure 236: Set Default Location.....	188
Figure 237: Collapsed - Spiderify.....	189
Figure 238: Expanded - Spiderify.....	189
Figure 239: Location History Tab.....	190
Figure 240: Track Location History.....	191
Figure 241: Playing Location History.....	192
Figure 242: Mouse Hover on Location History of Fleet Member.....	192
Figure 243: Geofence Tab.....	193
Figure 244: Create Geofence- Contacts and Talkgroups Window.....	194
Figure 245: Confirm Fence- Geofence.....	194
Figure 246: Create a fence Dialog Box.....	195
Figure 247: Geofence icon in Contacts and talkgroups Window.....	195
Figure 248: Remove Fence from the Favorites.....	196
Figure 249: Fence Information Window.....	197
Figure 250: Edit Fence Information.....	197
Figure 251: Fence Expired Error Message.....	198
Figure 252: Geofence Event Window.....	199
Figure 253: Initiate Video Streaming.....	201
Figure 254: Video Stream Confirmation Message.....	201
Figure 255: Video Stream Request Toast Notification.....	202
Figure 256: Video Streaming.....	202
Figure 257: Received Video Call Streaming Request.....	203
Figure 258: Received Talkgroup Video Call- Monitored Talkgroup.....	204
Figure 259: Video Streaming Paused.....	204
Figure 260: Area Talkgroup Tab.....	206
Figure 261: Search Location- Create Area Talkgroup.....	207
Figure 262: Change Radius- Area Talkgroup.....	208
Figure 263: Enter Details and Add Members- Area Talkgroup.....	208
Figure 264: Modifications Not Saves Confirmation Pop-up.....	209
Figure 265: View Members of the Area Talkgroup.....	209
Figure 266: Selecting a Talkgroup from Area Talkgroup.....	210
Figure 267: Area Talkgroup Slider.....	211
Figure 268: Add Members - Area Talkgroup Slider.....	211
Figure 269: Delete member from Area Talkgroup.....	212
Figure 270: Area Talkgroup Slider.....	213

Figure 271: Delete Area Talkgroup Confirmation Box.....	213
Figure 272: Activate User Check- Contacts and Talkgroups Window.....	215
Figure 273: User Check Information window.....	216
Figure 274: Ambient Listen.....	217
Figure 275: Ambient Listening Confirmation Pop-up.....	217
Figure 276: Ambient Listen- Call Activity Window.....	218
Figure 277: Discreet Listen.....	218
Figure 278: Discreet Listen Confirmation Pop-up.....	219
Figure 279: Discreet Listen- Call Activity Window.....	219
Figure 280: Ongoing call- Discreet Listen.....	220
Figure 281: Disable Fleet member Device.....	220
Figure 282: Disable Fleet Member Device Confirmation Pop-up.....	221
Figure 283: Contact Presence.....	222
Figure 284: Voice Message Fall Back Error Message.....	222
Figure 285: Self-presence.....	223
Figure 286: Outgoing IPA Error when in DND State.....	223
Figure 287: Audio Device notifications.....	224
Figure 288: Plantronics SSP 2753-01 Desktop PTT Microphone.....	226
Figure 289: Buddy Desktop Mic IST 10765 PTT Microphone.....	226
Figure 290: Slim Microphone/Speaker Station.....	227
Figure 291: Plantronics Headset for Dispatch.....	228
Figure 292: Plantronics Adapters for PTT Headset used in Dispatch.....	228
Figure 293: Buddy Desktop Headset Mic IST 10722 for Dispatch.....	228
Figure 294: IPT-M180Wide base Table Microphone.....	229
Figure 295: Plantronics USB PTT Foot switch for Dispatch.....	230
Figure 296: Foot Pedal FTT-300 USB.....	230
Figure 297: Foot Pedal Device Connected and Removed Information.....	230
Figure 298: Alert Logs.....	231
Figure 299: Call Logs.....	232
Figure 300: Broadcast Call Delivery Report.....	233
Figure 301: Video Logs.....	234
Figure 302: Audit Logs.....	235
Figure 303: Geofence Logs.....	236
Figure 304: Location Report.....	237
Figure 305: Location Information Report.....	238
Figure 306: Backup notification- Sign-in.....	239
Figure 307: Backup notification.....	239
Figure 308: Backup file download - Confirmation message.....	240
Figure 309: Backup HTML file.....	240

Figure 310: Backup Now - Settings.....	241
Figure 311: Dispatch Global Settings.....	242
Figure 312: Supported Features Info.....	243
Figure 313: Backup Information.....	243
Figure 314: Account Settings.....	243
Figure 315: Alert Settings.....	245
Figure 316: Recording Settings.....	246
Figure 317: Device Settings.....	246
Figure 318: Tones Settings.....	247
Figure 319: Notification Settings.....	248
Figure 320: Map Settings.....	249
Figure 321: Map Color Settings for Contact.....	249
Figure 322: Selected color push pin on map for contact.....	250
Figure 323: Map Color Settings for Talkgroup.....	250
Figure 324: Selected color push pin on map for Talkgroup.....	251
Figure 325: Map Color Settings for User in Multiple Talkgroup Member.....	252
Figure 326: Color Settings for Talkgroup.....	253
Figure 327: Default Color Settings for Talkgroup.....	254
Figure 328: Location Settings.....	255

List of Tables

Table 1: Dispatch Icons.....	51
Table 2: Avatars.....	67
Table 3: Dispatch Tones.....	67
Table 4: Supported Multimedia Formats.....	108
Table 5: Metadata.....	145
Table 6: Traffic Color Code.....	185
Table 7: Accessory Connection/Disconnection Notification.....	224
Table 8: Accessory Specification.....	225

List of Procedures

Enabling File download option	32
Cookies	34
Change Password	37
Forgot Password	37
Installing Dispatch Plug-in	41
Using Internet Explorer (IE) to sign in to Dispatch	43
Checking the add-on settings for Plug-in	44
Upgrading Dispatch Plug-in	46
Resetting the Layout	50
Adding Contacts to the Favorites	70
Removing Contacts from the Favorites	71
Adding Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup to the Favorites	72
Removing Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup from the Favorites	73
Creating My Talkgroups	78
Placing Call or Sending Message or Locating Members of a My Talkgroup	80
Removing Fleet Members from a My Talkgroup	81
Renaming a My Talkgroup	82
Adding Members to an Existing My Talkgroup	84
Deleting a My Talkgroup	85
Change Avatar of a Contact	86
Placing a Talkgroup Call	88
Placing a Quick Group Call	90
Placing a Broadcast Call	91
Placing an Area Talkgroup Call	93
Placing a One-to-one (1-1) Call	94
Placing a Call from the Alerts Window	95
Placing a Call from the Map	95
Placing a Call from the Selection List window on the map	96
Placing a Call from Call Logs	96
Placing a Call from Alert Logs	97
Placing a Call from Geofence Logs	98
Placing a Call from Message	99
Voice Message Fall Back	100
Initiate an Emergency	103
Received Emergency	105

Emergency Cancellation	106
Sending Message to a Contact	109
Sending document to a contact	109
Discarding the attached document	111
Sending a photo to a contact	111
Discarding the attached photo	112
Sending video to a contact	112
Discarding the attached video	114
Sending audio to a contact	114
Sending a pre-recorded audio file from your local PC	116
Discarding the attached audio	117
Sharing Location to a contact	117
Sending text message to a quick group	119
Sending file to a quick group	119
Discarding the attached document	120
Sending a photo to a quick group	121
Discarding the attached photo	122
Sending video to a quick group	122
Discarding the attached video	123
Sending audio to a Quick Group	124
Sending a pre-recorded audio file from your local PC	125
Discarding the attached audio	126
Sharing Location to a quick group	126
Sending text message to a talkgroup, follow these steps:	128
Sending file to a talkgroup	128
Discarding the attached document	129
Sending photo to a talkgroup	130
Discarding the attached photo	131
Sending video to a talkgroup	131
Discarding the attached video	133
Sending audio to a talkgroup	133
Sending a pre-recorded audio file from your local PC	135
Discarding the attached audio	136
Sharing Location to a talkgroup	136
Sending text message to a broadcast group	138
Quick Text	139
Delete Conversation History	140
Deleting text or multimedia message	141
Forwarding text or multimedia message	142

View and Download Received file	144
Exporting conversation history	146
Exporting individual message	147
Record Always	150
Record Manually	150
Playing Back the recorded calls	151
Exporting the Recorded Call Conversation	151
Exporting multiple call recordings	152
Backup- Call Recordings	153
Enabling Talkgroup Scanning for a Talkgroup	167
Adding a Talkgroup to a Monitored Talkgroup Activity	169
Removing a Talkgroup from the Monitored Talkgroup Activity Window	169
Replacing a Talkgroup from the Monitored Talkgroup Activity Window	170
Locating a Single Fleet Member	172
Locating Multiple Fleet Members	173
Locating Talkgroup Members	174
Performing a One Time Location Update of a Fleet Member	178
Starting a Periodic Location Update of a Fleet Member	180
Finding an Address	181
Centering the Map	182
Tracking the path of a fleet member on the map	190
Creating Geofence for a Talkgroup	193
Removing Fence coordinates from the Favorites	196
Editing fence	197
Deleting fence	198
Initiate Video Call (Video Stream Pull)	200
Talkgroup (when not scanned) or One-to-one video call	203
Talkgroup video call (when scanned in Monitored Talkgroup tab)	203
Creating Area Talkgroup	207
Call, Send Message or Locate or Refresh the location of an Area Talkgroup	209
Adding members to Area Talkgroup	210
Deleting Members of Area Talkgroup	212
Deleting Area Talkgroups	212
User Check	215
Ambient Listen	217
Discreet Listen	218
Remote Disable or Enable Fleet Member	220
Using a Desktop Microphone with PTT Button	226
Using a Headset	227

Using a Wide-base Table Microphone	229
Using a Foot switch	230
Location Report	237
Backing up	239
Account Settings	243
Map Settings	248
Setting the Default Color for a Talkgroup:	250
Setting a Color for a Common Member in Multiple Talkgroups	251
Setting a Color for a Talkgroup	252
Setting a Color to a Default Contact and Talkgroup Color for a Talkgroup	253

Chapter 1

Introduction and Key Features

The Dispatch is a feature-rich browser-based application that enables organizations to manage daily dispatch operations effectively.

Dispatch allows PTT calling, locating fleet members, secure messaging, video streaming, status alerts, user monitoring and, managing alerts, geofence, area talkgroup, view location history, manage emergency and indicates presence through an intuitive user interface. The dispatcher can sign in from wherever the Internet connectivity is available and manage the activities for a set of mobile PTT users (also called fleet members) working in the field. Dispatch enables an organization to effectively manage the day-to-day dispatch operations and rapidly respond to incidents, emergency situations, customer requests, facility events, and other situations that require quick actions.

1.1

What's New?

The following features are new in this release:

- Video stream to initiate and receive video calls to and from the fleet members.
- Drag and drop or cut and paste attachments in the secured messages.
- Preview and add text with the attachments in the secured messages.
- Export messages with or without attachments under the Message tab.
- Back up of messages (with the attachments) in addition to the previous call recording backup only.
- Receive status alert from fleet member and take appropriate actions.
- Enhanced Ambient Listening capabilities (maximum call duration and call reconnect).

1.2

Key Features

The following are brief descriptions of the key features of Dispatch:

Contacts and Talkgroups

Contacts are also referred as fleet members. The dispatcher can establish a one-to-one call or send and receive Instant Personal Alert (IPA) to or from a contact. A dispatch talkgroup allows one-to-many calls from the dispatcher to fleet members. Central Admin Tool (CAT) administrator manages the Contacts and talkgroups for a Dispatch. The dispatcher can assign most frequently used contacts and talkgroups to Favorites and can create My Talkgroup from Contacts and Talkgroups tab.

For more details, refer to [Contacts and Talkgroups on page 69](#) Section.

PTT Calling

Enables dispatcher to start or end a Push-to-Talk (PTT) call, record a conversation, and see the talker identity. The Dispatch shows call activities during the call. The dispatcher can export and take backup of the details of call recordings in local PC.

For more details, refer to [PTT Calls on page 88](#) Section.

Instant Personal Alert

Allows dispatcher to send and receive an alert to and from a fleet member as a request to call back. Dispatcher can send and receive an IPA, when the dispatcher is in the Available state. Dispatcher can send an IPA only to a fleet member whose presence status is "Available" or "Busy (DND)". Dispatcher can send an IPA only to a single contact and does not allow sending to a group.

For more details, refer to [Instant Personal Alert \(IPA\) on page 157](#) Section.

Locate

Allows dispatcher to locate the fleet members on the map. The dispatcher can locate multiple contacts or individual talkgroup at a time.

For more details, refer to [Using the Map on page 172](#) Section.

Integrated Secured Messaging

Allows dispatcher to text, share multimedia content (Audio, file, image, and video) of supported formats and of specified sizes, and share location as an attachment to contacts and talkgroups.

For more details, refer to [Integrated Secured Messaging on page 108](#) Section.

Broadcast Calling

Allows a designated broadcaster to make high-priority one-way calls typically used for making important announcements.

For more details, refer to [PTT Calls on page 88](#) Section.

Monitored Talkgroups

Allows dispatcher to monitor up to 16 active talkgroups, join an existing active talkgroup call or initiate a new talkgroup call, can locate and send message to all talkgroup members and view the information of all the dispatchers in the talkgroup.

For more details, refer to [Monitoring Talkgroups on page 169](#) Section.

Talkgroup Scanning

Allows communicating with a talkgroup that dispatcher monitors. Whenever a call is active on a talkgroup within the scan list, the dispatcher automatically joins and can take the floor, if desired.

When the current call ends, the dispatcher joins the next active call in progress from the scan list.

For more details, refer to [Talkgroup Scanning on page 166](#) Section.

Map

Provides visual location information of the fleet members in the field and provides an option to allow dispatcher to make PTT calls or send message or send alerts to those fleet members, directly from the map.

For more details, refer to [Using the Map on page 172](#)Section.

Geofence

Allows dispatcher to assign an imaginary boundary to talkgroup on the map. When a fence is set for a talkgroup, the dispatcher and fleet member receives notification, whenever that fleet member crosses the fence.

For more details, refer to [Geofence on page 193](#) Section.

Location History

Allows dispatcher to track the path which fleet member has traversed on the map in a specified duration. The dispatcher can select the fleet member and the duration to track their path.

For more details, refer to [Location History on page 190](#) Section.

Presence

Availabilities for fleet members display on the Dispatch as presence. In addition, the fleet members who have the dispatcher as a contact can see the presence of the dispatcher. Presence status includes "Online", "Do Not Disturb", and "Offline".

For more details, refer to [Real-Time Presence on page 222](#) Section.

Avatar

Allows dispatcher to change the profile picture of a contact from the list of avatars available in the Dispatch. By default, all contacts have an avatar assigned.

For more details, refer to [Avatars on page 67](#) Section.

Voice Message Fall Back

Allows automatically record and deliver as a voice message, when the dispatcher attempts to make a PTT call and the call initiation fails because of all members in DND state or offline or busy or temporarily unreachable.

Alerts

Allows dispatcher to view and act on Instant Personal Alerts (also known as IPA or call-me alerts), Missed call alerts, status alerts, and Geofence alerts that fleet member sends.
For more details, refer to [Alerts on page 157](#) Section.

Logs

Provides information about dispatcher recent activity on the Dispatch including alerts, PTT calls, audit logs, location reports, geofence logs, video logs, and audio recordings of recorded calls.
For more details, refer to [Logs on page 231](#) Section.

Map Settings

Allows dispatcher to assign colors for the Contacts, Talkgroups, and Common members between talkgroups for easy recognition of the located member on the map.
For more details, refer to [Map Settings on page 248](#) Section.

Location Settings

Allows dispatcher to select the durations of the contacts or talkgroups location, on demand, geofence, and location history. It also allows the dispatcher to set the distance of fence for tracking the member.

Location

Allows dispatcher to select the expiry period of a member on the map.

On-demand Location Update Interval Settings

Provides the location information of fleet members listed under contacts on the dispatcher demand at variable intervals. On-demand location offers the following types of location information retrieval for fleet members:

On-demand Location Period Settings

Enables dispatcher to select one or more fleet members and access their current location information.

Geofence Settings

Allows dispatcher to set the frequency at which the update notification is shown when the members are tagged with geofence. It also allows the dispatcher to set the distance and period to which fence is applicable for the members.
For more details, refer to [Settings on page 242](#) Section.

Area Talkgroup

Allows a dispatcher to create a talkgroup with fleet members on the map. The dispatcher can call, send message (text, image, video, document, and location) to the area talkgroups. For more details, refer to [Area Talkgroup on page 206](#) Section.

User Monitoring

Allows a designated dispatcher to monitor the current situation of a member who is not responding to dispatcher calls, IPAs, and messages. The dispatcher then can activate user check, ambient listening, and discreet listening to collect information of that member.

User Check

When the dispatcher selects user check, they can view information like the location of the member, presence status, battery status, emergency state, and signal strength of Wi-Fi or LTE on their device. For more details, refer to [User Check on page 215](#) Section.

Ambient Listening

Allows dispatcher to activate the device Mic remotely and allows the dispatcher to listen to the surroundings of the member without knowing them and then take necessary actions like remote emergency and enable or disable the device. For more details, refer to [Ambient Listen on page 217](#) Section.

Discreet Listening

Allows the designated dispatcher to listen to any call to and from the selected member without knowing them. For more details, refer to [Discreet Listen on page 218](#) Section.

Disable or Enable User

Allows a designated dispatcher to remotely disable a specific device of a member. The disabled device of the member is no longer have access to PTT and other services until enabled. For more details, refer to [Remote Disable or Enable Fleet Member on page 220](#) Section.

Emergency Call

Allows dispatcher to initiate on behalf of the fleet member and participate in the call if there is any life-threatening situation. The emergency calls in nature are always the top priority and preempt any ongoing call except another ongoing emergency call. For more details, refer to [Emergency on page 103](#) Section.

Video Streaming

Allows dispatcher to initiate video streaming on the device of the fleet member. Dispatcher can request (confirmed pull) or demand (unconfirmed pull) fleet member for video streaming. If fleet members initiate the video stream, a dispatch shows a toast message to accept or reject the video stream. For more details, refer to [Video Streaming on page 200](#) section.

Status Alerts

Allow dispatcher to receive status message from the fleet member and to know their quick status such as on-duty, on-route, busy, at-incident, off-duty. For more details, refer to [Status Alerts on page 149](#) Section.

Backup and Export

Allows dispatcher to take the backup of call recordings and secured messaged including the attachments along with its details. For more details, refer to [Status Alerts on page 149](#) Section.

Chapter 2

Hardware and Software Prerequisites

This chapter provides minimum hardware and software requirements for the Dispatch.
The Dispatch does not require administrator privileges for sign-in or usage.

2.1

Hardware and Network Requirements

The following are the minimum hardware and operating system that is required for the Dispatch.

- Processor: 2.1 GHz (minimum) Intel Core i5 or above
- RAM (Recommended): 8 GB (minimum)
- A standard sound card supporting a headset and speaker
- 2+ Mbps Data Connectivity



NOTICE:

Dispatch does not support touch events on touchscreen devices.

If streaming video feature is enabled for the dispatcher, then a minimum of 8+ Mbps data connectivity is required.

2.2

Software Requirements

Following are the software requirements for Dispatch:

- Windows 8.1/10 Pro or Enterprise 32-bit version
- Windows 8.1/10 Pro or Enterprise 64-bit version

2.3

Browser Requirements

Following are the supported browsers for the Dispatch:

- Internet Explorer (IE) 11
- Chrome 45 or higher



NOTICE: “InPrivate browsing” and “Enable Enhance Protected Mode” is not supported on Internet Explorer (IE).

For Internet Explorer (IE), the compatibility view is not supported.

An error message displays if you try to access the Dispatch on the browsers other than the previously mentioned.

If any of the previously mentioned browsers do not support the Plug-In (NPAPI) and Extension in the future, then the Dispatch may not work.

If you try to access the Dispatch on the OS other than previously mentioned OS, then the Dispatch may not load and you cannot operate Dispatch. Dispatch does not support Video Streaming feature in Internet Explorer (IE).

2.4

Ensuring Correct Display of the Website

To view the Dispatch application correctly, make sure that you configure the website setting as explained here.

Enabling pop-ups

Some of the Dispatch related links open in the new browser window. Make sure that you enable browser pop-ups to access those links.

Reset Zooming

To display the Dispatch properly, make sure that the browser you are using has a zoom setting of 100%. To reset the zoom to 100%, press CTRL+0 (zero) on your keyboard.

2.5

Network Requirements and Settings

The minimum network requirement needed is 2+ Mbps Data Connectivity. To avoid the network failure-related issues while using Dispatch, open the firewall settings for the following IP categories in Port 80, 8080 and 443 for outbound traffic.

- The range of subnetted IP address belongs to Production Server set up
- The range of subnetted IP address belongs to Production Geo set up
- The range of subnetted IP address belongs to load balance server of the Production Server set up
- The range of subnetted IP address belongs to load balance server of the Production Geo set up.



NOTICE: The ports 443 and 80 must be open to both install plug in and launch the Dispatch. To establish a connection with the PTT server, the dispatch does not support authenticated HTTP/SOCKS proxies. The communication path between Dispatch and the PTT server uses a TLS connection.

Firewall and Proxy should be set up correctly for server IPs and port 443, 8080. If you have not verified your firewall or proxy settings, you may end up with an Unsuccessful sign in or Activation Failure error or network down error. File download must be enabled in Internet Explorer.

2.5.1

Enabling File download option


When and where to use: To check or enable the File download option, follow these steps from the Internet Explorer menu:

Procedure:

- 1 Click **Tools** → **Internet Options** → **Security**.
- 2 Click **Custom level**.

On the Settings work area, scroll down to Downloads and ensure that the File download option is enabled as shown.

Figure 1: Internet Explorer File Download Enabled Option

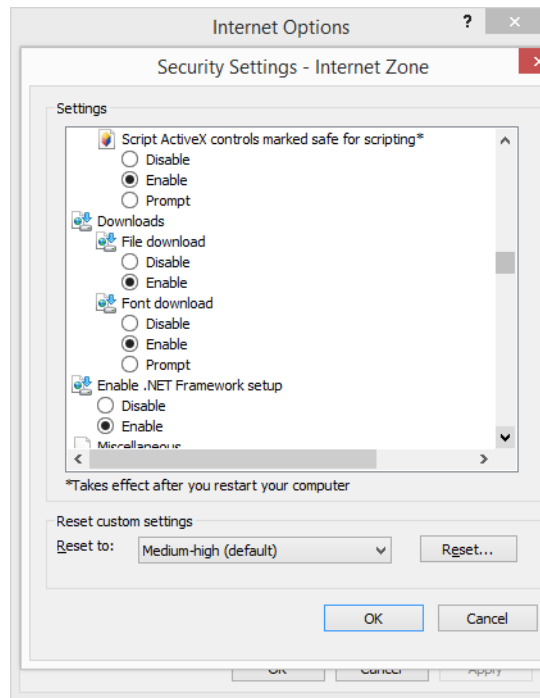

Chapter 3

Getting Started


When the corporate administrator creates a dispatch account with a user ID (email ID) for you, you receive an email in your registered email ID to choose a password and continue to sign in. Dispatch does not require administrator privileges for installation or usage.

3.1

Signing in to Dispatch

To get access to the Dispatch, click the link received in the registered email ID.


Figure 2: Sign in Mail

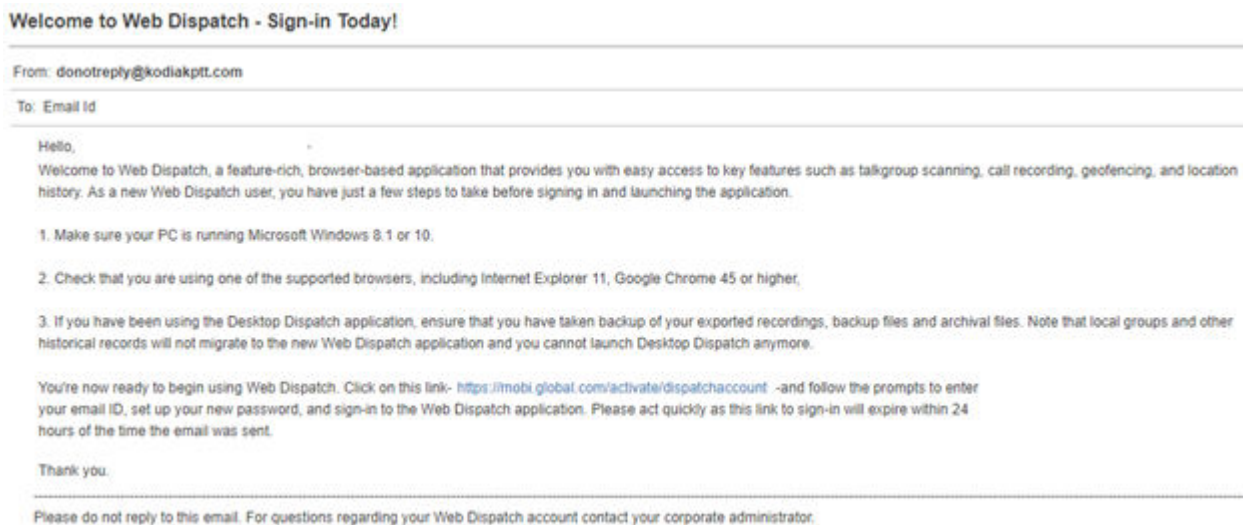

When you click the link, a cookie page displays. Select your preferences. A choose password page to choose the password displays. The password must meet the minimum requirements of password policy of Dispatch. If the passwords chosen do not match the password specification, then an error displays. The password must meet the following minimum requirements:


- 1 Six characters
- 2 One lower case letter between a to z
- 3 One upper case letter between A to Z
- 4 One number between 0 to 9
- 5 One of these special characters @#\$\$%^&+=

Figure 3: Choose Password

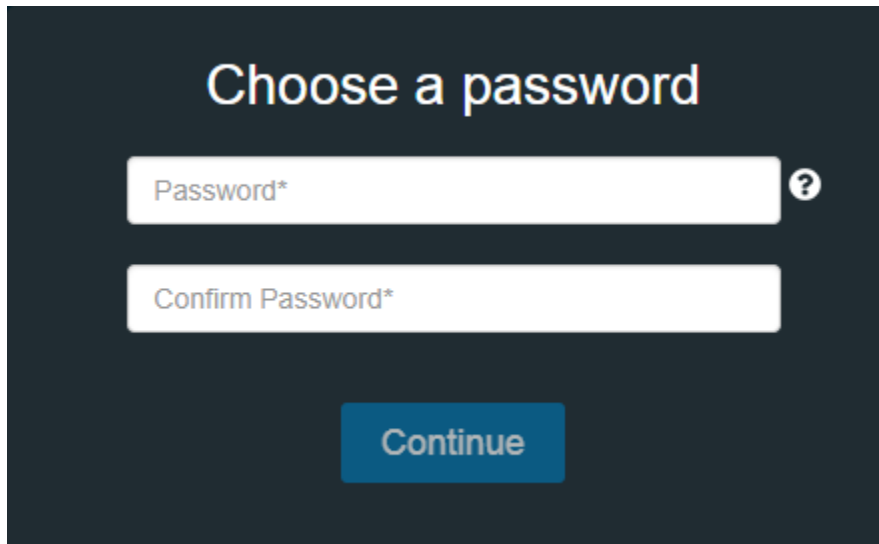

Once you choose the password, click **Continue**.

Figure 4: Sign In Page

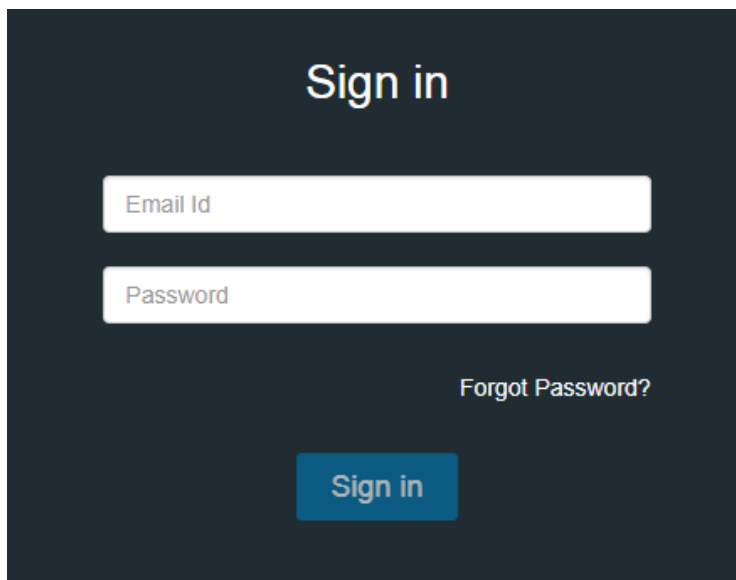

Enter the sign-in credentials and follow the steps to install the Dispatch Plug-in. For more information, refer to [Install Dispatch Plug-in on page 41](#) section of this document.

3.2

Cookies

Whenever you sign in to the Dispatch, a pop-up block displays to choose your browser preferences. When you sign in to Dispatch in a browser, that uses cookies; it remembers your registered sign-in password details and language preferences. It is mandatory to accept the cookies to use Dispatch.

When and where to use: To choose your browser preferences, follow these steps:

Procedure:

From the cookies page

- Click **OK** to remember the browsing cookies.
- Click “**What are cookies?**” to know about the cookies used by Motorola

3.3 End User License Agreement

When you sign in to the Dispatch, an End User License Agreement (EULA) window displays. Review the terms of the license agreement. If the Dispatch supports any other language, you can change from the Language drop-down in the EULA window. To continue use of the Dispatch, agree on the terms of the license agreement.

While you are signed in to the Dispatch and if there is any change in the EULA, the EULA window pops-up.

3.4 Take a Tour


Take a tour shows the basic features and demo of the application. A Take a Tour page displays when you sign in to the Dispatch. Clicking **View Tour** takes you to the basic operation of the Dispatch. Use the Next icon to view the demo and their introductions. You can click the **Close** icon to cancel the Take a Tour view.

If you do not want Dispatch to display the Take a Tour page, whenever you sign in, then select the check box “Don’t show again” and click the **Close** icon.

3.5 Desktop Notifications

Desktop notifications notify you for any alerts that you receive from the fleet members. A “Show notification” pop-up displays as shown when you sign in to the Dispatch for the first time.


Figure 5: Desktop Notification

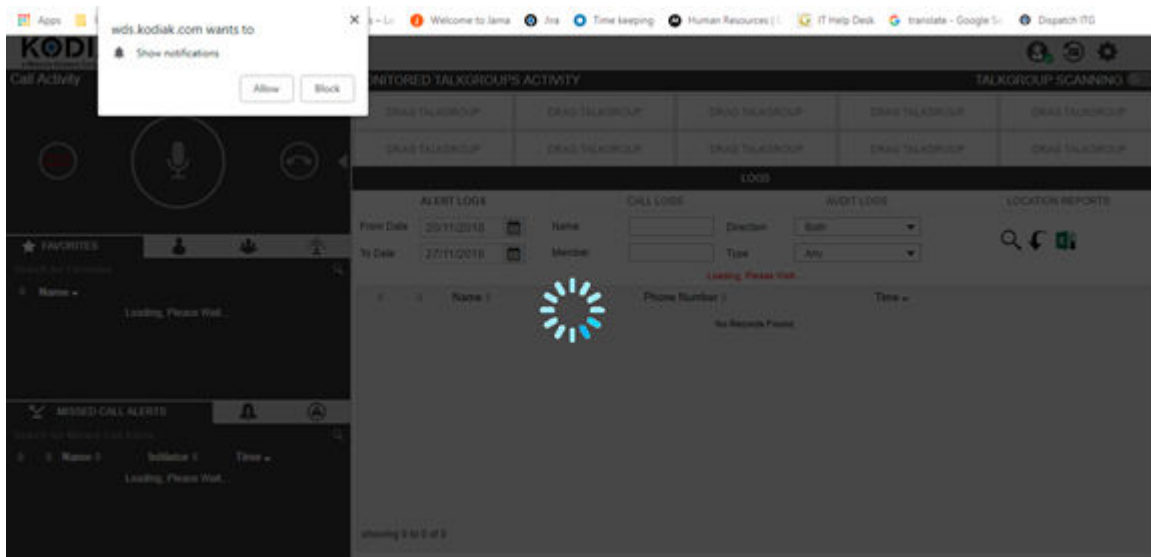

If you choose Allow or Block, the desktop notifications are either shown or blocked respectively, when your Dispatch browser is in minimized mode or not on the active tab. You can also choose to stop the

desktop notification from the [Settings on page 242](#) in the Dispatch. A sample screen shows the incoming call. Similar notifications are shown for incoming messages, alerts, and alert reminders.


Figure 6: Desktop Notification - Incoming Call Alert

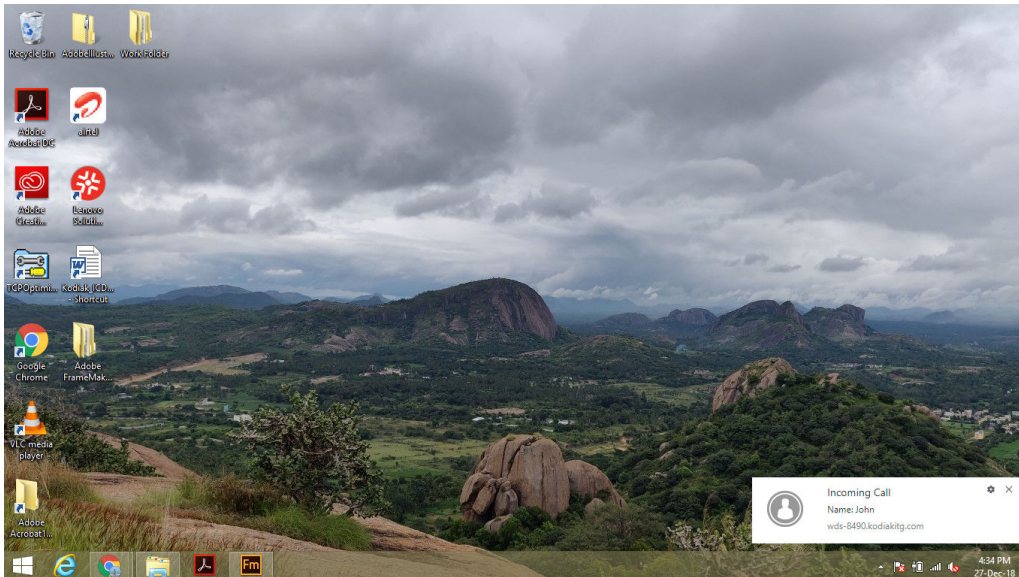


3.6 **Signing out from Dispatch**

To sign out from the Dispatch, click the **Sign Out** button by clicking **Dispatcher** profile on the top right-hand corner of the Dispatch header.

Figure 7: Sign out

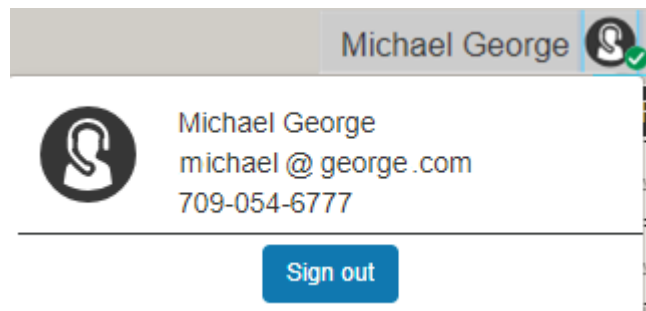

 **NOTICE:** If during an ongoing call you try to sign out from the Dispatch, a confirmation message stating, "Call is in progress. Confirm Sign out" displays.

At the time you are signed in to the Dispatch and if your user ID has been changed from the Central Admin Tool then, Dispatch signs out forcefully. A message displays as "Your user ID has been changed and hence forcefully logged out. Verify your account and sign in with the new User ID.". You receive an email in your newly registered email ID with a link to verify the account. Refer to the "Signing in to Dispatch" section of this document and follow the procedure.

3.7 **Password Management**

The password management allows you to change or reset the sign-in password of your Dispatch.

3.7.1


Change Password

You can change the password anytime while you are signed in to Dispatch from the Account Settings. To change the password from the Settings, follow these steps:

Procedure:

- 1 Click the **Setting** icon in the header. A Setting window opens below the Monitored Group Activity window.
- 2 Click the **Account** tab.
- 3 Enter the current password.
- 4 Enter the new and retype the password in the box.

Figure 8: Change password

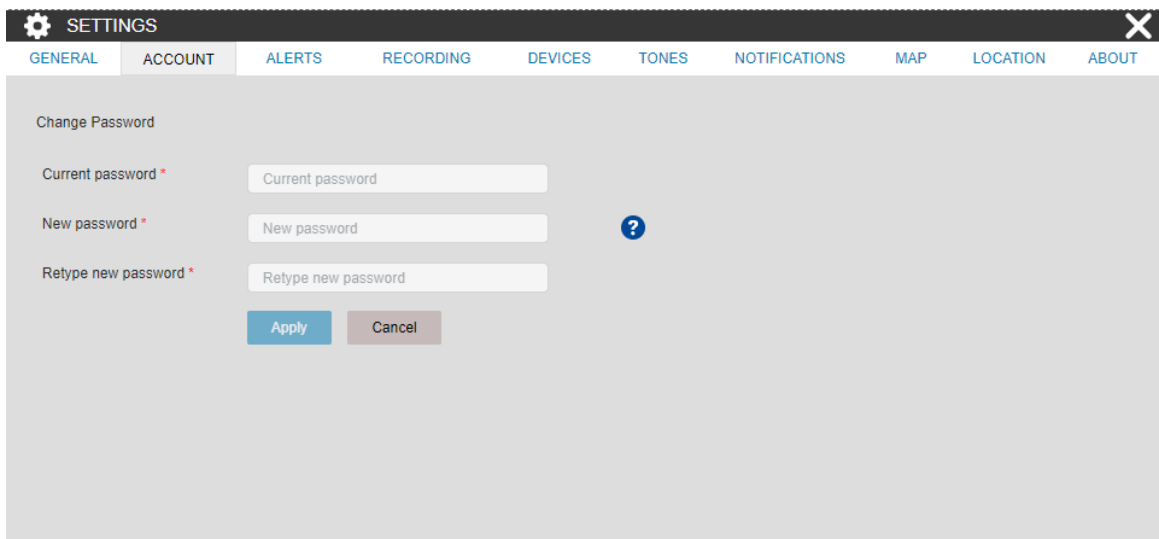

The screenshot shows a 'SETTINGS' window with a close button (X) in the top right corner. Below the title bar is a navigation menu with tabs: GENERAL, ACCOUNT, ALERTS, RECORDING, DEVICES, TONES, NOTIFICATIONS, MAP, LOCATION, and ABOUT. The 'ACCOUNT' tab is selected. The main content area is titled 'Change Password' and contains three input fields: 'Current password *', 'New password *', and 'Retype new password *'. Each field has a placeholder text matching its label. To the right of the 'New password *' field is a blue question mark icon. At the bottom of the form are two buttons: 'Apply' (blue) and 'Cancel' (grey).

- Click **Apply** to change the password
- Click **Cancel** to cancel the action.

3.7.2


Forgot Password

If you have forgotten your password, then you can reset it by clicking the “Forgot Password” link on the sign-in page of the Dispatch. To reset the password, follow these steps:

Procedure:


- 1 From the sign-in page of Dispatch, click **Forgot Password**.

Figure 9: Forgot password

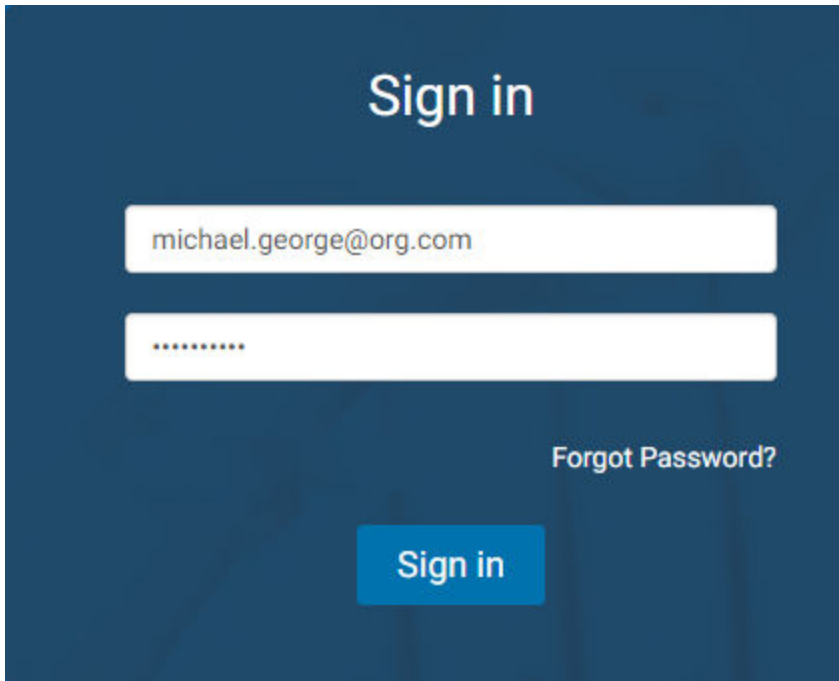


- 2 Enter the email ID associated with your account in the dialog box.

Figure 10: Enter Registered Email ID - Forgot Password

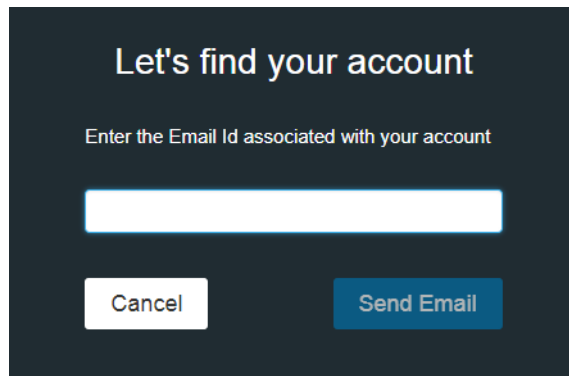

- 3 Enter the registered email ID and click **Send Email**.
- 4 If you did not receive the mail, click **Send it again**.
- 5 Click the link received in your email ID.
- 6 To reset the password, enter the new password.

Figure 11: New Password Window- Forgot Password

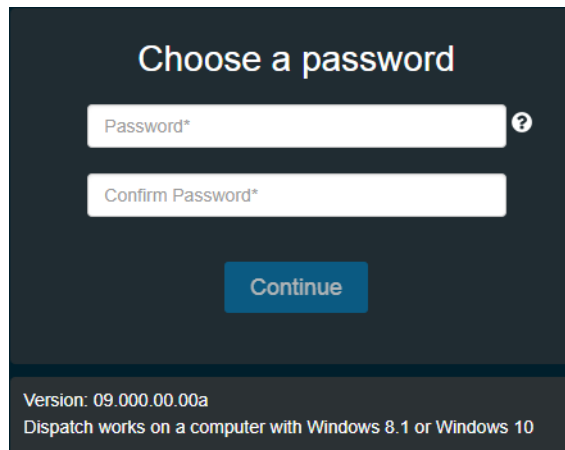

The screenshot shows a dark-themed window titled "Choose a password". It contains two white input fields: "Password*" with a question mark icon to its right, and "Confirm Password*". Below the fields is a blue "Continue" button. At the bottom of the window, there is a footer with the text: "Version: 09.000.00.00a" and "Dispatch works on a computer with Windows 8.1 or Windows 10".

- 7 Sign in to Dispatch with the new password.

3.7.3

Reset Password


If you have forgotten your dispatch account sign-in password, then the corporate admin can reset. A reset password link is sent to your registered email ID. To reset the password, click the link and follow the steps.

3.8

Blocked Account

If you attempt to sign in to Dispatch with wrong passwords more than three times then your account can be blocked temporarily.

Figure 12: Account Blocked- Multiple Password Attempt Fail

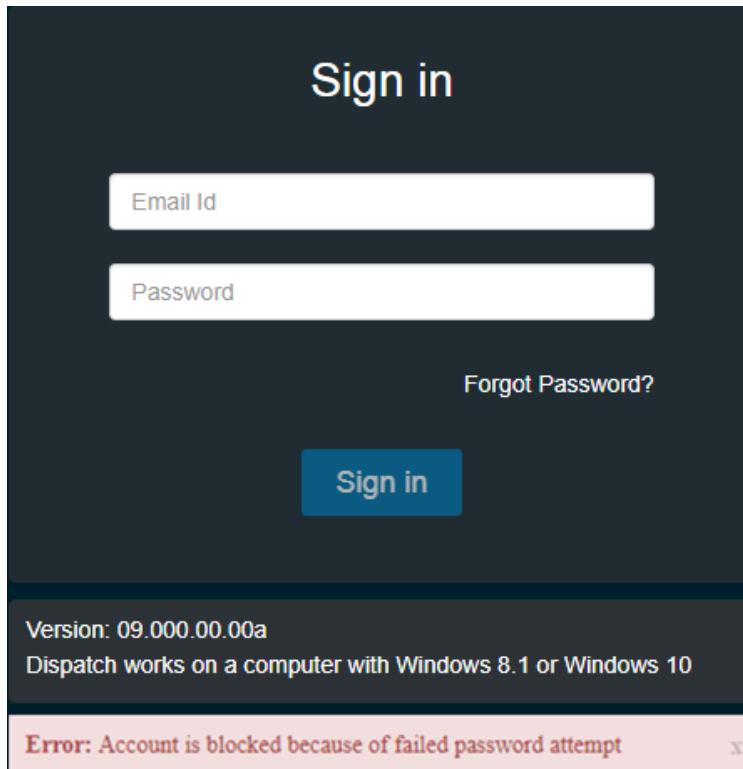


To unblock the account, click [Forgot Password on page 37](#), or contact your administrator.

3.9

Dispatcher Signing in More than One Session

When you try to access the Dispatch with an already active sign-in session, then a dialog box displays with a text "You are already signed in from a different computer. Proceeding here sign out all other instances. Would you like to proceed?". Click **Proceed** to sign out the existing active session and sign in to new session. Click **Cancel** to cancel the action.

Figure 13: Sign in More Than One Session Pop-up

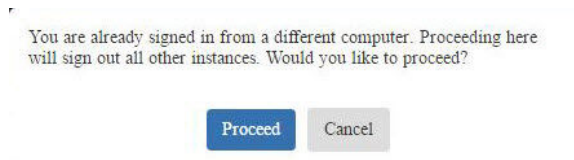

Chapter 4

Dispatch Plug-in

A Dispatch Plug-in is required to sign in and access the Dispatch.

4.1

Install Dispatch Plug-in

Install Dispatch Plug-in on your windows PC to use the Dispatch.

4.1.1


Installing Dispatch Plug-in

When and where to use: To Install Dispatch Plug-in, follow these steps:

Procedure:

- 1 Enter the sign-in credentials and click **Sign in**.

Figure 14: Dispatch Sign In Page

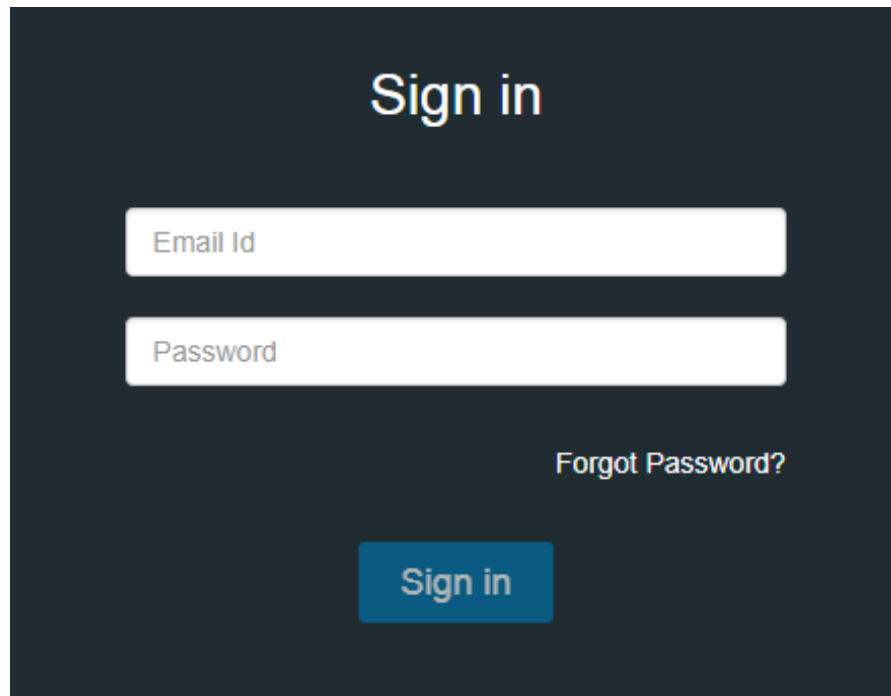


On sign-in, dispatch asks you to install Dispatcher Plug-in and add Dispatcher Plug-in extension to the browser.

In your Chrome browser, follow these steps:


An Add Chrome Extension pop-up block displays.

Figure 15: Add Chrome Extension

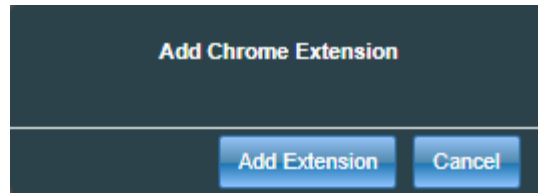


- 2 Click **Add Extension** to add the Dispatcher Plug-in extension to your chrome browser. If you do not want to add the extension, click **Cancel** to cancel.
- 3 Clicking **Cancel** shows an error as shown.

Figure 16: Add Extension Error

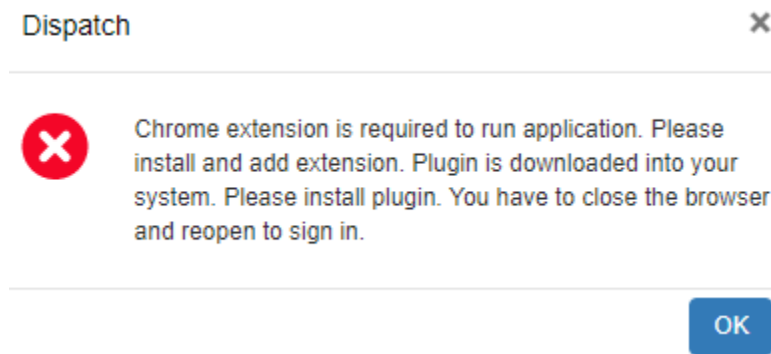


- 4 Clicking on **Yes** opens a new tab that adds the Dispatcher Plug-in extension to the chrome browser. At the same time, the Dispatcher Plug-in file download starts.

Figure 17: Add Extension to Chrome

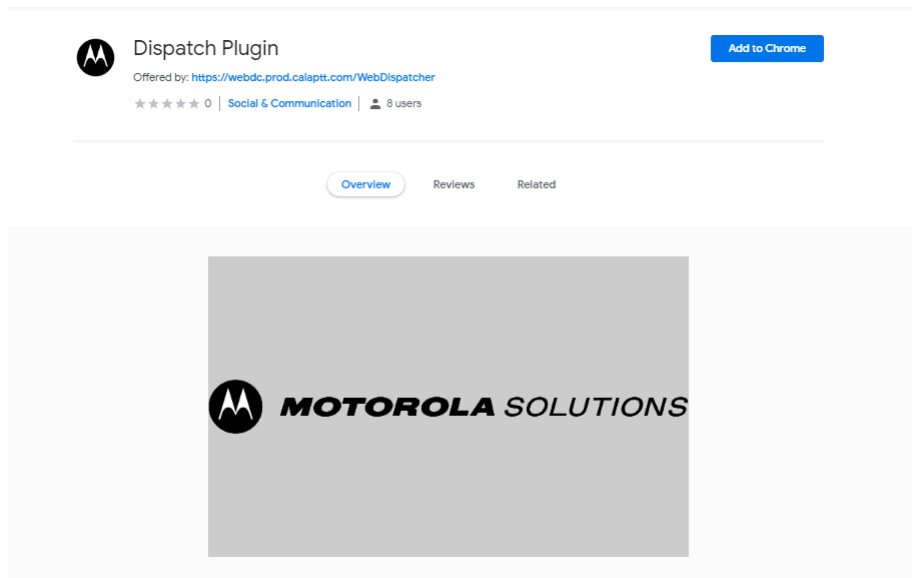

- 5 Click **Add to Chrome**. An “Add Dispatcher Plug-in” pop-up block opens.
- 6 Click **Add extension**.


Figure 18: Add Extension Pop-up Block

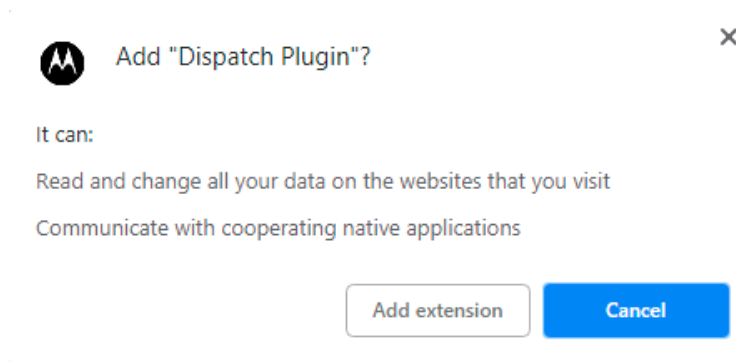

7 A success message displays.

Example:

Figure 19: Extension Added to the Chrome

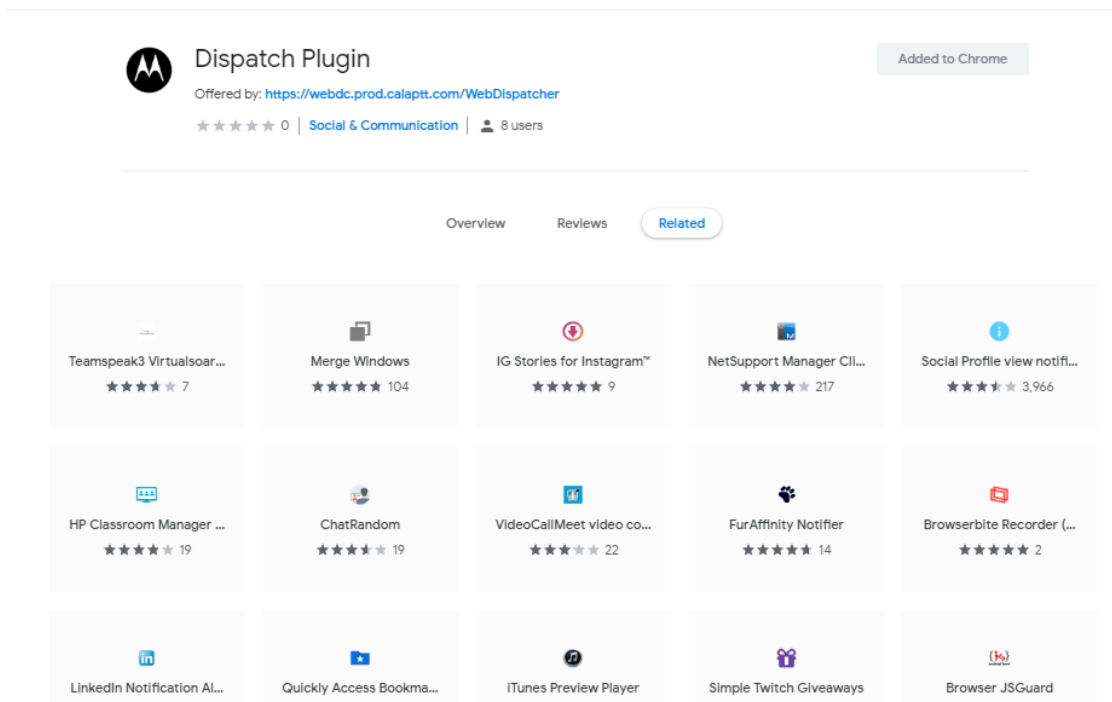

Extension Added to Chrome




NOTICE: Make sure that you do not use the browser in “Incognito mode” of the chrome when accessing the Dispatch for the first time.

4.1.2

Using Internet Explorer (IE) to sign in to Dispatch

When and where to use: If you are using Internet Explorer (IE) to sign in to Dispatch, follow these steps:

Figure 20: Add Plug-in pop-up block- IE

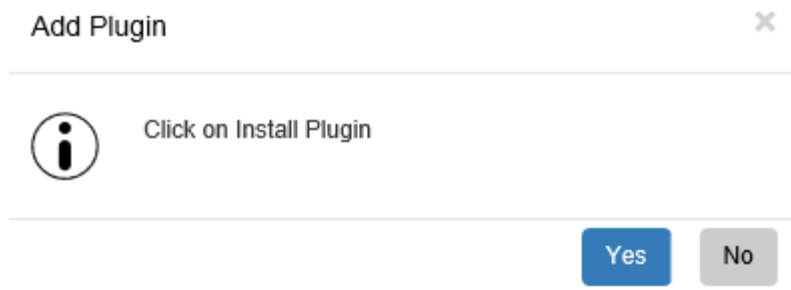

Procedure:

- 1 An Add Plug-in pop-up block displays.
- 2 Click **Yes** to install the Plug-in.
If you do not want to install the plug-in, click **No**.
- 3 A confirmation message with a pop-up block displays asking you to run or save the installer file into your windows PC. Run the installer file once downloaded and saved.



NOTICE: Make sure that the Internet Explorer add on for the “WAVEDispatch Plug-in” is enabled.

Make sure that Java Script is enabled in the Internet Explorer.

4.1.3

Checking the add-on settings for Plug-in

When and where to use: To check the add-on settings, do the following:

Procedure:

- 1 In the Internet Explorer, click the **Settings** icon.
- 2 Select the **Manage add on** options.
- 3 In the Manage Add on window, check the status of the “Dispatch Plug-in.”
If the Plug-in status is disabled, right-click and change the status to enable.
Run the installer file once downloaded or saved to the local PC.

Figure 21: Dispatch Plug-in Setup


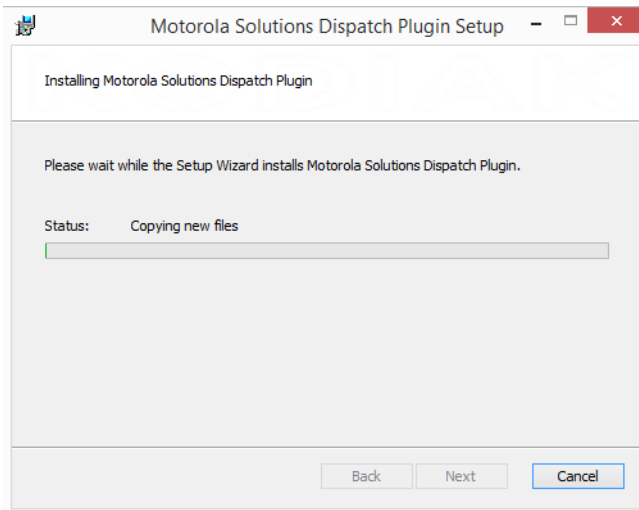


Figure 22: Dispatch Plug-in Installer

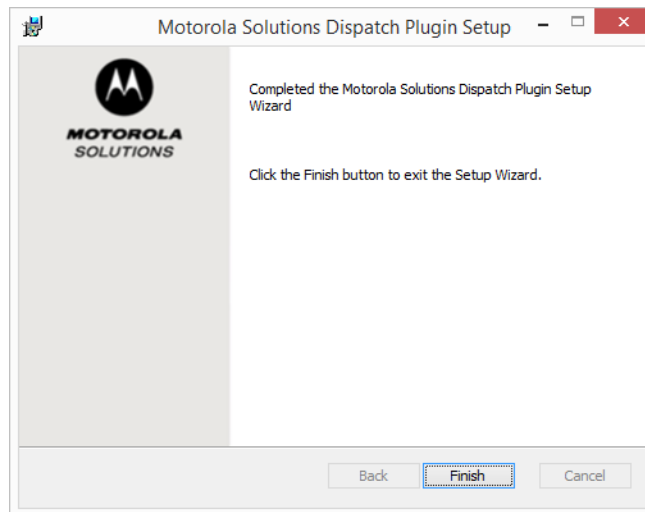

4 Click the **Finish**.

4.2

Uninstall Dispatch Plug-in

You can uninstall the Dispatch plug-in from your PC.

To uninstall the Dispatch Plug-in, follow these procedures:

From the Control Panel

If you are using Windows 8.0/8.1:


Click **Control Panel** → **Programs** → **Programs and Features**.

If you are using Windows 10:

Click **Start** → **Control Panel** → **Programs** → **Uninstall a program**.

Select Dispatch Plug-in and click **Uninstall**.

Figure 23: Uninstall Dispatch Plug-in

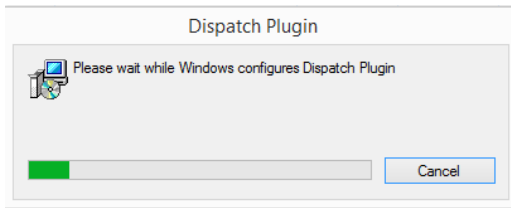

NOTICE: The Dispatch Plug-in is mandatory for the Dispatch to operate.


4.3

Upgrading Dispatch Plug-in

When an updated version of Dispatch Plug-in is available, a pop-up block appears on your monitor screen informing you that an upgrade is available as shown.

When and where to use: To upgrade the Dispatch plug-in, follow these steps:


Figure 24: Dispatch Plug-in Upgrade Notification

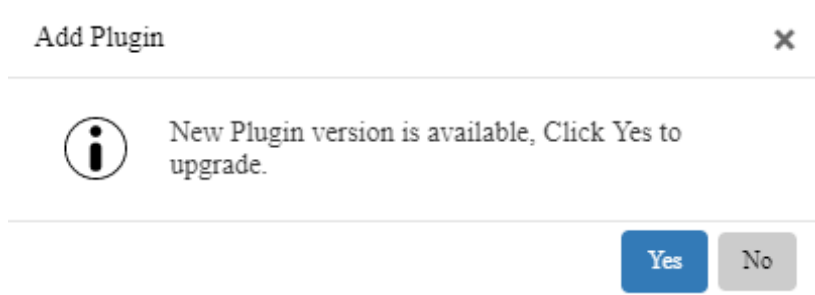

Procedure:

- 1 Click **Yes** to start the Dispatch Plug-in upgrade process. A pop-up block appears to indicate that Plug-in is downloaded. Click **OK**.

Figure 25: Dispatch Plug-in upgrade Confirmation

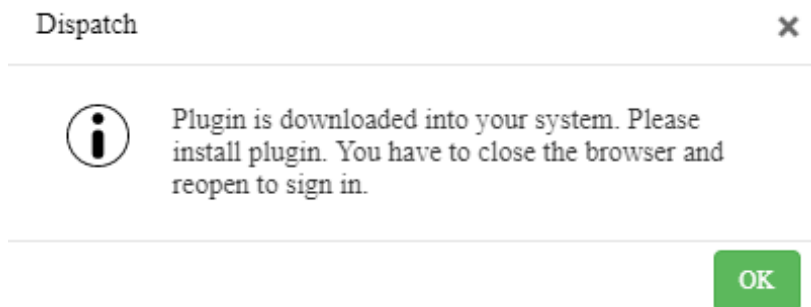

- 2 Clicking **No** shows an error message “Latest Plug-in is required to run application. Install Plug-in” and you cannot sign in until the latest dispatch Plug-in is installed.


Figure 26: Dispatch Plug-in Upgrade Error Dialog Box



NOTICE: Close the Dispatch sign in browser tab before you run the Dispatch Plug-in installer file.


- 3 Run the installer file once downloaded and saved.

Figure 27: Dispatch Plug-in Setup

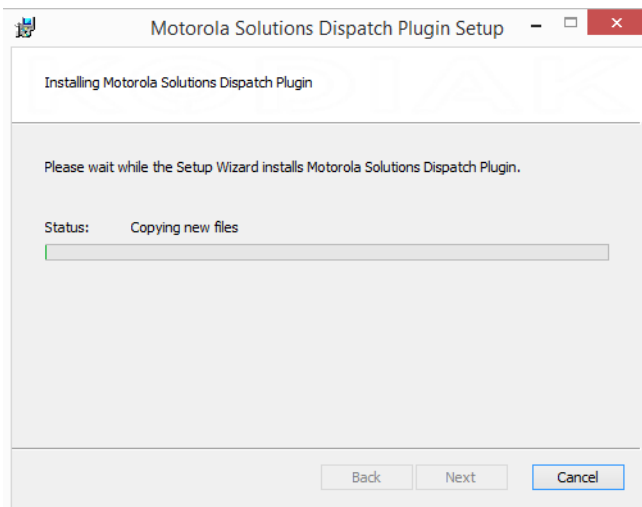

- 4 Click the **Finish**.

Figure 28: Dispatch Upgrade Plug-in Installer

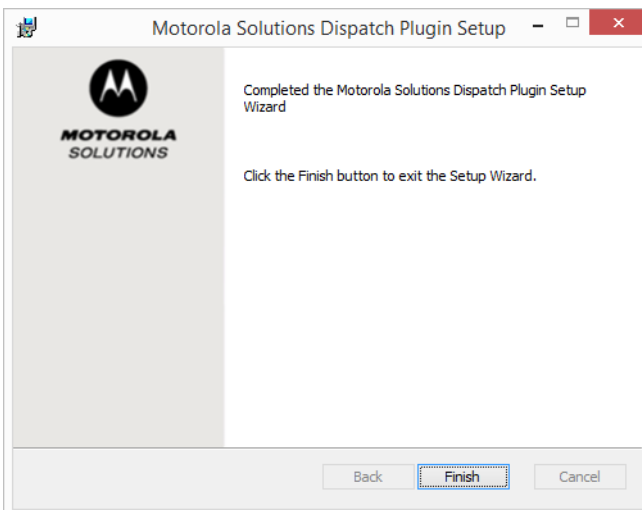

- 5 Sign in to the Dispatch with your credentials.

Chapter 5

Navigating the Dispatch

This section helps you get familiar with how to navigate the Dispatch.

5.1

Navigation Areas

The Dispatch consists of the following major navigation areas (also called windows):

- Alerts
- Area Talkgroups
- Call Activity
- Contacts and Talkgroups
- Geofence
- Location History
- Logs
 - Alert logs
 - Activity Logs
 - Call logs
 - Geofence Logs
 - Location Reports
 - Video Logs
- Maps
- Messages
- Monitored Talkgroups Activity
- Settings
 - About
 - Account
 - Alerts
 - Devices
 - General
 - Map
 - Default Color Settings
 - Manage Talkgroup Color Settings
 - Auto Zoom
 - Location
 - Geofence
 - On-demand Location Settings
 - Location Expiry
 - Map Center


Area Talkgroup Radius

Use Google Map for Location History traversed path

- Notifications
- Recordings
- Tones

The following screen shot points to each of the major areas on Dispatch:

Figure 29: Dispatch Layout

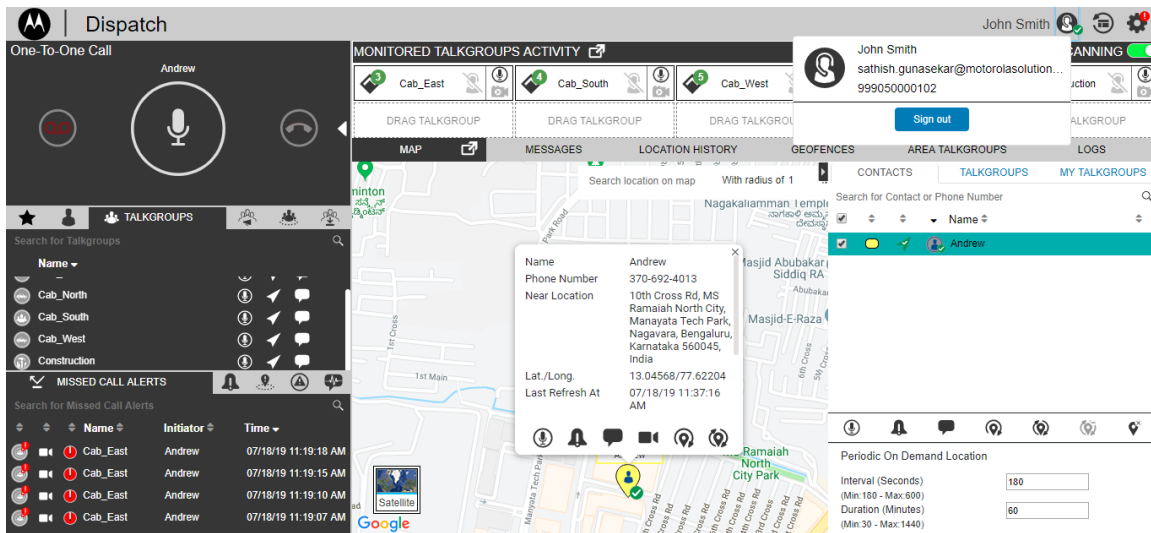


5.2

Docking/Undocking

You can dock or undock the Dispatch window. When you dock a window, it is part of a larger window. You can move an undocked window around the screen or even drag onto another display monitor.

The following figure shows that all windows docked:

Figure 30: Docked window

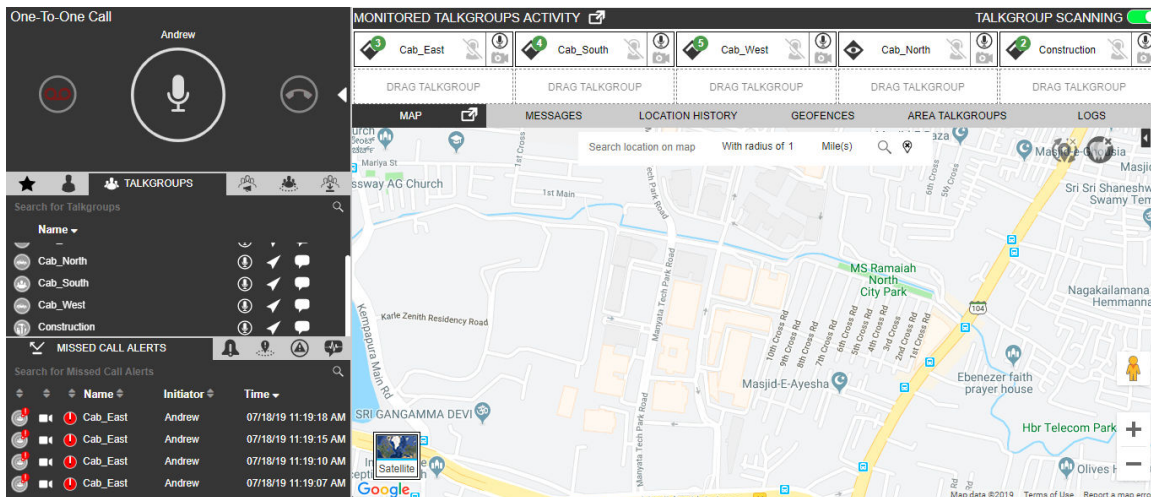

To undock click the dock-out icon in the title bar of the window you want to undock. In the figure below, two windows are shown undocked: Monitored Talkgroups Activity and Map. You can move the undock window, minimize, and maximize. Click **Close** button to dock back to the main window.




NOTICE: Make sure that you disable or turn off the pop-up blocker on the browser to undock the windows.

You can only undock Map and Monitored Talkgroups Activity Windows.

Do not duplicate the undocked window. Duplicating the tab creates a blank page.

Figure 31: Undocked windows

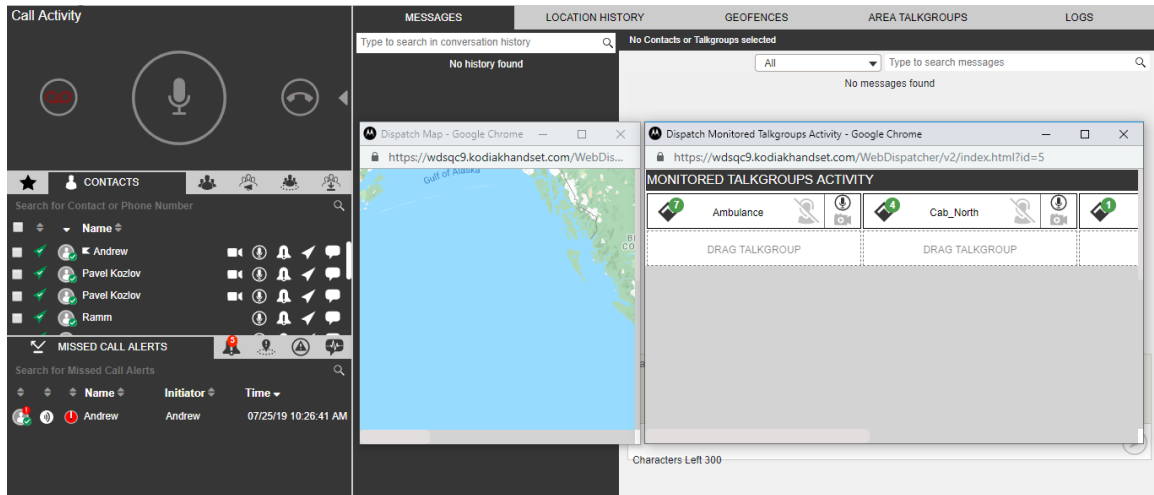

To dock a window back to its original position, click the close button of the window. To dock all the windows back to their default position, reset the layout as explained in the next section.

5.3

Resetting the Layout

If you have undocked the windows on the Dispatch, you can easily reset the layout to its default factory display by following the steps.

The following image shows the location of the reset layout option:

Figure 32: Reset layout option




When and where to use: To reset the layout, follow these steps:

Procedure:

Click the **Reset Layout** icon on the right side of the Dispatch (as shown in the image). A confirmation window appears.

Figure 33: Reset Layout Confirmation Window

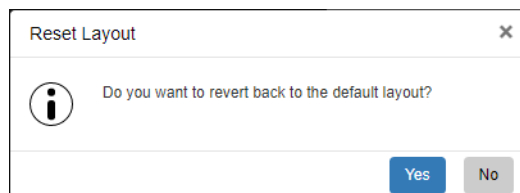

- Click **Yes** to reset to default layout
- Click **No** to leave the layout unchanged.

5.4 Help

The help option of Dispatch in the header provides you the links to the various documents such as user guide. When you click the help option, a new web page opens where you can find all the documents related to the carrier. Enabled the browser pop-ups to access the help link.










5.5 Scrolling















If you are viewing a list that has more entries to display on the screen at one time, you can drag the scroll bar up or down to view the entire list.















5.6 Icons and Tones















The following table lists the Dispatch application common icons.
















Table 1: Dispatch Icons















Icon	Description
	Presence status of the fleet member is "Available"
	Presence status of the fleet member is "Do Not Disturb"
	Presence status of the fleet member is "Offline"
	Location of the fleet member is available
	Location of the fleet member is not available
	Location of the fleet member is expired
	Instant Personal Alert Tab
	Favorites Tab
	Message Tab















Icon	Description
	Message Not Allowed
	Locate
	Location Not Allowed
	Make a Call
	Geofence Tab
	Broadcast Group
	Talkgroup
	My Talkgroup
	Create My Talkgroup or Add to existing My Talkgroup
	Rename My Talkgroup or Remove Member from My Talkgroup
	Delete My Talkgroup
	One-to-One call
	Talkgroup call
	Broadcast Group call















Icon	Description
	Quick Group call
	Push to Talk Floor Control Button when you take the floor
	Push to Talk Floor Control Button when the a fleet member tkes the floor
	Push to Talk Floor Control Button when the floor is idle
	Push to Talk Button when Voice Message Fall Back occurs
	Record Manually
	Record Disabled
	Record Always
	Stop Call Recording
	End Call
	End Call Disabled
	Dispatcher on Call in Call Activity window
	Missed Call Alerts tab
	Status Alert tab
















Icon	Description
	Geofence alert
	PTT Call Alert
	Video Call Alert
	Alert is "Unattended"
	Alert is "Parked"
	Alert is "Completed"
	Alert is "Attended"
	Alert "Expired"
	Alert "Expiring"
	Remove talkgroup from Monitored Talkgroup Category
	Indicates that Talkgroup Scanning is set to normal for a talkgroup.
	Indicates that Talkgroup Scanning is set to monitor only for a talkgroup.
	Indicates that Talkgroup Scanning is set to no priority a talkgroup.
	Indicates that Talkgroup Scanning is turned on for a monitored group. The scanning priority you set for a group displays next to this icon.















Icon	Description
	Indicates that Talkgroup Scanning is paused for a monitored group.
	On Call List Processing
	Dispatcher on Call list fetch error
	No Dispatcher on call
	Other Dispatcher on call
	Self-Dispatcher on call
	Refresh Dispatcher List
	Talkgroup Scanning off
	Talkgroup Scanning on
	Your presence status is "Online"
	Your presence status is "Do Not Disturb"
	Reset Layout
	Allows you to filter on any type of Log file
	Search (Logs)
	Reset Filter (Logs)
















Icon	Description
	Export Recorded Call
	Backup Pending
	Export
	Outgoing (Call logs)
	Incoming (call logs)
	One-to-one Missed Call Alert
	Talkgroup Missed Call Alert
	Quick Group Missed Call Alert
	Broadcast Group Missed Call Alert
	My talkgroup Missed Call Alert
	One-to-one Video Missed Call Alert
	Talkgroup Video Missed Call Alert
	One-to-one Missed Video Call Alert
	Talkgroup Missed Video Call Alert















Icon	Description
	Operation Logs
	Administration Logs
	Network Logs
	Previous Page
	Next page
	Calendar
	Forward Message
	Location Share
	Attach Files
	Attach Picture
	Attach Audio
	Attach Video
	Record Audio
	Attach Document















Icon	Description
	Location Confirmed Attachment
	Download Attachment
	Download Audio
	Pause Audio
	Play
	Download Image
	Close Full View
	Play recorded voice in Messages
	Confirm Location (Message)
	Quick Text
	Voice Recording Stopped
	Urgent Message
	Details (Message)
	Clear all located fleet members from Map















Icon	Description
	Clear searched location in Display Find Location
	Stop location refresh for selected fleet members
	Zoom in on the map screen
	Zoom out on the map screen
	Map loading
	A black border with the avatar appears on a map marker when a contact is selected from the selection list or by pressing SHIFT + mouse drag on your keyboard.
	Selection list expand button
	Selection list collapse button
	Find Location
	This push-pin icon appears when you use the Find Location feature
	Appears when you select the fleet member whose GPS location is not updated within the specified time
	Close button on Map window
	Map Reset icon that appears on the Selection List window
	Map Center
	Map location refresh retrieval status















Icon	Description
	Map Location Refresh Success Status
	Periodic location refresh status icon in the Selection List window
	Periodic location refresh in the info window
	One-time location refresh
	Stop location refresh for all the fleet members
	Stop location refresh for selected fleet member
	Overlapping Marker Cluster Icon
	Location Marker
	Location History Start Point
	Location History End Point
	Location History Play
	Location History Pause
	Location History Stop
	Location History Track on Map
















Icon	Description
	Collapse Location History Search Slider
	Expand Location History Search Slider
	Draw Circle (Geofence)
	Confirm Location (Geofence)
	Drag Map (Geofence)
	Geofence Logs Inside Fence
	Geofence Logs Out of Fence
	Eye Marker
	Close Favorites (Geofence)
	Fit Map Center
	Feature Enabled
	Features Disabled
	Success
	Failure
	Warning




Icon	Description
	Word thumbnail in Messages
	PPT thumbnail in Messages
	Excel thumbnail in Messages
	PDF thumbnail in Messages
	Listening
	Area Talkgroup icon
	Discreet Listening icon under category drop-down under Call Logs tab
	Ambient Listening icon under category drop-down under Call Logs tab
	Emergency icon in Alerts tab
	User Check icon
	Emergency initiate in User Check
	Refresh in User check
	More icon in User Check window
	No dispatcher joined in that monitored talkgroup call

Icon	Description
	Dispatcher joined in that monitored talkgroup call
	Emergency call no dispatcher joined
	Emergency call another dispatcher joined
	Emergency call self-dispatcher joined
	Emergency cluster
	Emergency map marker
	Valid Emergency
	False Emergency
	Contact default avatar
	Talkgroup default avatar
	Emergency icon in Alerts window
	Discreet Listening PTT button
	Ambient Listening Missed Call Alert
	Ambient listening PTT button

Icon	Description
	Refresh disabled
	Phone number in User check
	Location in User check
	User enabled
	User disabled
	Battery full
	Battery moderate
	Battery low
	Battery very low
	Battery drained
	Battery charging
	Excellent LTE Signal
	Very good LTE Signal
	Good LTE Signal

Icon	Description
	Bad LTE Signal
	No LTE Signal
	Excellent Wi-Fi signal
	Very good Wi-Fi signal
	Good Wi-Fi signal
	Bad Wi-Fi signal
	No Wi-Fi signal
	Supervisor icon in Area talkgroup
	Remove Supervisor icon in Area talkgroup
	Area Talkgroup Missed Call Alert
	Contact Emergency Missed Call Alert
	Talkgroup Emergency Missed Call Alert
	Talkgroup owner icon
	Static member in the Area Talkgroup


























Icon	Description
	Dynamic member in the Area Talkgroup
	Delete member from Area Talkgroup
	Warning icon under Area talkgroup for unsaved data
	Add members in Area Talkgroup slider
	Edit icon in Area Talkgroup slider
	Fleet member icon in area talkgroup slider
	Area Talkgroup icon in Fleet Management window
	Add to Favorite
	Favorite icon
	Video thumbnail icon in Messages
	Confirm Location icon in Messages
	Slider icon in the Call Activity window
	Exit Discreet Listening Session
	Docking out icon
	Video Streaming icon

Icon	Description
	Video Session Mute icon
	Video Session Unmuted icon
	Expand Log Details

5.7 Avatars

This section provides the complete list of avatars available.

Table 2: Avatars

Icons	Icons	Icons	Icons	Icons
				
				
				
				
				

To change a contact avatar, refer to [Change Avatar of a Contact on page 86](#) section of this document.

To indicate various conditions, Dispatch plays the following tones:

Table 3: Dispatch Tones

Tone	Description
Floor Acquired	Played after you press the PTT button to indicate that you can speak.

Tone	Description
Floor Busy	Played when you press the PTT button and unable to take the floor.
Floor Released	Played to listeners of the call indicating that the talker has released the floor.
Incoming Call	Played once at the beginning of the call to alert you about an incoming PTT call.
Instant Personal Alert	Played each time you receive an Instant Personal Alert. This tone is a user-selectable Alert tone.
Call Suspension/ Call Reconnecting	Played while the server momentarily drops an incomplete call due to an error. Also, the same tone is played while the call is reconnected within a pre-defined time.
Missed Call Alert	<p>Played when you get an incoming talkgroup call.</p> <p>This tone is a user-selectable Alert tone.</p> <p>Missed Call Alert tone is not played when you are busy on another call, or you have set the state as DND.</p>
Geofence Alert	Played when the fleet member leaves or enters the fence defined by you.
Message Alert	This tone is played when there is an incoming message.
Emergency Alert	Played when you receive an emergency alert.
Status Alert	Played when you receive a status alert.
Attention	<p>This tone is played when Error notification or when you must pay attention to the task bar notification pop-up indicating an operation status. For example, Sending an IPA to an offline fleet member has failed.</p>

Chapter 6

Contacts and Talkgroups


The Dispatch provides communication and location for contacts (also known as fleet members). The Central Admin Tool (CAT) manages the contacts and talkgroups. Once corporate admin configures contacts, the contacts and talkgroups are shown on the Contacts and Talkgroups window.

This section is organized as follows:

Using the Dispatch, you can communicate with individuals or talkgroups, send messages, multimedia files, alerts (IPA) to individuals only, the path traversed by the fleet members, assign fence to talkgroup only, locate fleet members on a map, do user check, disable user, initiate emergency, and do ambient and discreet listening. The Central Admin creates the talkgroups through CAT.


The following figure shows the Contacts and Talkgroups window:

Figure 34: Contacts and Talkgroups Window

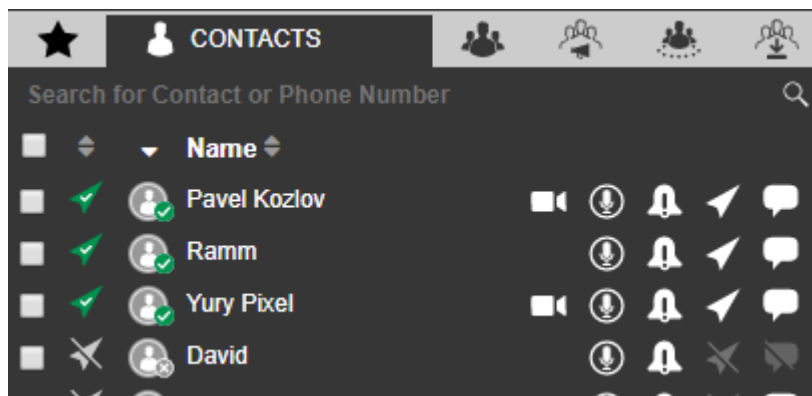

This window has the following buttons. Hovering your mouse cursor over the buttons displays the button text.

- Call
- Open Video Stream
- Instant Personal Alert
- Locate
- Message

 **NOTICE:** If contacts or talkgroups do not have the respective features enabled, then the action icons are disabled against the recipient (contact or talkgroup).


This window has the following six tabs:

- Favorites
- Contacts
- Talkgroups
- Broadcast Groups
- Area Talkgroups
- My Talkgroups

6.1 Searching

You can search for contacts and talkgroups using the search bar on the Contacts and Talkgroups window. To search, select a tab and enter the name of the fleet member, phone number fleet member, talkgroup name, broadcast group name, area talkgroup name, or my talkgroup name in the Search field. The list is filtered to show matching entries.

 Figure 35: Search bar

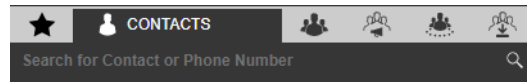

6.2 Favorites Tab

The Favorite tab shows a list of all your favorite PTT contacts and their current presence status. You can add the contacts or talkgroups that you contact most frequently in the Favorites tab. Favorites can help you to access those contacts and talkgroups quicker than that of search in individual tabs.


6.2.1 Adding Contacts to the Favorites

When and where to use: To add contacts to Favorites, follow these steps:

Procedure:

- 1 From the Contacts tab, select the check boxes next to the contacts, which you want to add to the Favorites.
- 2 Right-click the contact and select the **Add to Favorites** icon.

Figure 36: Add Contact to Favorites

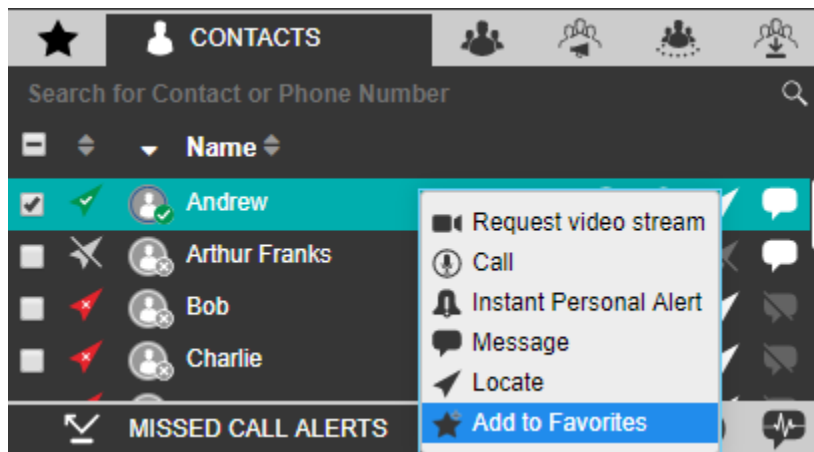

- 3 The contact is added to your Favorites tab. A **Favorite** icon is assigned to the contact.

Figure 37: Contact Added to Favorites


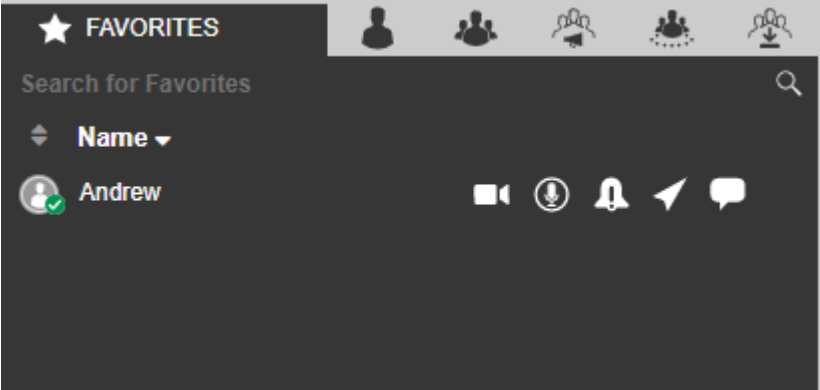


Figure 38: Favorite Icon in the Contacts tab

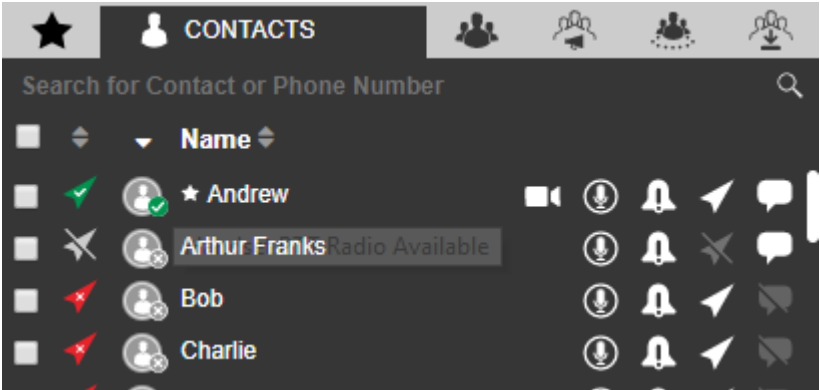


6.2.2
Removing Contacts from the Favorites

To remove a contact from the Favorites List, follow these steps:

Procedure:


- 1 From the Favorites or Contacts tab, select the contact, which needs be removed from favorite.
- 2 Right-click on the contact and select the **Remove from Favorites** icon.

Figure 39: Remove Contact from Favorites

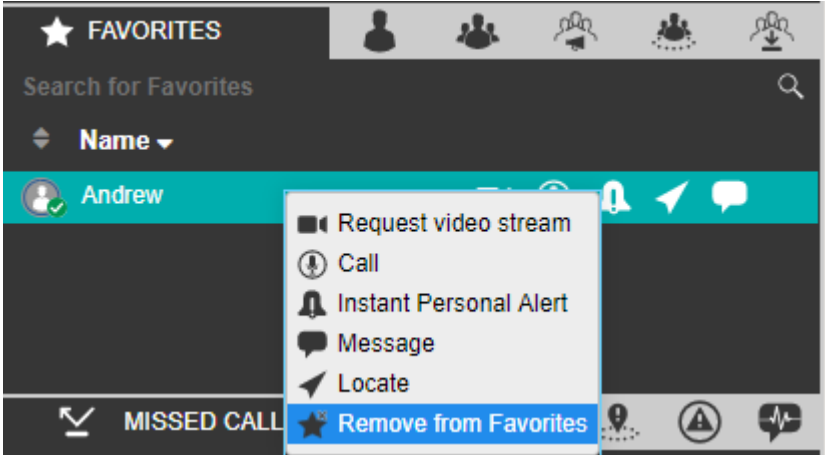

- 3 A confirmation message displays.

Figure 40: Remove from favorites- Confirmation Dialog box

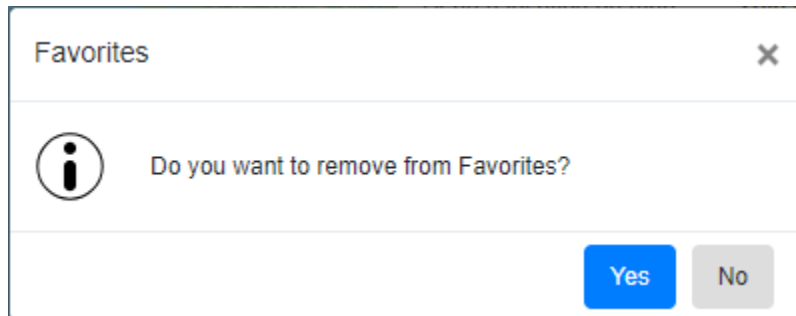

- Click **Yes** to remove.
- Click **No** to cancel the action.

6.2.3

Adding Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup to the Favorites

To add a talkgroup, broadcast group, my talkgroup, or area talkgroup to Favorites, follow the steps:

Procedure:

- 1 From the respective tab, select any talkgroup, which you want to add to the Favorites.
- 2 Right-click the talkgroup and select the **Add to Favorites** icon.
- 3 The talkgroup is added to your Favorites tab. A **Favorites** icon is assigned to the talkgroup.

The figures shown here are for the Talkgroup tab. Do the same for the Broadcast Group, My Talkgroup, or Area Talkgroup.

Figure 41: Add Talkgroup to Favorites

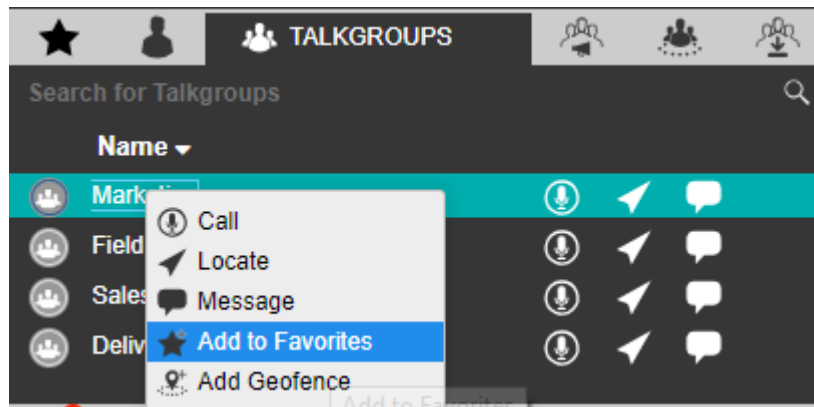


Figure 42: Talkgroup Added to Favorites


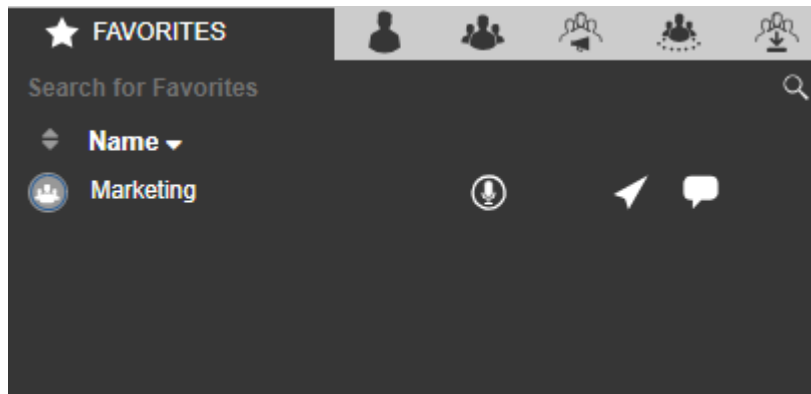


Figure 43: Favorite Icon in the Talkgroup tab

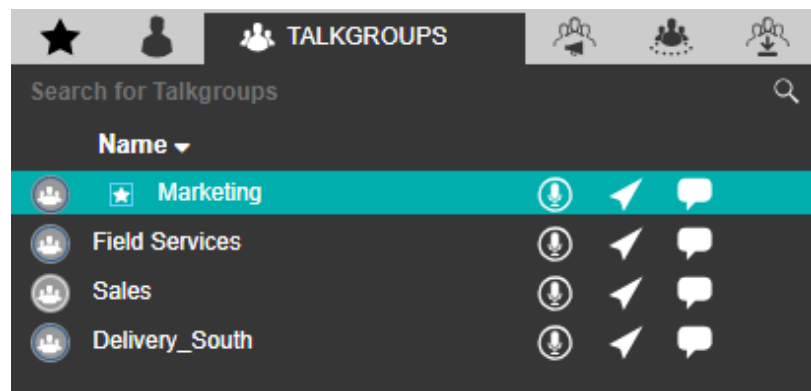

6.2.4

Removing Talkgroup, Broadcast Group, My Talkgroup, or Area Talkgroup from the Favorites


To remove a talkgroup, broadcast group, my talkgroup, or area talkgroup from the Favorites, follow these steps:


Procedure:

- 1 From the Favorites or respective tab, select the talkgroup, which needs be removed from Favorites.
- 2 Right-click on the talkgroup and select the **Remove from Favorites** icon.
- 3 A confirmation message displays.
 - Click **Yes** to remove.
 - Click **No** to cancel the action.

The figures shown are for the Talkgroup tab. Do the same for the Broadcast Group, My Talkgroup, or Area Talkgroup.

Figure 44: Remove Talkgroup from Favorites

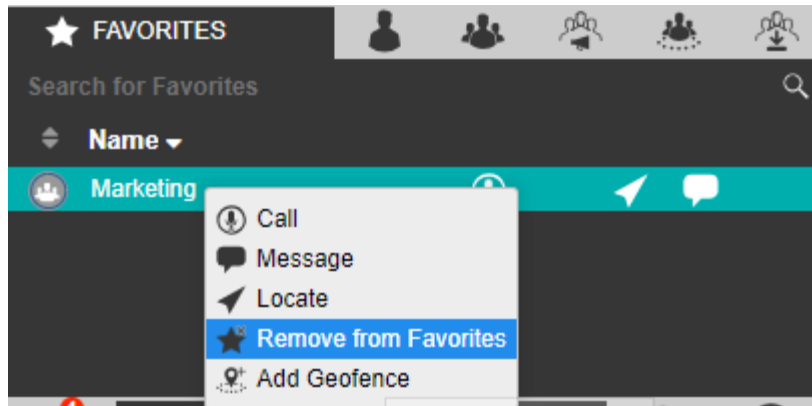


 **NOTICE:** The number of contacts, talkgroups, broadcast groups, area talkgroup, and my talkgroups allowed to be added in the Favorites tab depends on the server configuration.

6.3 Contacts Tab

From the Contacts tab, you can select a contact for calling, send an Instant Personal Alert, send a message, and locate a fleet member.


Select the **Contacts** Tab as shown:

Figure 45: Contacts Tab Window

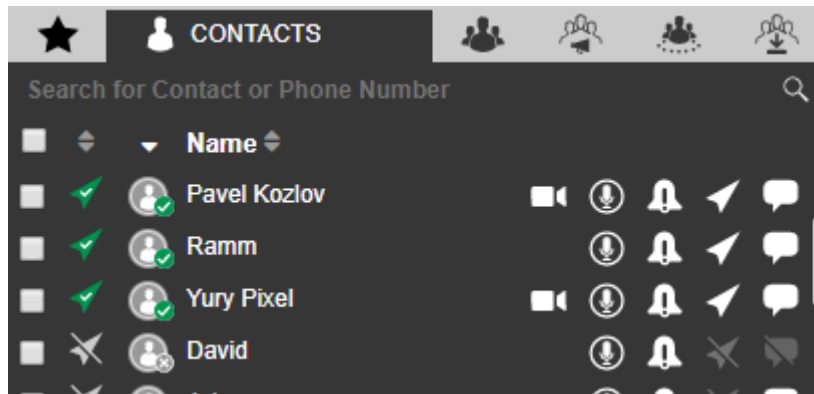

Click one of the following options from the Contacts tab:

- **Call** icon to call
- **Open Video Stream** icon to initiate video stream
- **IPA** icon to send an IPA
- **Locate** icon to locate the fleet member on the map
- **Message** icon to send a message (text, multimedia, and location)


 **NOTICE:** Sending Instant Personal Alerts (IPA) to more than one fleet member is not allowed.

You can also select multiple individual fleet members to perform a Quick Group call, send a Message, and Locate multiple fleet members at once. You can select all the fleet members by clicking the check box in the header row.

You can sort by name, GPS status, or presence status by clicking the column header. By default, the contacts are sorted by name in ascending order.

To search for a fleet member, enter a name or phone number in the Search field. The result is a list of fleet members with the search string matched partially or completely in the name or number.

Figure 46: Total Contacts Assigned

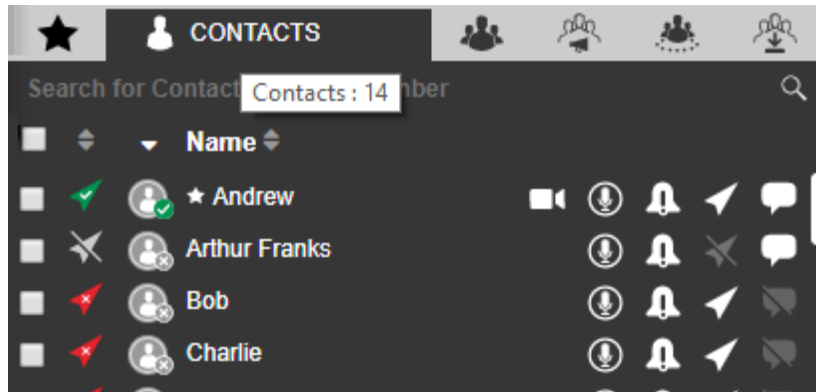

Hovering the mouse cursor over the GPS status of a fleet member displays one of the following values depending on the location availability of the fleet member.

- 1 Location Available
- 2 Location Unavailable
- 3 Location Expired
- 4 Not Locatable

Hovering the mouse cursor over the presence status of a fleet member displays one of the following values depending on the presence availability of the fleet member.

- 1 Available
- 2 Offline
- 3 Do Not Disturb

Hovering the mouse cursor over a name of the fleet member displays the phone number fleet member.


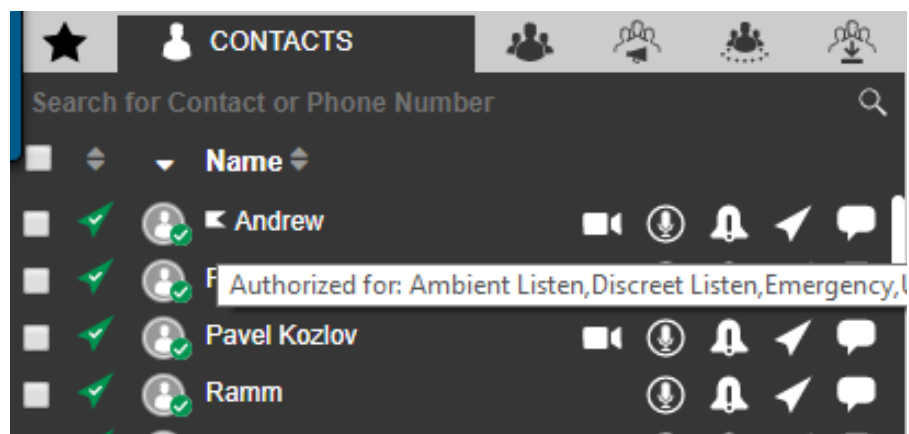
An Authorization flag  icon next to the contact shows the authorization of the fleet member. Hovering the mouse cursor over the authorization flag icon shows the allowed authorizations.

Figure 47: Fleet Member Authorization



As per the authorization, right-click on the contact and select one of the following:

- 1 Ambient Listen
- 2 Discreet Listen
- 3 Emergency
- 4 User Check
- 5 User Service Control (Disable)
- 6 Open Video Stream


6.4

Talkgroups Tab

You can call, locate, message, add geofence, or delete geofence from talkgroup from the Talkgroups tab by performing the following steps.

To display the Talkgroups tab window select the **Talkgroups** tab.

Figure 48: Talkgroups Tab Window

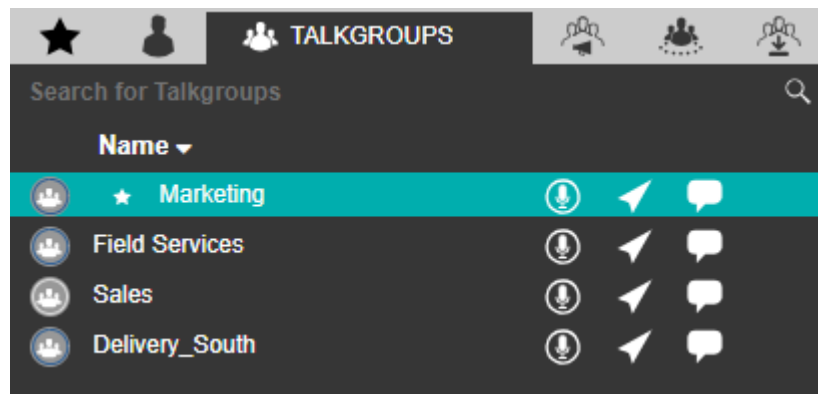

Click the talkgroup to select it. To open the Member pane, double-click the talkgroup. The Member pane displays the members of the talkgroup.

To close the Member pane slider, press the **ESC** key or click the **Close** icon.

Click one of the following options from the Talkgroups tab:


- **Call** icon to place a talkgroup call
- **Locate** icon to locate the talkgroup members on the map
- **Message** icon to send a message (text, multimedia, and location) to the talkgroup members

Right-click on the talkgroup and select the **Add Geofence** icon to define and enable the geofence to the talkgroup. A geofence icon is shown in the assigned row of the talkgroup.

To sort the talkgroups or members alphabetically or in reverse alphabetical order, click the column header. By default, the talkgroups or members are sorted by name in ascending order.

To search for a talkgroup, enter the talkgroup name in the Search field. The list of matching talkgroup names display. The result is a list of talkgroups with the search string matched partially or completely in the name.

Figure 49: Total Talkgroup Assigned

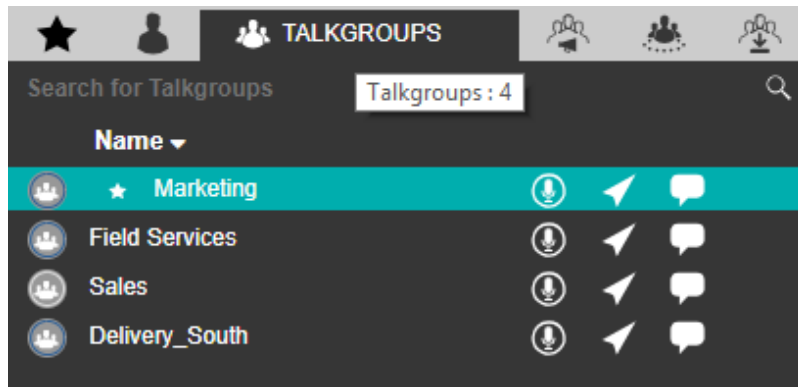

Hovering the mouse cursor over the name of the talkgroup member displays the full name of the talkgroup.

 **NOTICE:** Sending an IPA to a talkgroup is not allowed.


6.5

Broadcast Groups Tab

The Broadcast call feature allows you to make high-priority calls typically used for making important announcements. The Corporate Admin assigns Broadcast groups. Broadcast calls are one-way calls from the broadcaster to broadcast group members. You can make broadcast calls to members of your broadcast groups using the Broadcast Groups tab. To do these PTT operations, follow these steps.

To display the broadcast groups, select the **Broadcast Groups** tab.

Figure 50: Broadcast Groups Tab

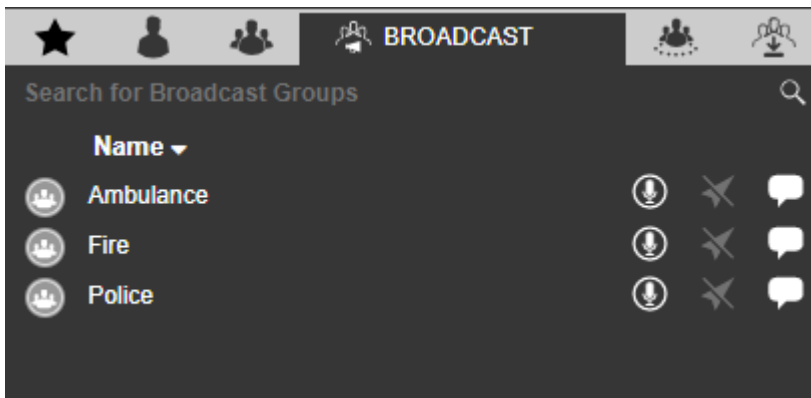


Click one of the following:

- To place a broadcast group call, Click the **Call** icon
- To send a broadcast group message, click the **Message** icon

To sort the broadcast group alphabetically or in reverse alphabetical order, click the column title. By default, the broadcast groups are sorted by name in ascending order.


To search for a broadcast group, enter the broadcast group name in the Search field. The result is a list of broadcast group with the search string matched partially or completely in the name.

Figure 51: Total Broadcast Groups Assigned

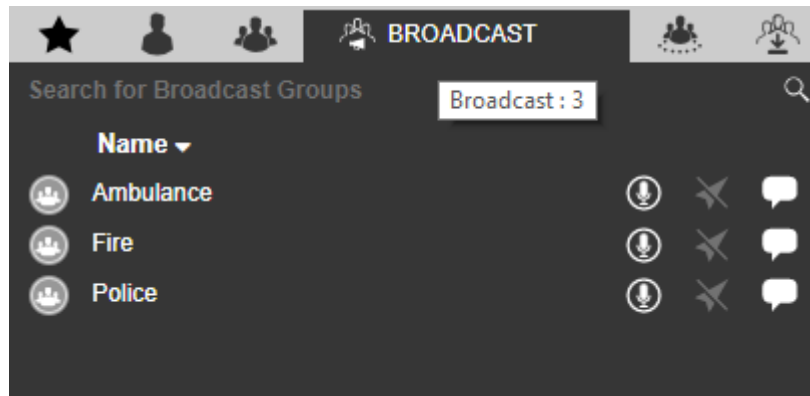

Broadcast group members do not display on the user interface. However, you can view the total number of members in the broadcast group by hovering the mouse cursor over the broadcast group name.

Figure 52: Total Broadcast Group Members

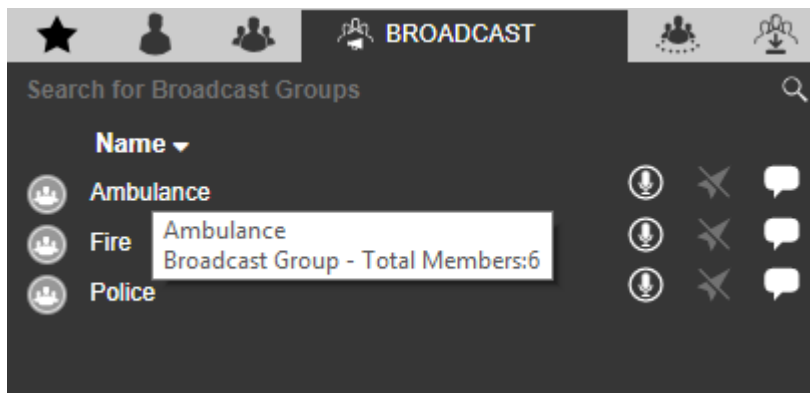

NOTICE: If you are on an active call with the contact or talkgroup and there is a delete request from the CAT, then Dispatch waits for the call to be ended. The contact or talkgroup are deleted after completion of call with the deleted contact or talkgroup. There is no impact of deletion of contact or talkgroup from the CAT to the active call session.

6.6

My Talkgroups Tab

In My Talkgroups tab, you can manage and communicate with your my talkgroups. My talkgroups are talkgroups that you can create and manage yourself and they are for easy access.



NOTICE: Corporate admin does not manage My Talkgroups.

6.6.1


Creating My Talkgroups

To create my talkgroup, follow these steps:

Procedure:


- 1 Select the fleet members from the Contacts tab and right-click to select **Create My Talkgroup**.

Figure 53: Creating My Talkgroups

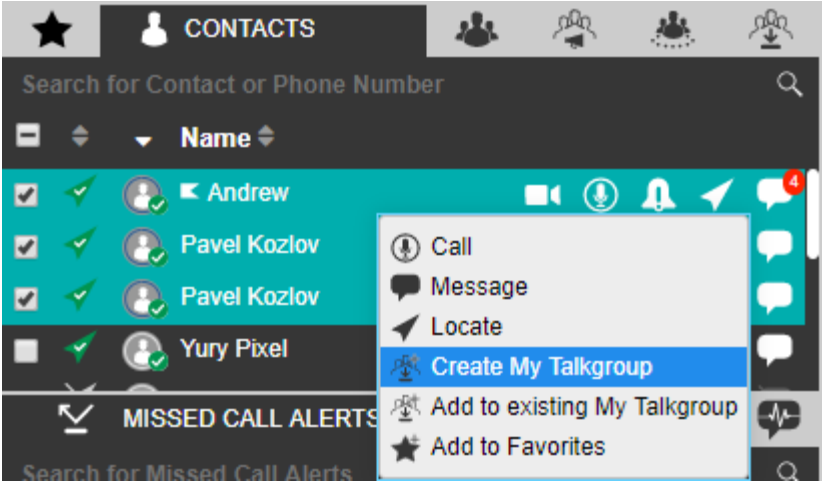

2 A My Talkgroup Window appears. Enter the name of my talkgroup in the Name field.


Figure 54: Create My Talkgroups Window

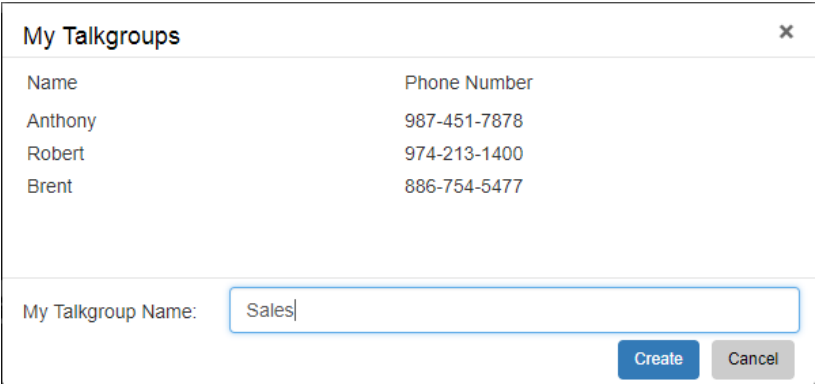

- Click **Create** to save the new My Talkgroup.
- Click **Cancel** to cancel the action.

3 A confirmation message displays.

Figure 55: My Talkgroup Created- Confirmation Dialog Box

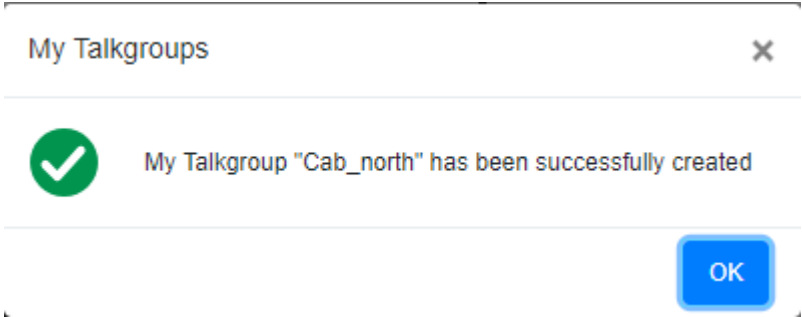

6.6.2


Placing Call or Sending Message or Locating Members of a My Talkgroup

To call, send a message, or locate my talkgroup, follow these steps:

Procedure:


- 1 To view the talkgroups, select the My Talkgroups tab.
- 2 To display all the members of the talkgroup, double-click the talkgroup. To close the members list, do one of the followings:
 - Click the **Close** icon.
 - Press the **ESC** key on your keyboard.

Figure 56: View Members of the My Talkgroup

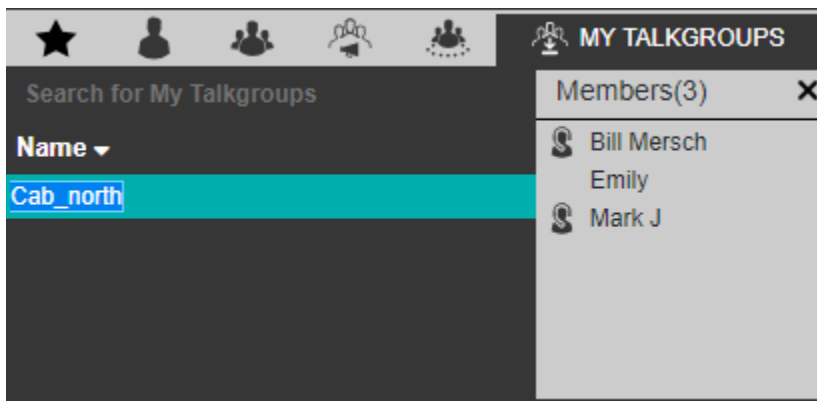

- 3 To select the talkgroup, click the talkgroup.

Figure 57: Selecting a Talkgroup from My Talkgroup

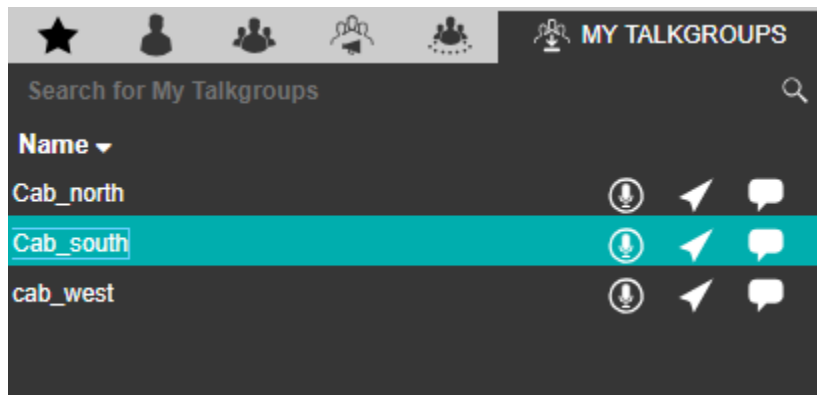

- 4 Do one of the following in the My Talkgroups tab:
 - To call click the **Call** icon.
 - To locate the My Talkgroup members on the map click the **Locate** icon.
 - To send a message to My Talkgroup Members click the **Message** icon.

To sort my talkgroups or members alphabetically or in reverse alphabetical order, click the column headers. By default, the talkgroups are sorted by name in ascending order.

6.6.3


Removing Fleet Members from a My Talkgroup

To remove a fleet member from a My Talkgroup, follow these steps:

Procedure:


- 1 To view your My Talkgroups, select the **My Talkgroups** tab.

Figure 58: My Talkgroup Tab Window

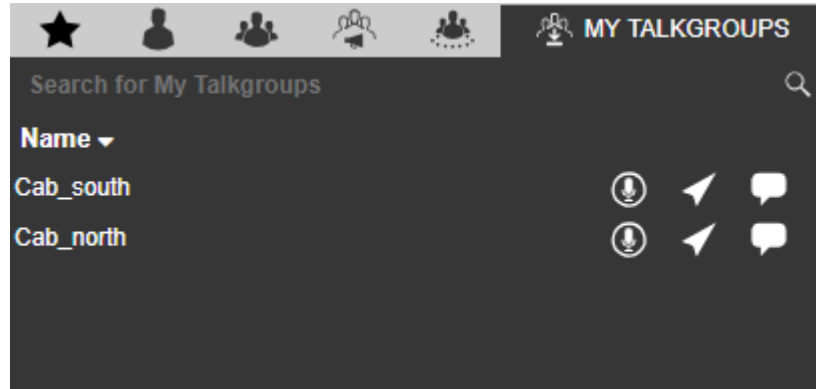


- 2 Click on the talkgroup to select it.
- 3 Right-click and select **Remove Members** to modify the talkgroup as shown.

Figure 59: Remove My Talkgroup Members

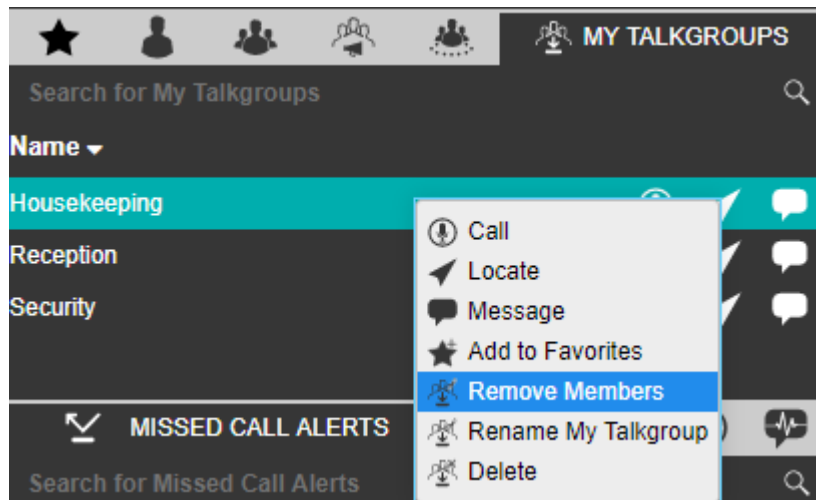

- 4 Check the check boxes next to the fleet members you want to remove from the My Talkgroup.

Figure 60: Selecting Members to Remove

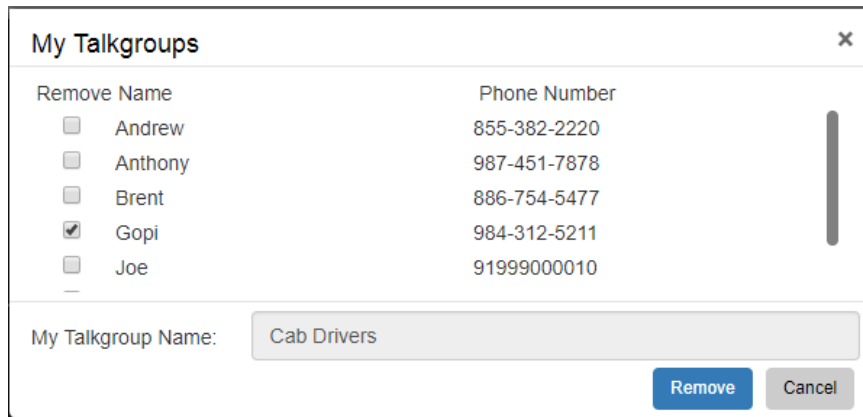

- Click the **Remove** to remove the fleet members.
 - Click **Cancel** if you do not intend to save the changes made to your My Talkgroup.
- 5 Click **OK** to complete the removal process.

6.6.4


Renaming a My Talkgroup

To rename a My Talkgroup, follow these steps:

Procedure:


- 1 To view your talkgroups, select the **My Talkgroup** tab.
- 2 To select talkgroup, click the talkgroup.

Figure 61: My Talkgroup Tab Window

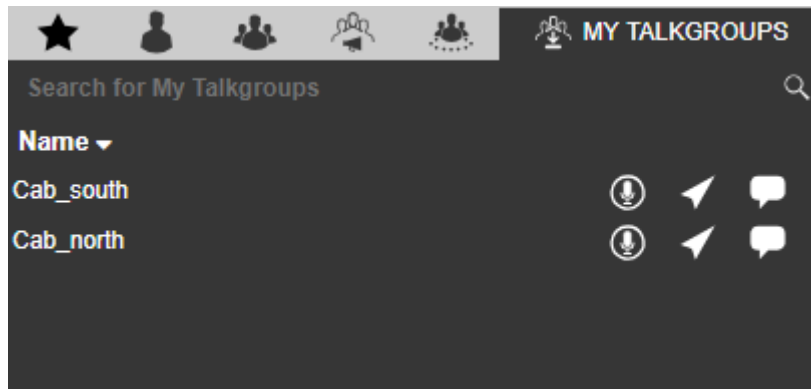


- 3 Right-click and select the **Rename My Talkgroup** to change my talkgroup name:

Figure 62: Rename My Talkgroup

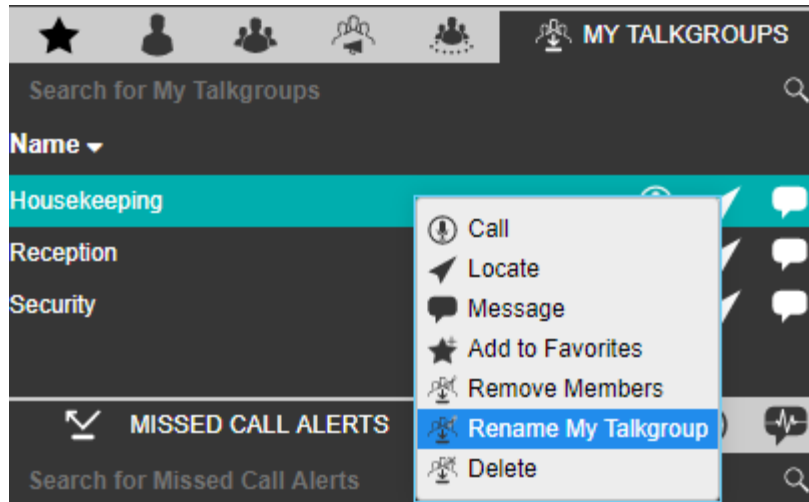


- 4 Enter a new name for the selected My Talkgroup.
- 5 Click **Rename**.
 If you do not want to save the changes made to the My Talkgroup, click **Cancel**.

Figure 63: My Talkgroup- Rename

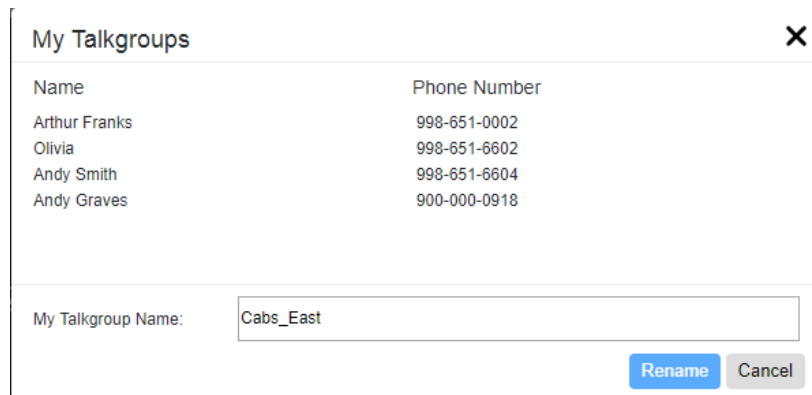

- 6 Click **OK** to complete the renaming process.

Figure 64: My Talkgroup Renamed - Confirmation Dialog Box

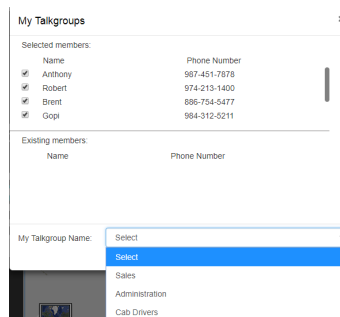

NOTICE: Renaming of contact or talkgroup do not have any impact on the active call session. The contact or talkgroup is renamed after completion of call with the renamed contact or talkgroup.

6.6.5


Adding Members to an Existing My Talkgroup

To add members to an existing My Talkgroup, follow these steps:

Procedure:


- 1 From the Contacts tab, select the check boxes and right-click on the contacts you want to add.

Figure 65: Adding Member to My Talkgroup

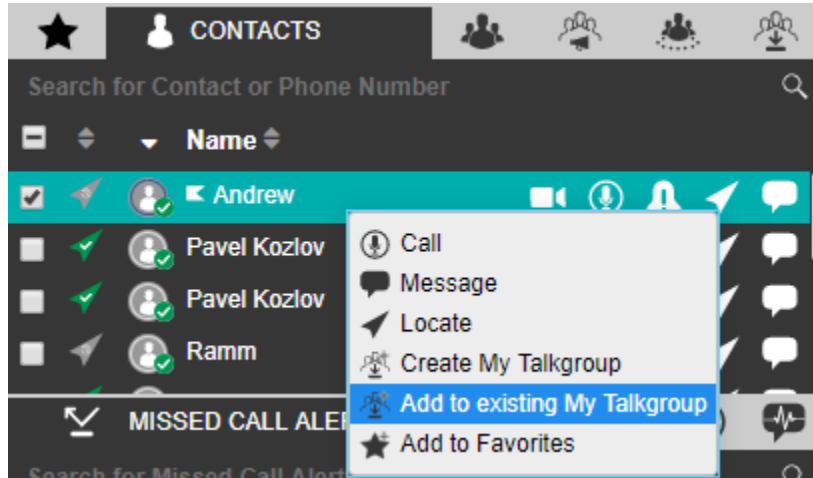

- 2 Select the **Add to existing My Talkgroup** option. The My Talkgroups window displays.
- 3 Select the check boxes next to name of the contacts and select the name of the talkgroup to which the member to be added using the drop-down list.

Figure 66: Adding Member to My Talkgroup Window

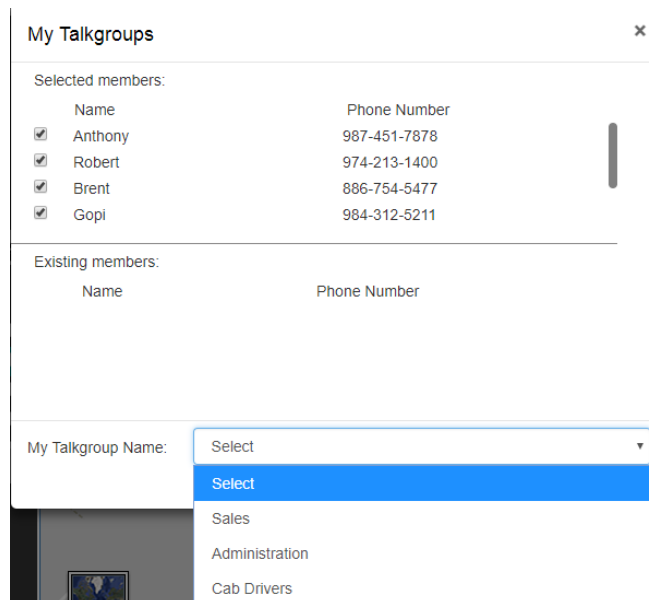

- 4 Click **Add** to save your changes.
- 5 Click **OK** to complete the add process.



NOTICE: For any dispatcher, my talkgroup can have a maximum of ten members (as per the server configuration) added to it. Interop User, Patch User, and Interop talkgroups cannot be added as a member of my talkgroup.

6.6.6


Deleting a My Talkgroup

To delete a My Talkgroup, follow these steps:

Procedure:

- 1 To view your talkgroups, select the **My Talkgroup** tab.
- 2 To select the talkgroup, click the talkgroup. To view the members of my talkgroup, double-click the talkgroup.


Figure 67: Delete My Talkgroup

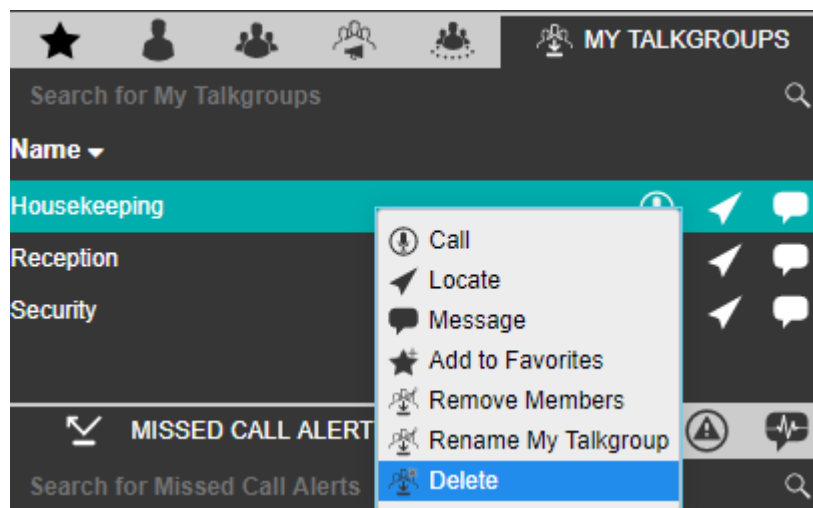

NOTICE: If you are on an active call with the contact or talkgroup and there is a delete request from the CAT, then Dispatch waits for the call to be ended. The contact or talkgroup is deleted after completion of call with the deleted contact or talkgroup. There is no impact of deletion of contact or talkgroup from the Central Admin Tool to the active call session.

- 3 To remove my talkgroup, right-click the talkgroup and select **Delete**.
- 4 A confirmation pop-up message displays to confirm the removal of the selected My Talkgroup.

Figure 68: Delete My Talkgroup - Confirmation Dialog Box

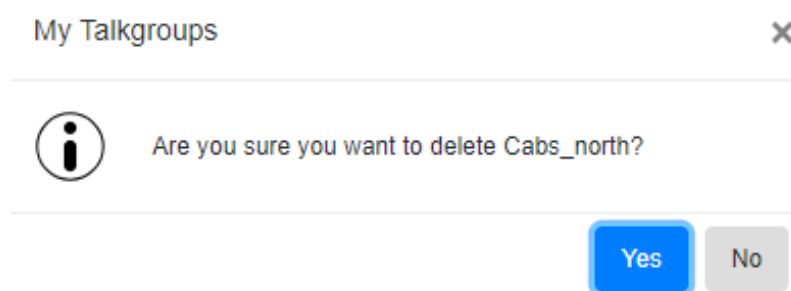

- Click **Yes** to complete the delete process.
- Click **No** to cancel the process.

6.7

Area Talkgroups

For details, please refer to the [Area Talkgroup on page 206](#) section of this document.

6.8

Change Avatar of a Contact


To enhance the view of your contact list you can add an “avatar” (a pre-defined graphical image) to contacts. By default, avatars are shown for contacts and talkgroups. Dispatch allows you to change the avatar of a contact from a list of pre-defined avatars. However, you cannot change an avatar of a talkgroup. If required, it can be changed from the Central Admin Tool (CAT).

When and where to use: To change the avatar of a contact, follow these steps:

Procedure:


- 1 Select the **Contact** tab from the Contacts and Talkgroups window.

Figure 69: Contacts and Talkgroups Window

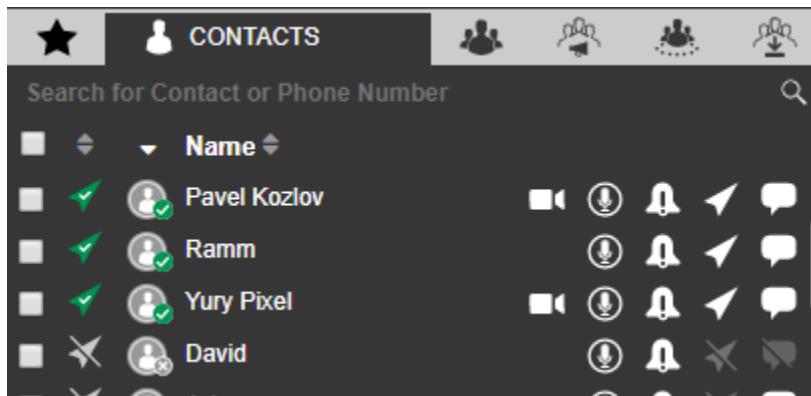


- 2 Double-click the profile icon of the contact whose avatar you want to change.

Figure 70: Change Avatar- Contact

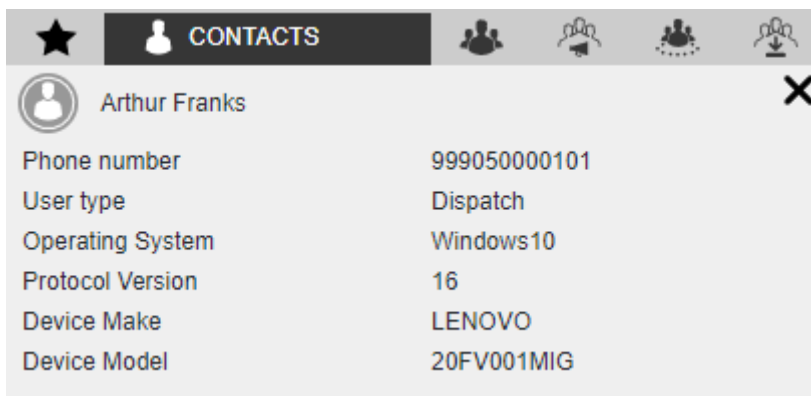

- 3 Click the **Profile** icon.
To cancel the action, click the **Close** icon.

Figure 71: Select and Apply New Avatar to Contact

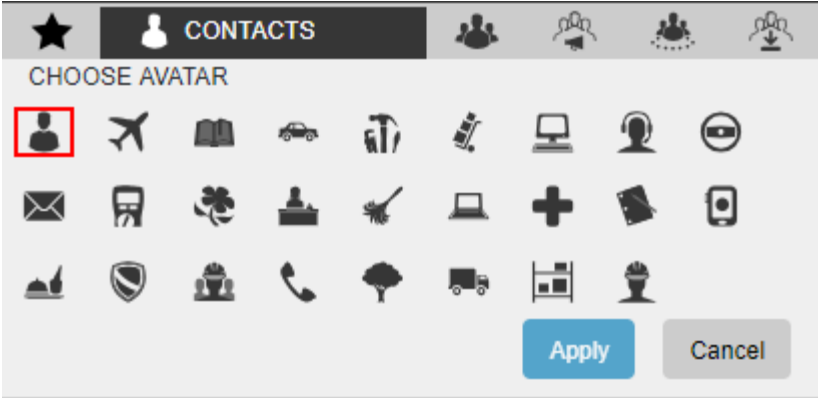

- 4 Select the avatar from the list.
- 5 To change the avatar of a contact, click **Apply**.
To cancel the action, click **Cancel**.



NOTICE: All contacts have a default avatar until you assign a different avatar.

Chapter 7

PTT Calls


You can start or end a Push-to-talk (PTT) call, record a conversation, and see the talker identity.

7.1

Call Ready State

When you select a contact or talkgroup from any of the windows such as Contacts and Talkgroups, Map information, Map Selection List, Alerts, Monitored Talkgroup Activity, Messages, Geofence Logs, Call logs, or Alert Logs and click the **Call** button, the Call Activity window changes to a “Call Ready” state. When a call ends, the 'Call Activity' window switches back to a 'Call Ready' state for the last dialed or received call for easy redialing until you select some fleet member on the map.

Figure 72: Call Activity Screen

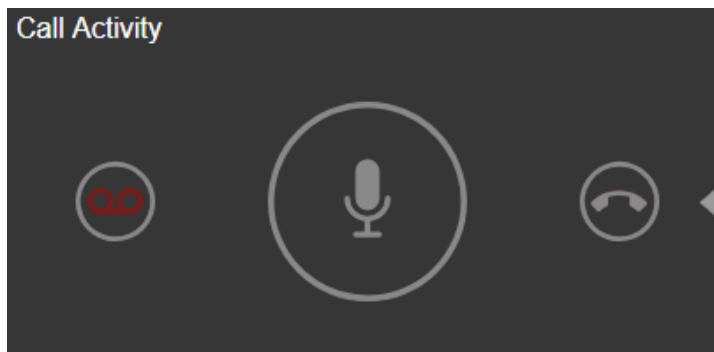

7.2

Making Calls

The Dispatch application allows PTT call to fleet members and respond to the PTT calls received from the fleet members.

7.2.1


Placing a Talkgroup Call

To place a PTT talkgroup call, follow the steps:

Procedure:


- 1 Select the Talkgroup Name from any of the windows that is, Contacts and Talkgroups, Map Information, Map Selection list, Alerts, Monitored Talkgroup Activity, Messages, Geofence logs, Call logs, or Alert Logs.

Figure 73: Talkgroups Tab Window

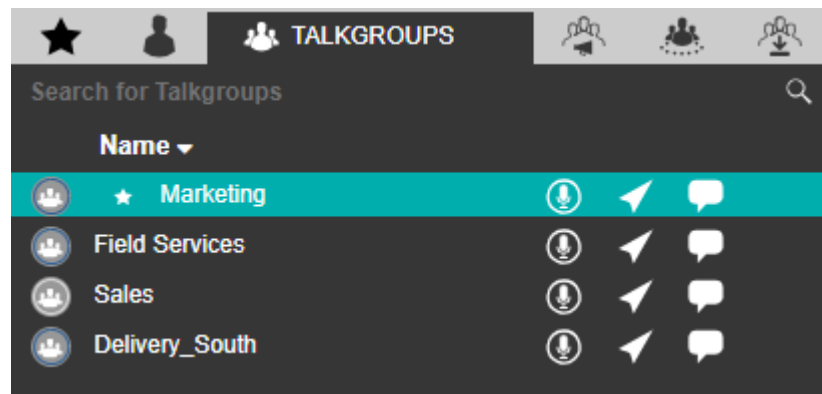


- 2 Click the **Call** icon to place a talkgroup call. You can see a Call Ready screen at the Call activity window.

Figure 74: Talkgroup Call- Call Ready screen

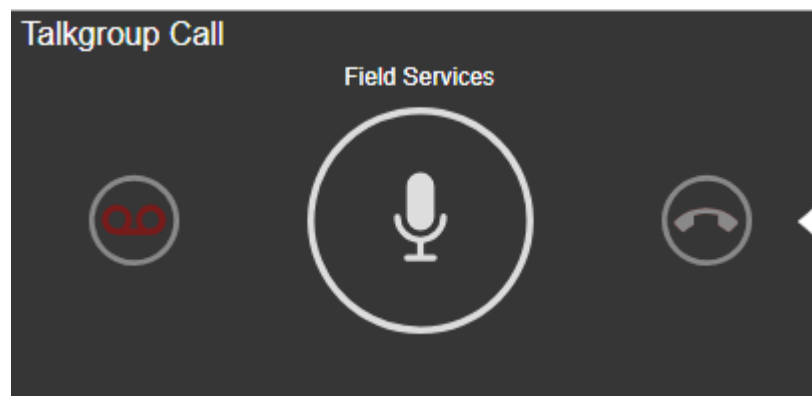

- 3 Use the Call Activity Window to initiate talkgroup call by clicking and holding the PTT button. A Call type status appears in the header area of the Call Activity window.

Figure 75: Talkgroup Call Active Window

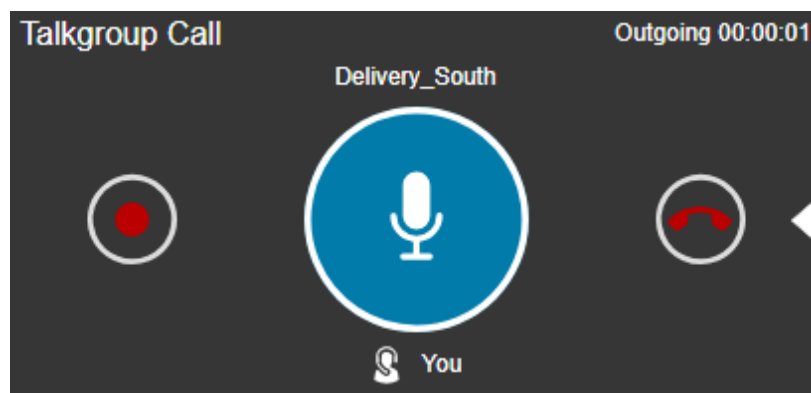

NOTICE: A dispatcher icon displays below the call icon when another participant of the call is a dispatcher.

The following information displays:

- The Call Type displays in the header area of the call activity window.

- The Push to Talk button allows you to take the floor. The color of the button indicates whether the floor is free (border and PTT icon white), you are talking (blue), or someone else is talking (only border and PTT icon blue).
 - The name of the talkgroup shows above the PTT Icon.
 - The name of the person speaking shows below the PTT icon.
 - The Talkgroup Members list shows when you click the **Slider** icon on the right side of the call activity window. The talkgroup member list allows you to see the names of the talkgroup members. The Slider icon is disabled when the call is not initiated.
 - The Record button can be used to record the call.
 - The End Call button allows you to drop from the current call.
- 4 To talk, click and hold the on-screen PTT button. The PTT button turns complete blue. When you finish talking, release the on-screen PTT button again to allow other fleet members to speak.
 - 5 When a fleet member takes the floor, the on-screen PTT button turns border and PTT icon blue. The name of the talker displays above the call icon in the Call Activity window.
 - 6 To drop yourself from the call, click **End Call**. The call continues without you. If no one takes the floor, then the call automatically ends.

7.2.2

Placing a Quick Group Call


A Quick Group call is a quick call consisting of selected fleet members. Quick Group calls are special purpose talkgroups that are used once. If you use a talkgroup often, you should have the admin create the talkgroup for you or you may create your own my talkgroup.

When and where to use: To place Quick Group call, follow these steps:

Procedure:

- 1 Click the **Contacts** tab and select the desired fleet members from the Contacts tab of the Contacts and Talkgroups window using the check box next to the name of the fleet member.
- 2 To place a Quick Group call, right-click and click the **Call** icon. You can see the Call Ready screen at the Call activity window.


Figure 76: Quick Group Call- Call Ready screen

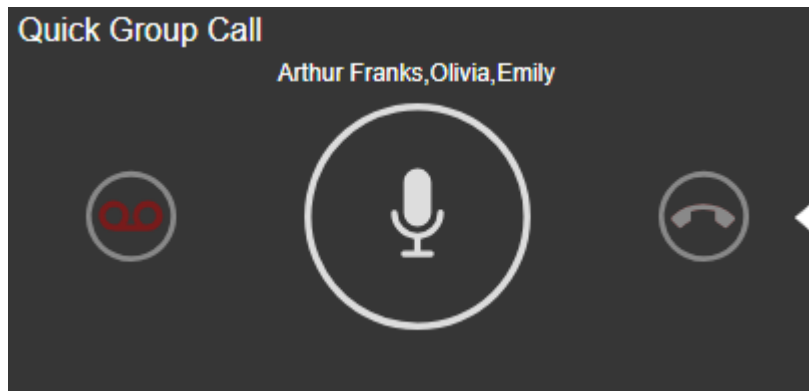

A call starts and the same information as for a talkgroup call is shown in the Call Activity window. On the top of the PTT icon, the talkgroup name area shows some of the members in the call. On mouse

hover on the members show all the contacts in the Quick Group call. To display the Members list to view the members of the Quick Group, click the **Slider** button.

Figure 77: Quick Group Call Active Window

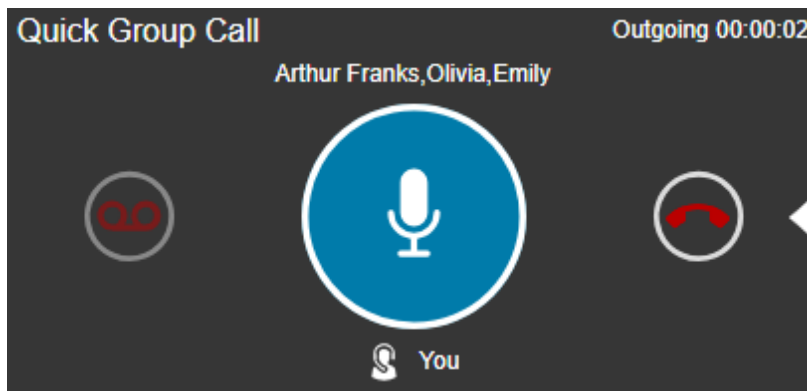

NOTICE: A dispatcher icon displays below the call icon when another participant of the call is a dispatcher.

7.2.3


Placing a Broadcast Call

To place a Broadcast Group call, follow these steps:

Procedure:


- 1 Click the **Broadcast Group** tab and select the Broadcast Group from the Contacts and Talkgroups, Favorites, or Call Logs window.

Figure 78: Broadcast Groups Tab

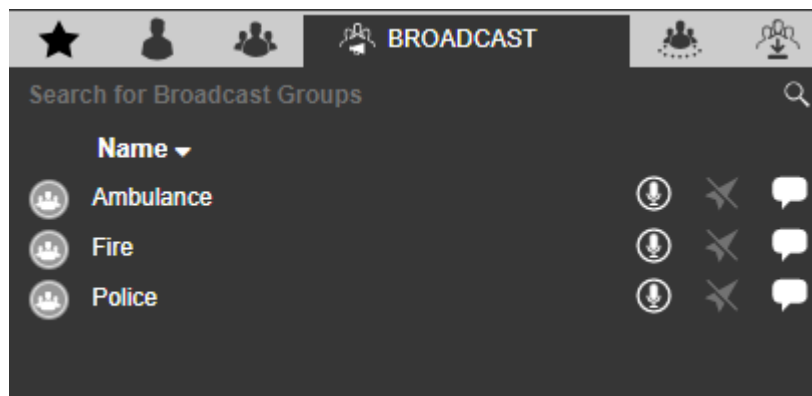


- Click the **Call** icon to place a Broadcast Group call.
 - Right-click the log and click the **Call** icon.
- 2 A confirmation message appears asking you if you want to make a broadcast call.

Figure 79: Broadcast Call Dialog

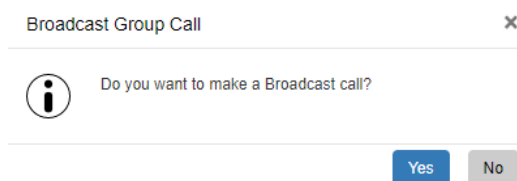


- 3 Click **Yes** in the dialog box that appears asking you if you want to make a broadcast call. You can see the Call Ready screen at the Call activity window with a Broadcast call icon on the bottom of the call activity window.

Figure 80: Broadcast Call - Call Ready Screen

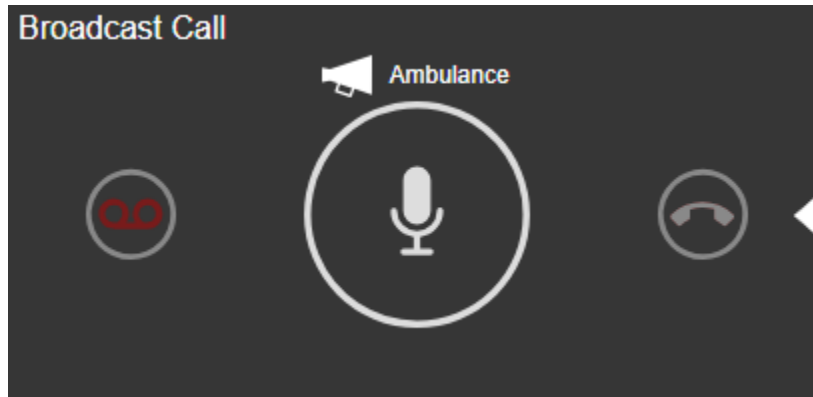

- 4 Use the Call Activity Window to initiate Broadcast group call by clicking and holding the PTT button. A Call type status appears in the header area of the Call Activity window.

Figure 81: Broadcast Call - Active Window

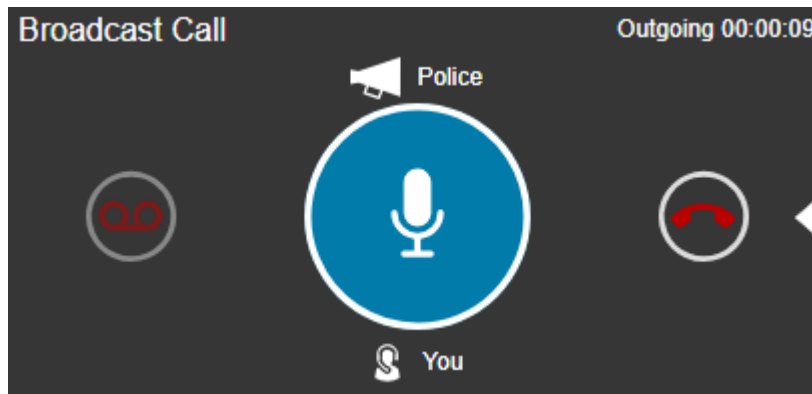

The following information displays:

- The Call Type displays in the header area of the call activity window.
- The Push to Talk button allows you to take the floor. The color of the button indicates whether the floor is free (border and PTT icon white), you are talking (blue), or someone else is talking (border and PTT icon blue).
- The name of the person speaking shows below the PTT icon.
- The Name of the broadcast group shows on the top of the PTT icon.
- In the case of broadcast calls, Slider button is disabled, and the members are not shown.
- The Record button can be used to record the call.
- The End Call button allows you to drop from the current call.

7.2.4


Placing an Area Talkgroup Call

When and where to use: To call to an area talkgroup, follow these steps:

Procedure:


- 1 Select the area talkgroup from any of the windows that is, Area Talkgroups, Favorites tab in Contacts, Talkgroups window, Area Talkgroups slider, or Call Logs window.
- 2 To place an area talkgroup call, click the **Call** icon. You can see the Call Ready Screen at the Call activity window.

Figure 82: Area Talkgroup Call- Call Ready Screen

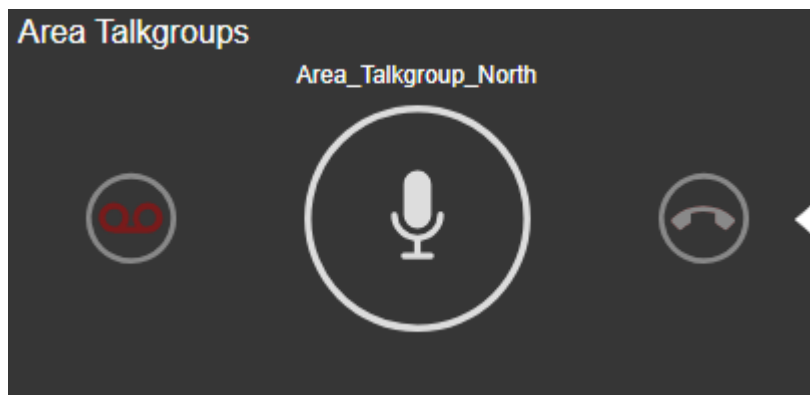

- 3 Use the Call Activity Window to initiate area talkgroup call by clicking and holding the PTT button. A Call type status appears in the header area of the Call Activity window.

Figure 83: Area Talkgroup Call Active Window

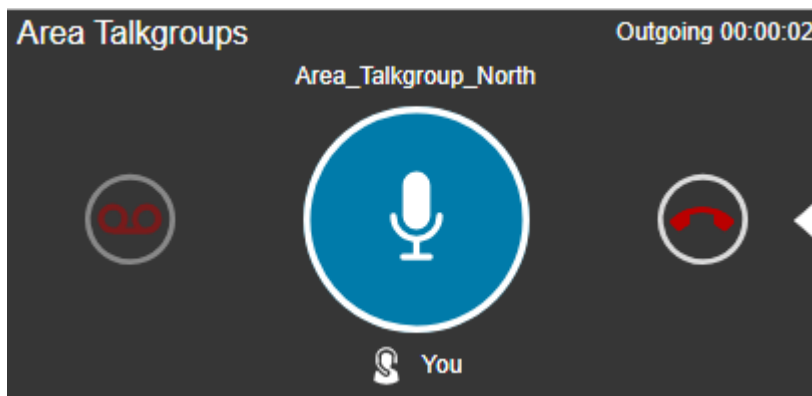

The following information displays:

- The Call Type displays in the header area of the call activity window.
- The Push to Talk button allows you to take the floor. The PTT button changes to area talkgroup PTT button.
- The name of the area talkgroup shows above the PTT icon.
- The name of the person speaking shows below the PTT icon.
- The Area Talkgroup Members list shows when you click the **Slider** button on the right side of the call activity window. The area talkgroup member list allows you to see the names of the talkgroup members in the call. The Slider button is disabled when the call is not initiated.
- The Record button can be used to record the call.

- The End Call button allows you to drop from the current call.
- 4 To talk, click and hold the on-screen PTT button. The PTT button turns complete blue. When you finish talking, release the on-screen PTT button again to allow other fleet members to speak.
 - 5 When a fleet member takes the floor, the on-screen PTT button turns border and PTT icon blue. The name of the talker displays above the call icon in the Call Activity window.
 - 6 To drop yourself from the call, click **End Call**. The call continues without you. If no one takes the floor, the call automatically ends.

7.2.5


Placing a One-to-one (1-1) Call

When and where to use: To place a PTT call to an individual fleet member, follow these steps:

Procedure:


- 1 Select the fleet member from any of the windows that is, Contacts and Talkgroups, Map Information, Map Selection list, Alerts, Message, Call logs, or Alert Logs.
- 2 To place a one-to-one call, click the **Call** icon. You can see the Call Ready screen at the Call activity window.

Figure 84: One-to-One Call - Call Ready Screen

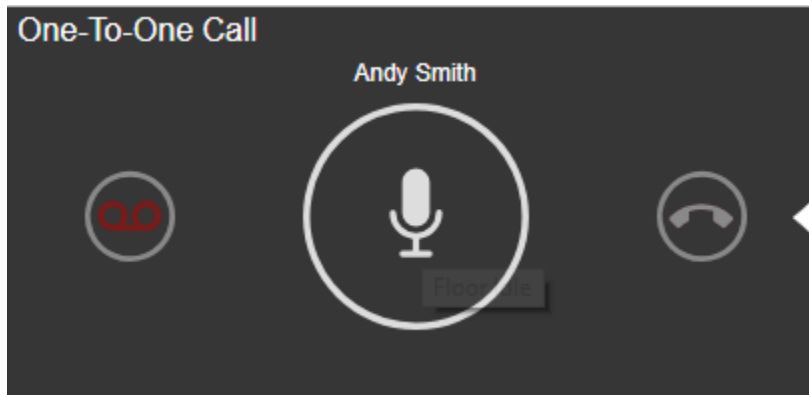

- 3 A call starts, and the same information is shown in the Call Activity window as for a talkgroup call. The Name of the member called in one-to-one call is shown as above the PTT icon.

Figure 85: One-to-one Call Active Window

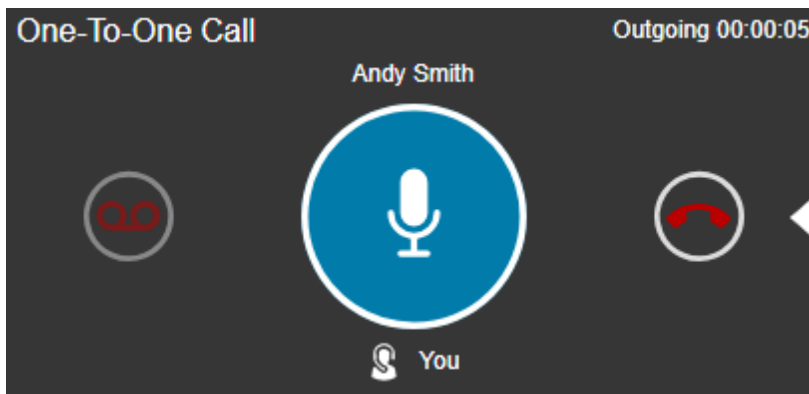

7.2.6


Placing a Call from the Alerts Window

When and where to use: To place call from the Alerts window, follow these steps:

Procedure:

- 1 Select and right-click on the alert in the Alerts window.
- 2 To call, click the **Call** icon.

Figure 86: Make Call from Alerts Window

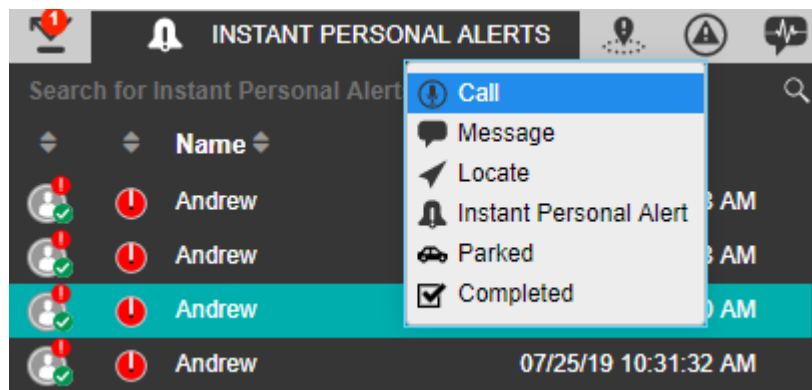

7.2.7


Placing a Call from the Map

When and where to use: To call from the Info window on a map, follow these steps:

Procedure:

- 1 Click the **Marker** icon for the fleet member on the map to display the info window.
- 2 To call, click the **Call** icon.

Figure 87: Info Window

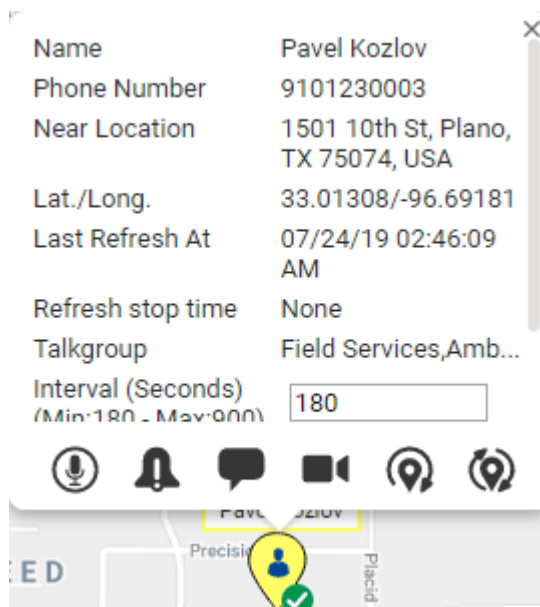



NOTICE: Refer to [Selecting Multiple Fleet Members on a Map on page 176](#) for information on how to display a Selection List window.

7.2.8


Placing a Call from the Selection List window on the map

When and where to use: To call from the Selection List window on the Map, follow these steps:

Procedure:

- 1 Select the check boxes for the individual fleet members in the Selection List window. Click the talkgroup or my talkgroup in the Selection List window.
- 2 To call, click the **Call** icon.

Figure 88: Selection List Window

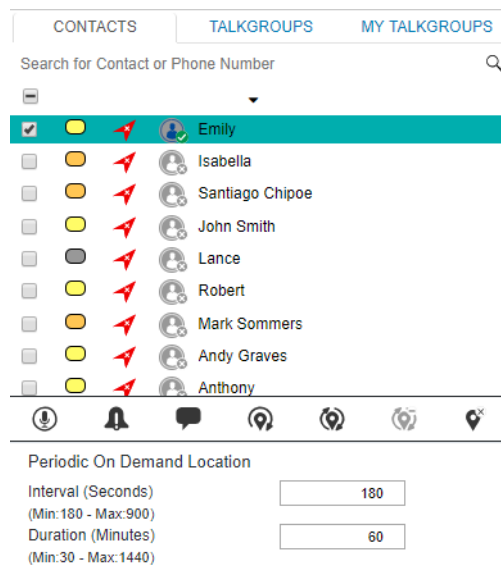

7.2.9


Placing a Call from Call Logs

When and where to use: To place call from the Call Logs window, follow these steps:

Procedure:

- 1 Select **Logs** and then select **Call Logs**
- 2 Select and right-click on a conversation row from the Call Logs history.
- 3 To call, click the **Call** icon.
 - 1 For a One-to-one call, the call returns to the originating fleet member.
 - 2 For a Talkgroup call, the call returns to the members of the talkgroup.
 - 3 For a Quick Group call, the call returns to all the fleet members of the Quick Group call.
 - 4 For a Broadcast Group call, the call is returns to the talkgroup if you are the broadcaster for the talkgroup.
 - 5 For a Broadcast Group where you are a member and not a broadcaster, initiating the call to the talkgroup results in an error.

Figure 89: Make Call from Call Logs History

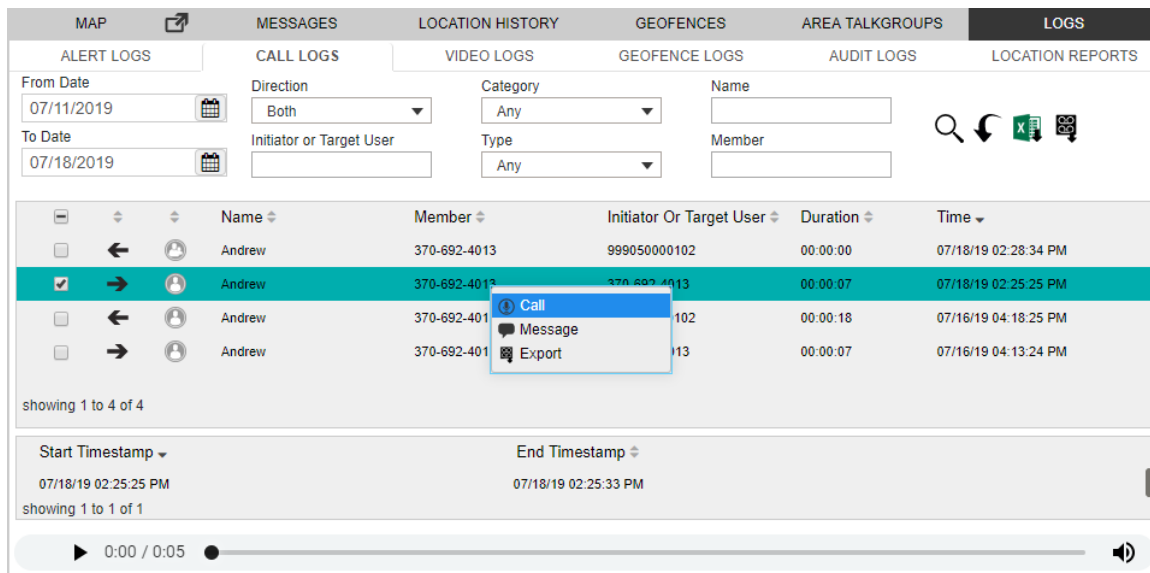

7.2.10


Placing a Call from Alert Logs

When and where to use: To call from the Alert Logs Window, follow these steps:

Procedure:

- 1 Select **Logs** and then select **Alert Logs**.
- 2 Select and right-click on an alert from Alert Logs history.
- 3 To call, click the **Call** icon.
 - 1 For a One-to-one Missed Call alert, the call returns to the originating fleet member.
 - 2 For a Missed Talkgroup Call alert, the call returns to the members of the talkgroup.
 - 3 For a Missed Quick Group Call alert, the call returns to the originator.
 - 4 For a Missed Broadcast Group Call alert, the call returns to the members of the talkgroup if you are a broadcaster.

Figure 90: Make Call from Alert Logs History

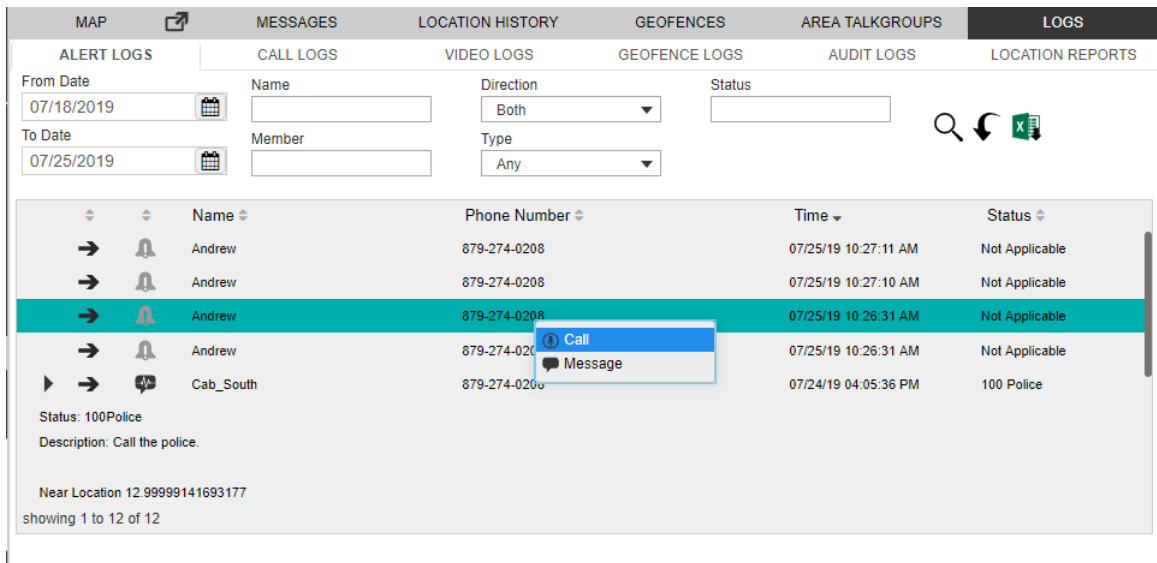

7.2.11


Placing a Call from Geofence Logs

When and where to use: To call from the Geofence Logs Window, follow these steps:

Procedure:

- 1 Select **Logs** and then select **Geofence Logs**.
- 2 Select and right-click on an alert from Geofence Logs history.
- 3 To call, click the **Call** icon.

Figure 91: Make Call from Geofence Logs History

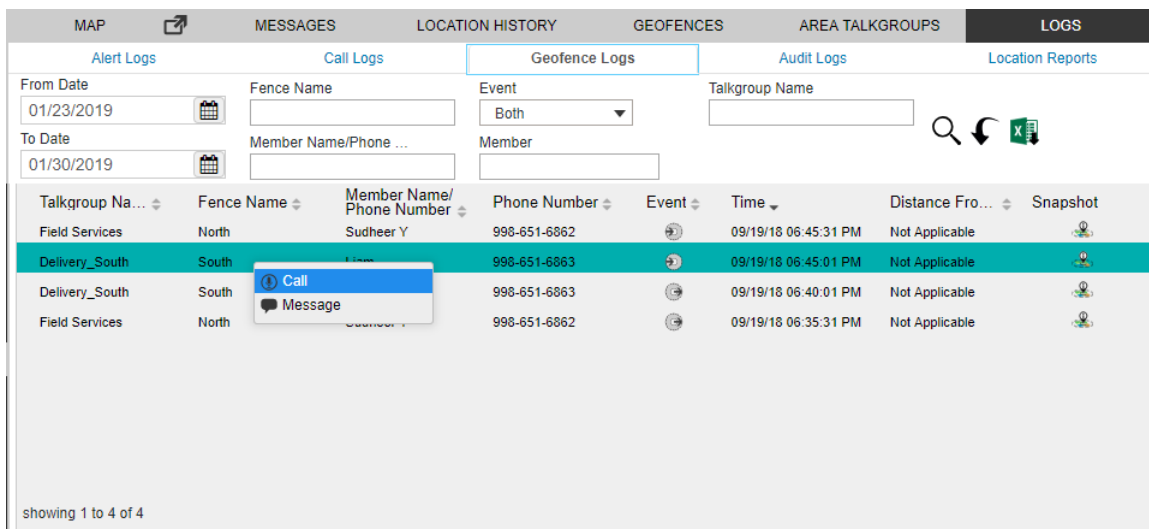

7.2.12


Placing a Call from Message

When and where to use: To place call from the Message window, follow these steps:

Procedure:

- 1 Select the **Messages** tab and then select the message.
- 2 To call, click the **Call** icon.

Figure 92: Make Call from Message Tab

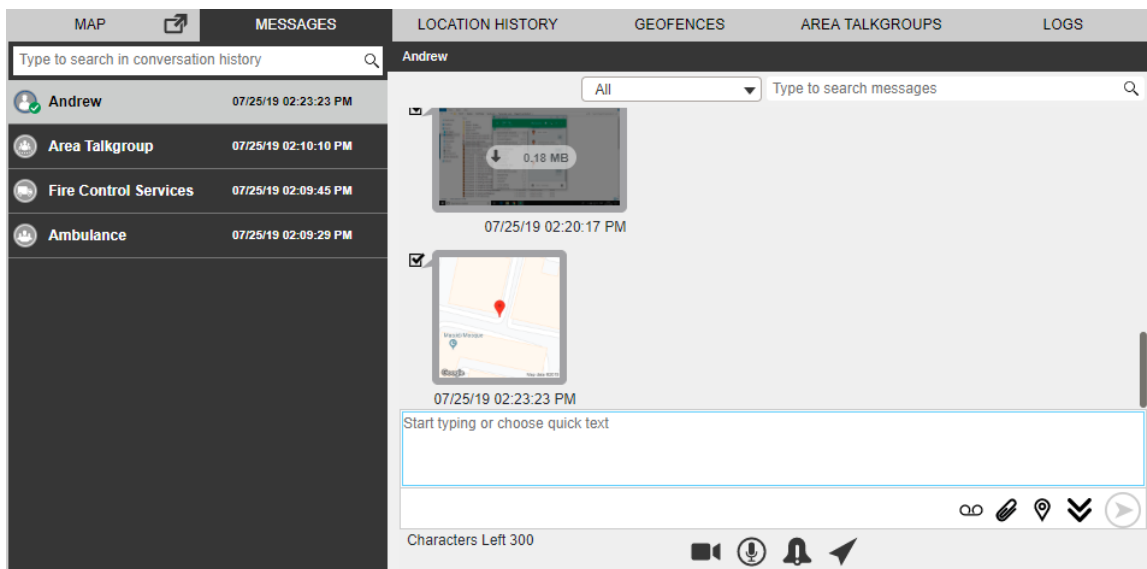

NOTICE: The tones can be enabled/ disabled to set the call tones accordingly. For more information on how to add call tones refer to the [Tones on page 247](#) section in this document.

7.3

Receiving Calls

You can receive an incoming call from fleet members or anyone who dials your number. Any fleet member can directly contact you using a one-to-one call. The Dispatch receives call only when you are idle (meaning that you are not currently participating on a call).

If you are on a one-to-one call and a monitored talkgroup call starts, the call details show on the Call Activity window and the monitored talkgroup call not barges in. The talkgroup name for a one-to-one call shows as "None".



NOTICE: If you are using chrome browser and you receive a PTT call and you are not in the active Dispatch tab or if the Dispatch is minimized, then you can listen to the PTT call but when you navigate to the dispatch active tab, the call timer in the call activity window starts from zero. The Dispatch does not display call ready screen for a received one-to-one call. The call barges in and you join the call immediately. An incoming quick group or a talkgroup call that is not in Monitored with a priority assigned do not barge in and a missed call alert displays when the incoming quick group call ends.

Figure 93: Incoming Call Active Window



A **Dispatcher** icon displays next to the talker when another participant of the call is a dispatcher. You automatically join the talkgroup call only if monitored on the talkgroup. If the talkgroup is not monitored and a talkgroup call is initiated, you receive a talkgroup missed call alert at the end of the talkgroup call.

7.4

Voice Message Fall Back

If the call to called fleet member does not be delivers (for example, Do Not Disturb, Offline, Busy, and Temporarily Unavailable) then the PTT Voice Message fall back converts PTT call into a voice message. There is a minimum length of recording that is needed for a valid voice message fall back. Therefore, when your voice message fall back occurs, and the recording is less than minimum time, then the voice message is discarded.

When and where to use: To initiate voice message fall back recording, follow these steps:

Procedure:


- 1 Select the fleet member or talkgroup where all the fleet members are in Do Not Disturb or Offline from any of the windows that is, Contacts and Talkgroups, Map Information, Map Selection, Alerts, Message, Call logs, or Alert Logs.
- 2 Click the **Call** icon. The call button in the Call Activity window turns to .
- 3 Click and hold the PTT record button for more than the minimum length of recording.
- 4 The recorded voice is delivered to the fleet members as a voice message.
- 5 The voice message is shown in the Message tab.

Figure 94: Voice Message Fall Back



7.5

Rejoining a Talkgroup Call

If you drop from a talkgroup call, for example, using the End Call button, you can re-join the call by initiating a call to that talkgroup. You can call the talkgroup from the alert, alert logs, call logs, messages, map info window, map selection list, monitored talkgroups, or from My Talkgroups tab. You cannot rejoin a broadcast group or a quick group call that you drop.




NOTICE: If the call ends before you try to re-join, you start a new call to that talkgroup.

Joining a Monitored Talkgroup Call

If you want to join an active monitored talkgroup, click the **Call** button for a monitored talkgroup and you can join the call. You can also join the call from the Contacts and Talkgroups window by clicking in-line call button against the talkgroup.

Figure 95: Monitored Talkgroup Call

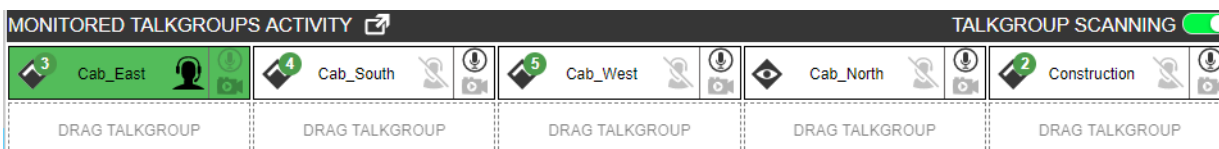


NOTICE: You can rejoin the ongoing call from any of the windows where the call icon is shown for that talkgroup.

7.6

Setting the PTT Call Volume

Call volume can be controlled during a PTT call by increasing or decreasing the volume of your Laptop/PC.

Figure 96: Call Volume

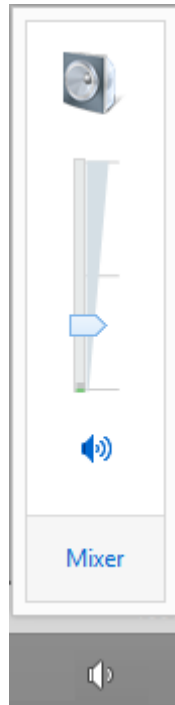

Chapter 8

Emergency

You can select the fleet member (target user) and initiate an emergency directly or can perform user check before initiating emergency from the user check window. Depending on the CAT configuration, you receive an alert and an emergency call. If an emergency state is declared and you are a participant of the emergency destinations, then an emergency alert shows under the Emergency Alerts tab. You can see other dispatch participants in the emergency call. If you are on another ongoing PTT, broadcast or scanned talkgroup call, and an emergency call starts then the emergency call barges in, and you join that emergency call. If you are already on an emergency call and you receive a new emergency call, then the new emergency call shows under the Emergency Alert tab. You can end the ongoing emergency leg of the call for itself and join another emergency call. You can cancel the emergency for the fleet member. You must select the reason for the emergency cancellation by marking if the emergency declared is False or Valid. You can initiate an emergency on behalf of the fleet member and participate in case of any life- threatening situation. Emergency calls in nature are always the highest priority than any other PTT call and preempt any ongoing call except another ongoing emergency call.

8.1


Initiate an Emergency


When and where to use: To initiate an emergency for a fleet member, follow these steps:

Procedure:

- 1 From the Contacts and Talkgroup tab, select the fleet member (whom you are authorized) to whom you want to initiate the emergency.


Figure 97: Start Emergency - Contacts and Talkgroups Window

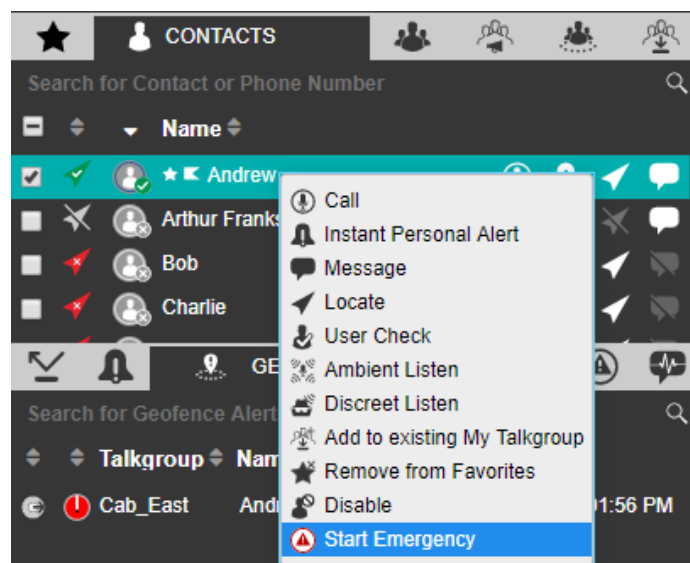

 **NOTICE:** Make sure that the presence status of the fleet member is “Available” or “DND” to which emergency is being initiated.


- 2 Right-click and select **Start Emergency**.
- 3 A "START EMERGENCY" confirmation window displays.

Figure 98: Start Emergency Confirmation Window

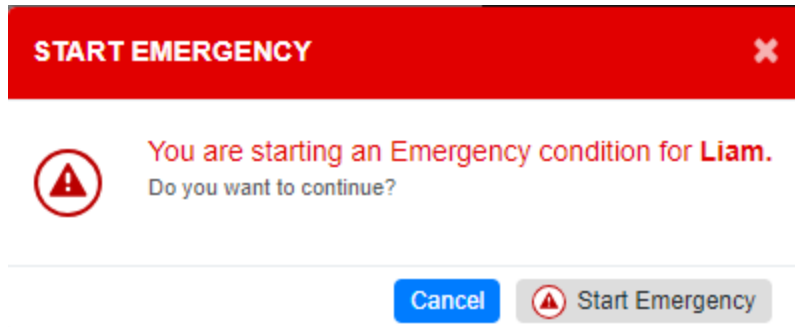


- Click **Start Emergency** to start the emergency.
 - Click **Cancel** to cancel the emergency initiation.
- 4 A toast message is received, and an emergency alert is sent to the emergency destinations of the fleet member.

Figure 99: Toast Message- Start Emergency

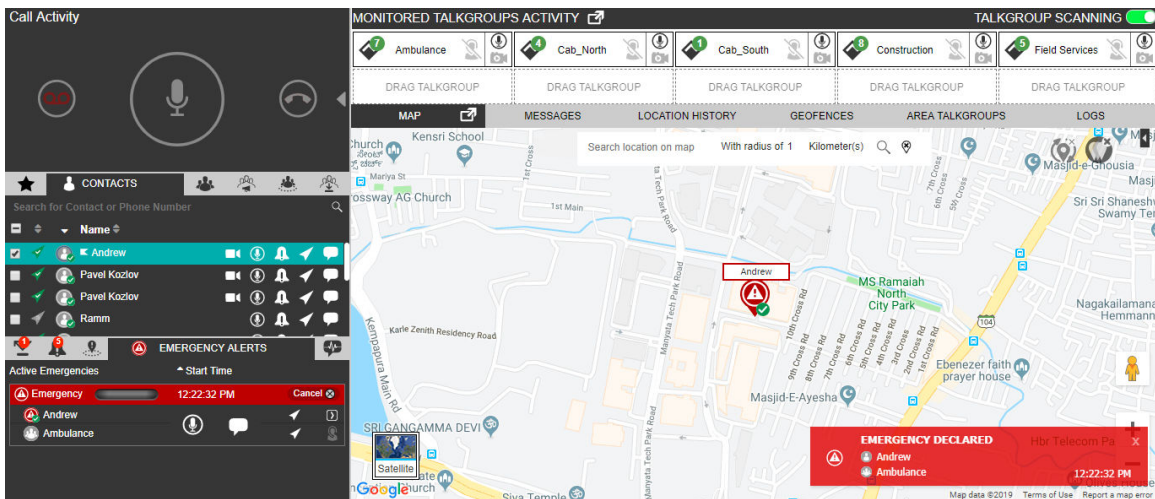

If the fleet member is configured for automatic emergency initiation, then you receive an emergency call along with the emergency alert. To join the emergency, click the **Call** icon in the call activity window.

Figure 100: Automatic Emergency Initiation

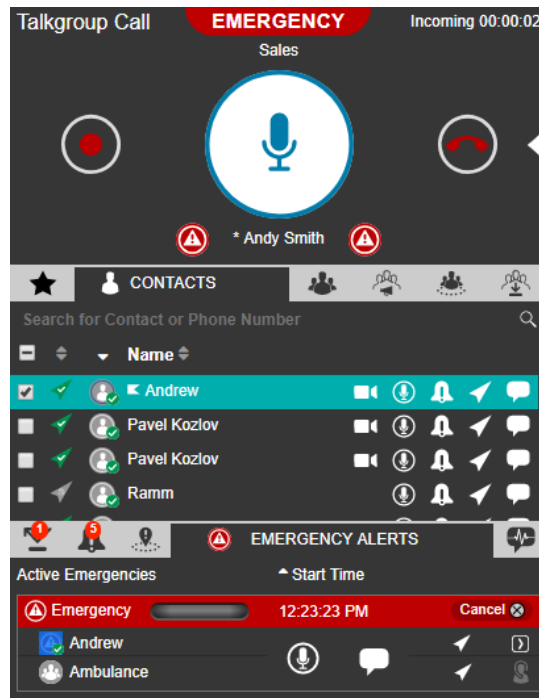


8.2

Received Emergency

If an emergency is initiated and you are part of that emergency destination, then you receive an alert and that shows in the Emergency Alert tab under the Alerts window. You can do the following from the received emergency alert:

When and where to use: On the alert, click one of the following:


Figure 101: Emergency Alert tab

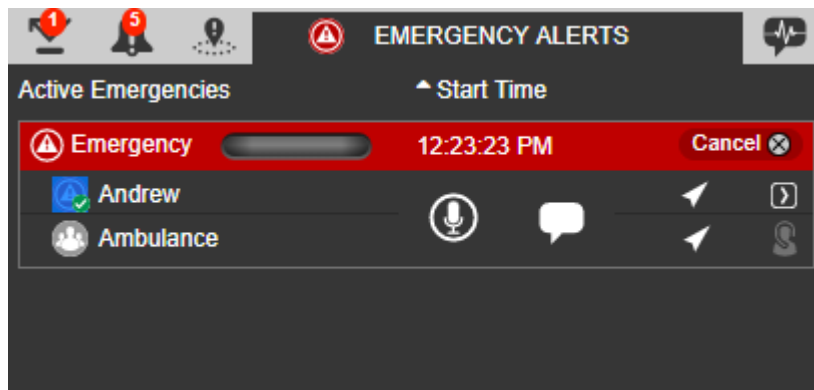

- **Call** icon to call. The call is placed to the configured destination.
- **Locate** icon to locate the fleet member or the talkgroup member (if the destination is set to talkgroup) on the map
- **Message** icon to send a message (text, multimedia and location). The message is sent the configured destination.
- **More** icon and initiate user check, ambient listening and discreet listening.

A **No Dispatcher Joined Emergency** icon on the emergency alert indicates that no dispatcher has joined the emergency. If another dispatcher has joined that emergency then the indicator turns to **Other Dispatcher Joined Emergency**. If you have joined the emergency, then the indicator turns to **Dispatcher Joined Emergency**. A no dispatcher in call **No Dispatcher in Call** or **Dispatcher on Call** icon on the alert shows that the dispatcher joined the emergency. You can click the **Dispatcher Member List** icon to view the dispatchers joined the emergency.

Figure 102: Initiate User Monitoring - Emergency Alerts

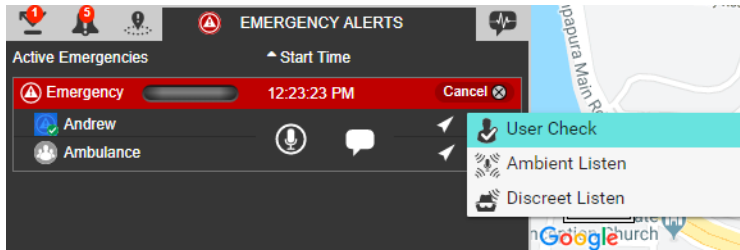

8.3 Emergency Cancellation

You can cancel the emergency for the fleet member and can mark whether the emergency declared is False or Valid.

When and where to use: To cancel the emergency and confirm, follow these steps:

Procedure:

- 1 From the Emergency Alert or User Check window, click **Cancel**.

Figure 103: Cancel Emergency - Emergency Alert Window



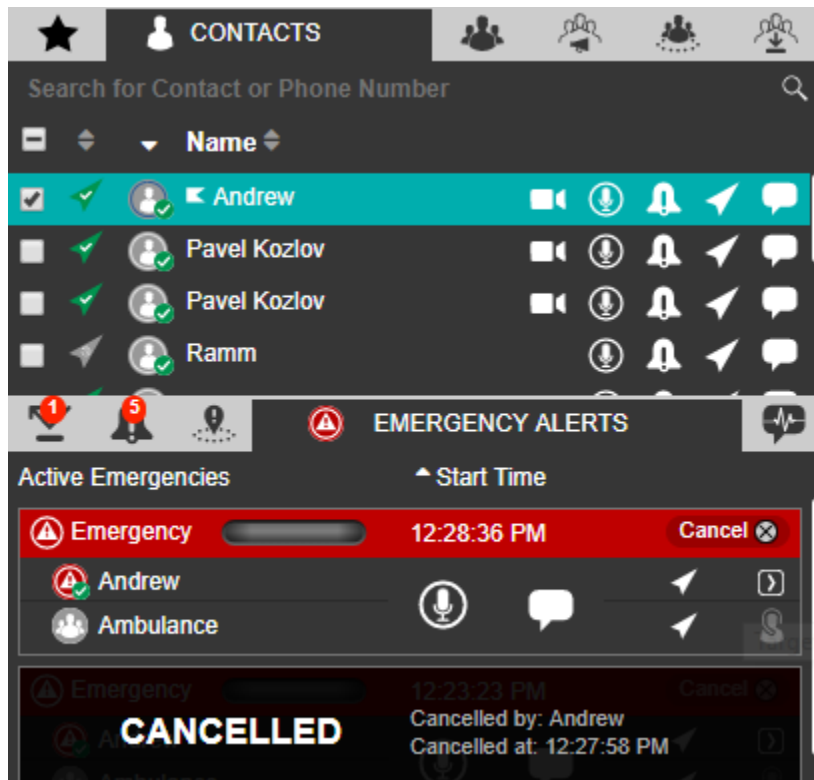


Figure 104: Cancel Emergency - User Check Window

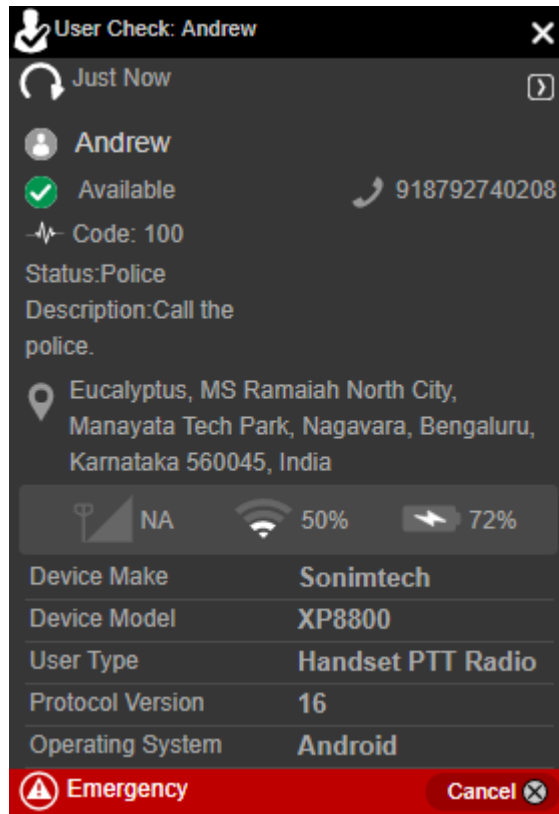

2 A confirm emergency confirmation box displays.

Figure 105: Confirm Emergency Confirmation Box

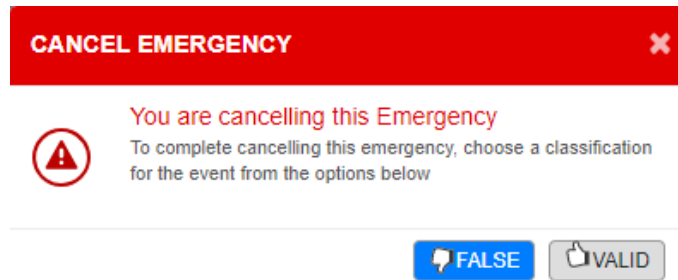


3 Confirm the emergency by selecting **False** or **Valid**.

Chapter 9

Integrated Secured Messaging

You can select a contact or talkgroup from any of the window such as Contacts and Talkgroups, Map info, Map Selection List, Alerts, Monitored Talkgroup Activity, Call and Alert Logs and send a message. One-to-one messages provide the sender with confirmation that the content was delivered. Multimedia content can include image, video, audio, and document. The image, audio, document and video can be browsed from the PC and sent as an attachment. You can send a voice message from a prerecorded (audio clip) from the local PC or record-and-send (within Dispatch). When you decide to send a voice message, you can record, preview, rerecord, erase, and send the voice message. Location messages allow you or fleet member to send and receive location information. You can select the location pin icon to share location or search for any address or any point of interest on Google Maps and share it with the fleet members. Also, you can view the received location of the fleet member. A notification displays whenever you receive a message. You can delete or forward the message (text, location or multimedia) to the other fleet member. The number of unattended messages is shown with a badge on the message icon next to the contact or talkgroup in the Contacts and Talkgroups window, header of the Message tab and on each conversation history. You can search for the messages by date, name, or part of conversation text in the search area of the message. You can browse or drag and drop any multimedia file from the local drive into the message window of a contact or talkgroup. You can preview and add additional text with the attachment before sending it to the fleet members. Secured Messaging allows you to send and receive secure text messages, multimedia content, and location information to and from other fleet members.

 Figure 106: Search- Message

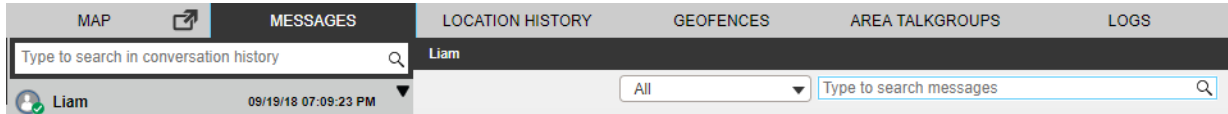

9.1 Supported Formats for the Multimedia

The following table lists the supported multimedia file formats:

Table 4: Supported Multimedia Formats

Multimedia Type	Supported Format
Image	JPEG
	PNG
	GIF 87a
	GIF 89a
	Animated GIF 89a
Video	MPEG-4*
Audio	AAC
	MP3
Document	DOC, DOCX PDF

Multimedia Type	Supported Format
	XLS, XLSX PPT, PPTX



NOTICE: The maximum character limit for text message is based on the server configuration (Default- 300). Dispatch does not allow sending an attachment if there is an ongoing video stream.

9.2


Sending Message to a Contact

When and where to use: To send a text message to a contact, follow these steps:

Procedure:

- 1 Select the contact by:
 - Clicking the **Contact** tab from the Contacts and Talkgroup or Map Selection List window
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab shows below the monitored talkgroup activity window.
- 3 Type the message in the text area and click the **Send** icon.

Figure 107: Send Text Message to Contact

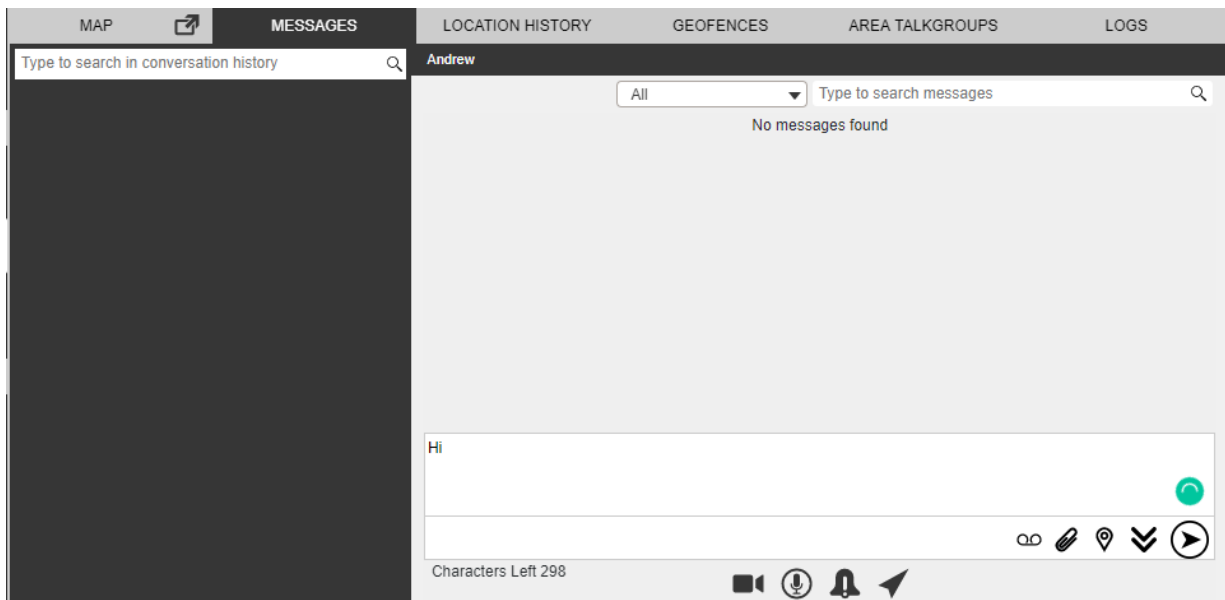

9.2.1

Sending document to a contact


When and where to use: To send document to a contact, follow these steps:

Procedure:

- 1 Select the contact by
:


- Clicking the **Contact** tab from the Contacts and Talkgroups or Map Selection List window and select the Contact.
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup window.
 - 3 Click the **Attach Files** icon.
 - 4 Select the **Attach Document** icon. A file selection window opens.


Figure 108: File Selection Window - Document

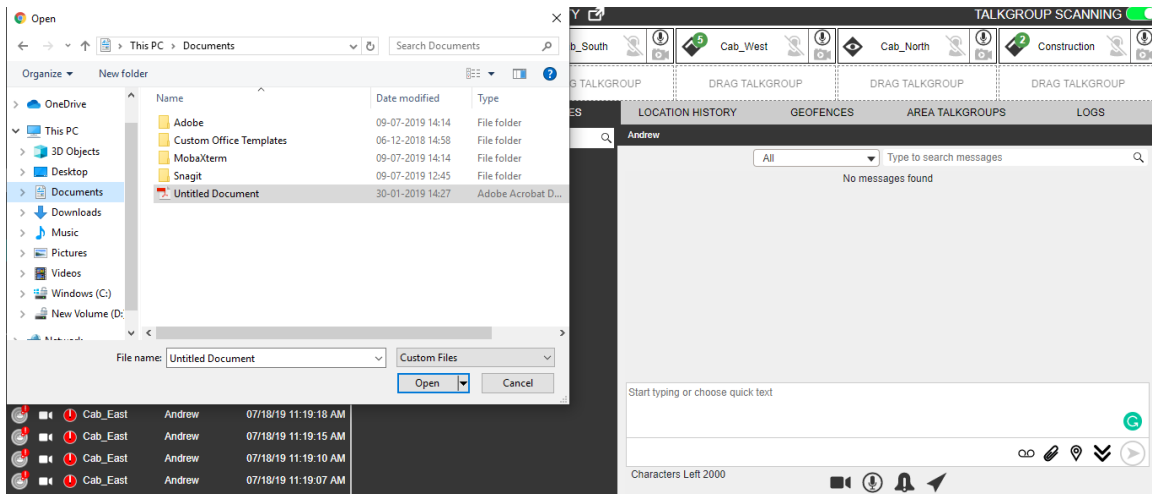

- Select the file and click **Open**.
 - Click **Cancel** to cancel the action.
- 5 Click the **Send** icon to send the file.

Figure 109: Send Document to Contact

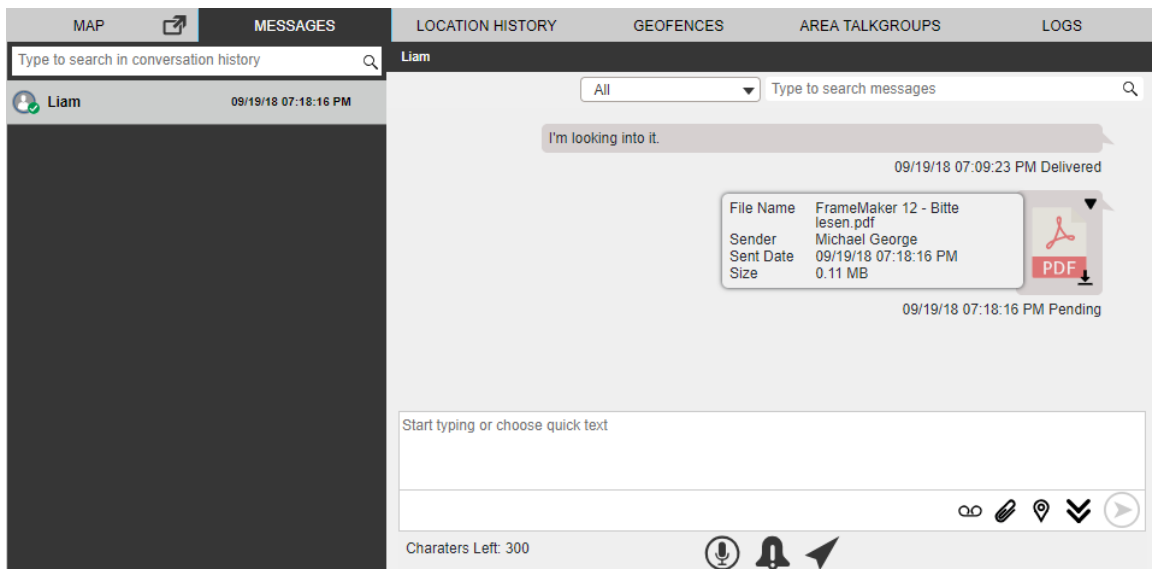

 **NOTICE:** You can also add text with the document attachment.


9.2.2 Discarding the attached document

When and where to use: To discard the attached document, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 110: Delete Confirmation Window

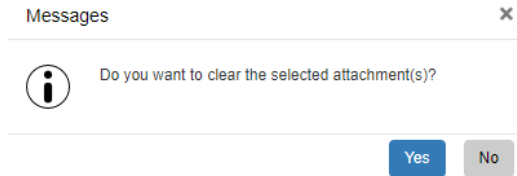

- Click **Yes** to delete.
- Click **No** to cancel the action.


9.2.3 Sending a photo to a contact

When and where to use: To send a photo to a contact, follow these steps:

Procedure:

- 1 Select the contact by
:
 - Clicking the **Contact** tab from the Contacts and Talkgroups or Map Selection List window.
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.
- 4 Select the **Attach Photo** icon. A file selection window opens.


Figure 111: File Selection Window- Photo

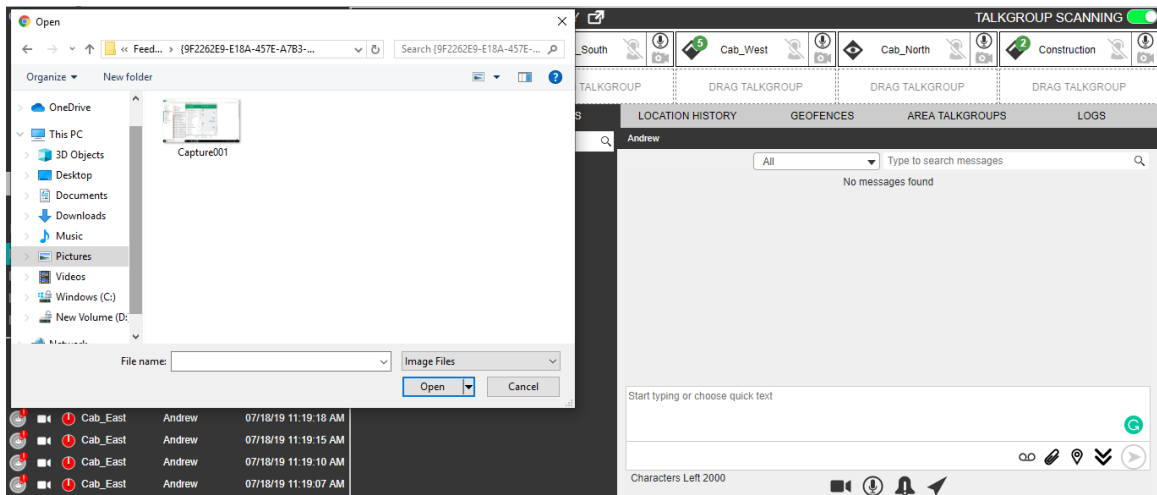

- Select the photo and click **Open**.

- Cut an image or part of an image and paste.
 - Click **Cancel** to cancel the action.
- 5 Click the **Send** icon to send the photo.

Figure 112: Send Photo to a Contact

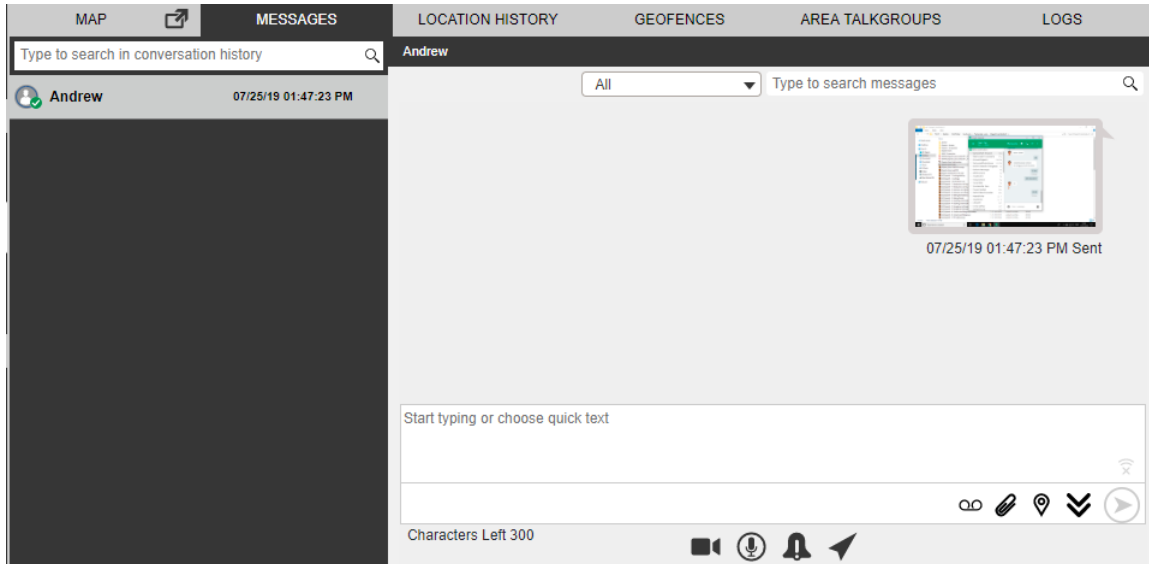

9.2.4


Discarding the attached photo

When and where to use: To discard the attached photo, follow these steps:

Procedure:

- 1 Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 113: Delete Confirmation Window

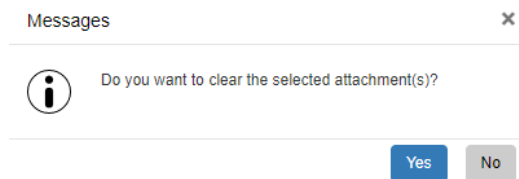

NOTICE: You can also add text with the photo attachment.

- Click **Yes** to delete.
- Click **No** to cancel the action.

9.2.5

Sending video to a contact


When and where to use: To send video to a contact, follow these steps:

Procedure:

- 1 Select the Contact by:
 - Clicking the **Contact** tab from the Contacts and Talkgroups or Map Selection List window.


- Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
 - 3 Click the **Attach Files** icon.
 - 4 Select the **Attach Video** icon. A file selection window opens.

Figure 114: File Selection Window - Video

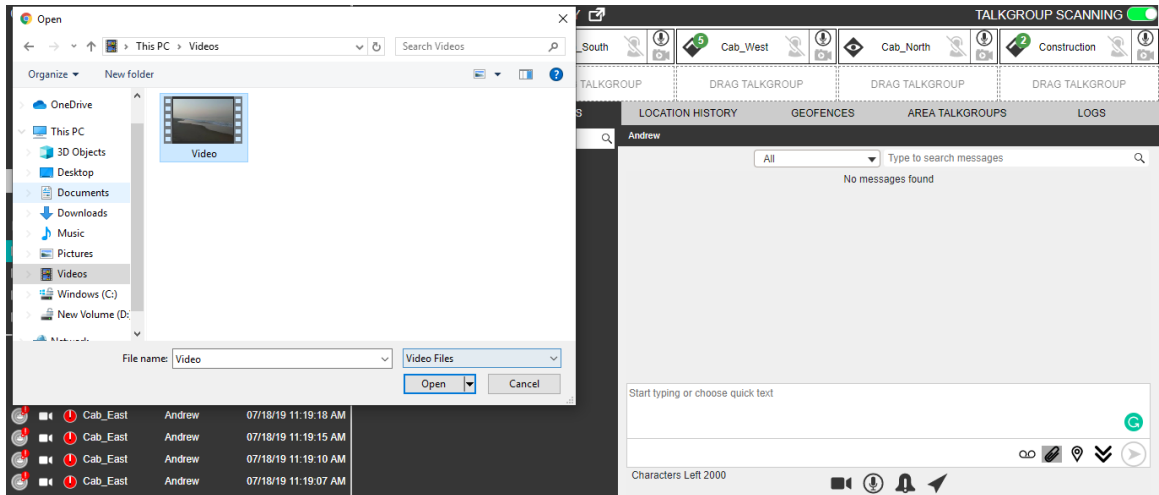

- Select the video file and click **Open**.
 - Click **Cancel** to cancel the action.
- 5 Click the **Send** icon to send the video file.

Figure 115: Send Video to Contact

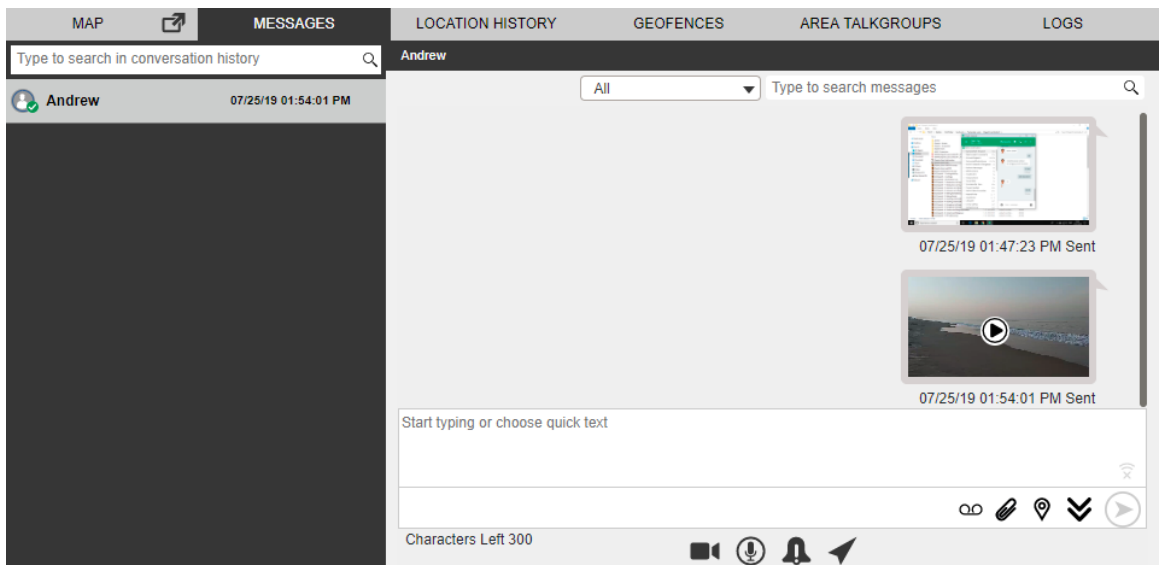

NOTICE: You can also add text with the video attachment.

9.2.6


Discarding the attached video

When and where to use: To discard the attached video, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 116: Delete Confirmation Window

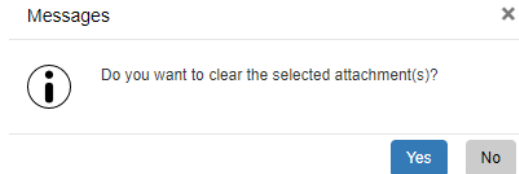

- Click **Yes** to delete.
- Click **No** to cancel the action.

9.2.7

Sending audio to a contact


You can send audio message either by recording from the Dispatch application or pre-recorded audio file from your local PC.

When and where to use: To record and send an audio message from the Dispatch application, follow these steps:

Procedure:


- 1 Select the contact by:
 - Click the **Contact** tab from the Contacts and Talkgroups or Map Selection List window.
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Recording** icon.

Figure 117: Record Voice message and Send

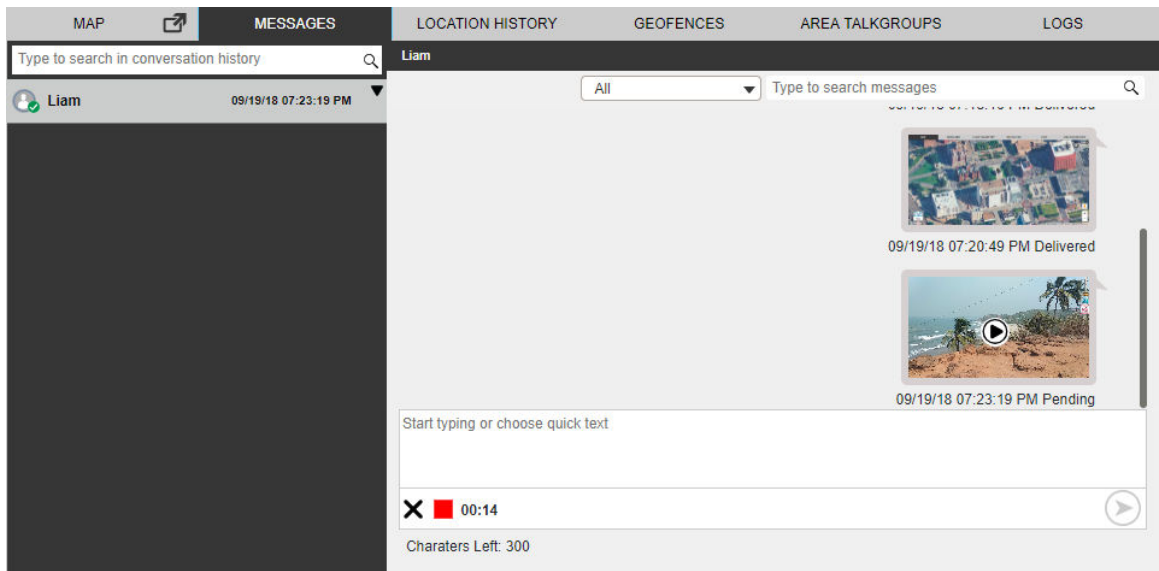

- 4 Record the audio from your device.
 - Click the **Stop** icon to stop the recording.
 - Click the **Cancel** icon to cancel the recording.
- 5 Click the **Send** icon to send the recorded audio.

Figure 118: Send Recorded Voice Message

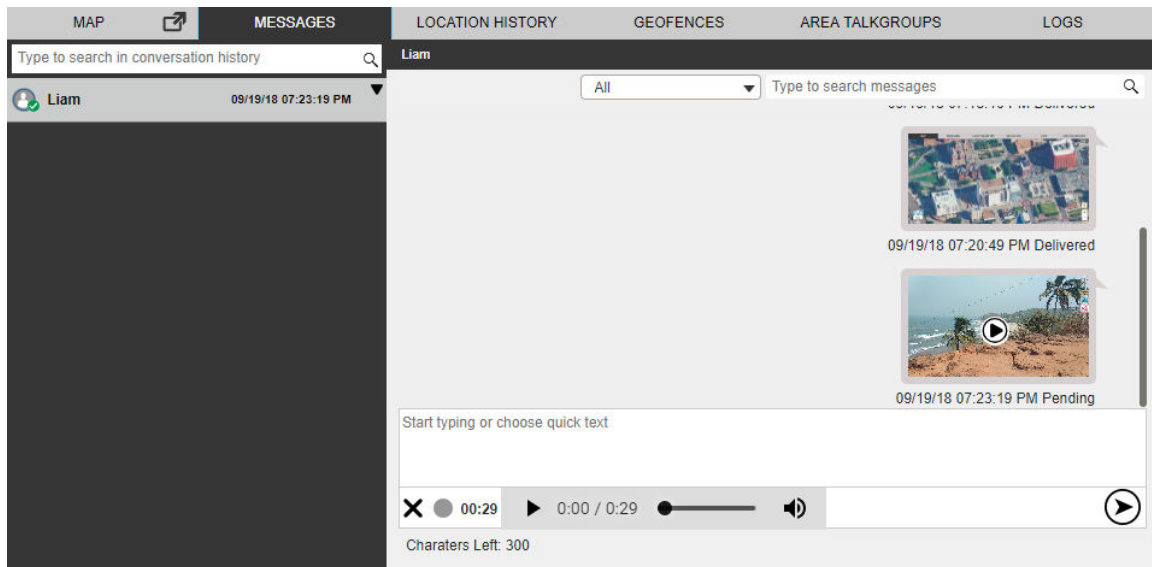

You can preview the recorded audio by clicking the **Play** icon before sending to the contact.

9.2.8


Sending a pre-recorded audio file from your local PC

When and where to use: To send a pre-recorded audio file from your local PC, follow these steps:

Procedure:


- 1 Select the contact by:
 - Clicking the **Contact** tab from the Contacts and Talkgroups or Map Selection List window.
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.
- 4 Select the **Attach Audio** icon. A file selection window opens.


Figure 119: File Selection Window- Audio

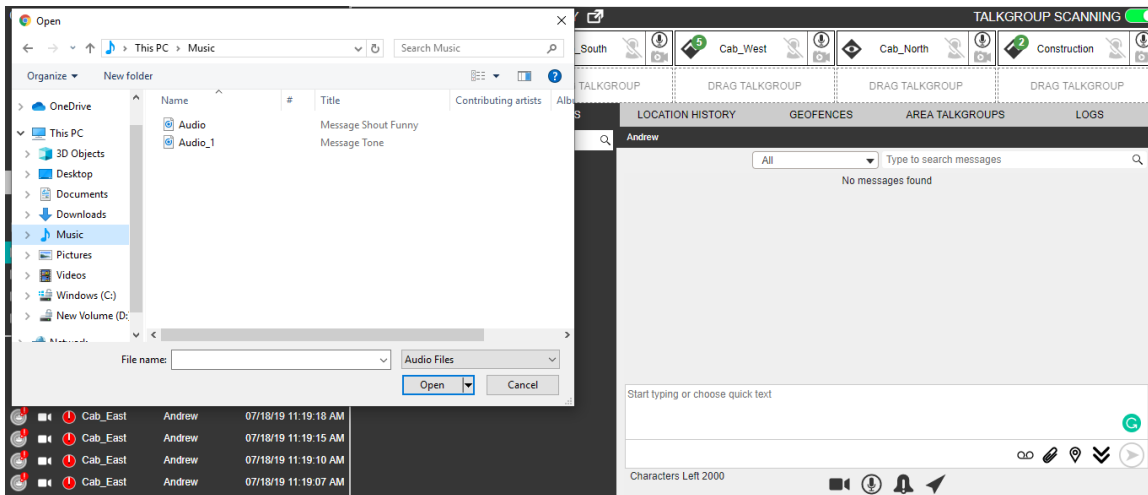

- Select the audio file and click **Open**.
 - Click **Cancel** to cancel the action.
- 5 Click the **Send** icon to send the audio file.

Figure 120: Send Audio to Contact

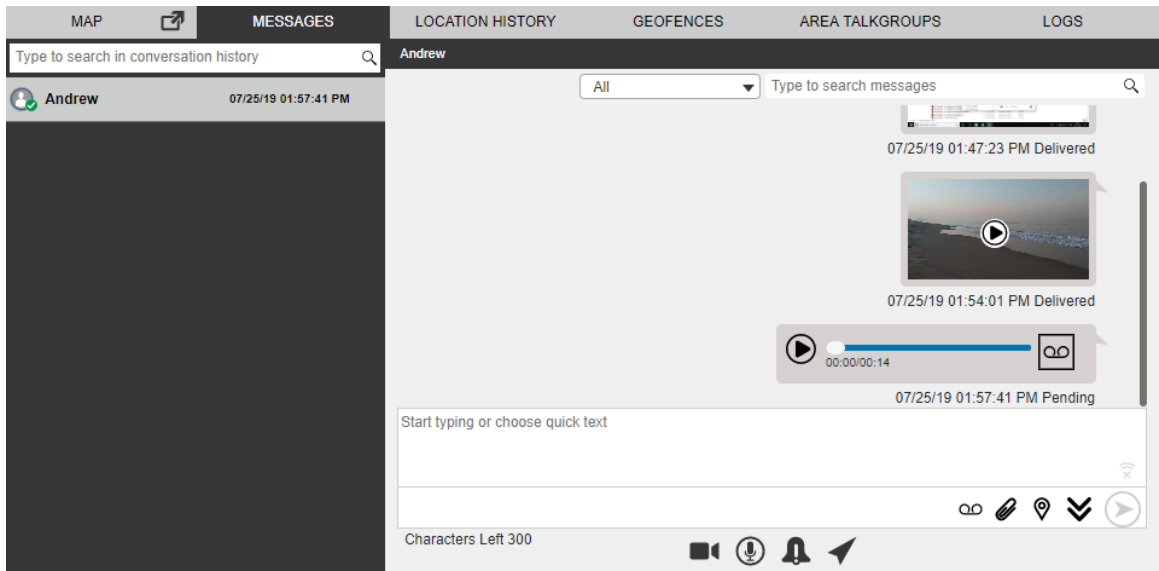

 **NOTICE:** You can also add text with the audio attachment.

9.2.9


Discarding the attached audio

When and where to use: To discard the attached audio, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 121: Delete Confirmation Window

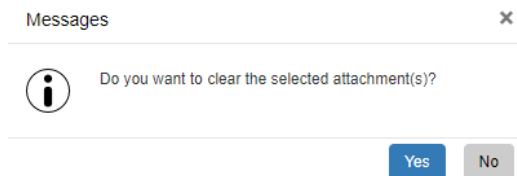

- Click **Yes** to delete.
- Click **No** to cancel the action.

9.2.10

Sharing Location to a contact


When and where to use: To Share Location to a contact, follow these steps:

Procedure:

- 1 Select the contact by:
 - Selecting the Contacts tab from the Contacts and Talkgroups or Map Selection List window
 - Right-clicking on contact in Alerts, Call Logs, and Alert Logs window.
 - Clicking the **Map Marker** of the contact on the map to view the Map Info window.


- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Share Location** icon. A map with location pin opens.

Figure 122: Choose Location Window

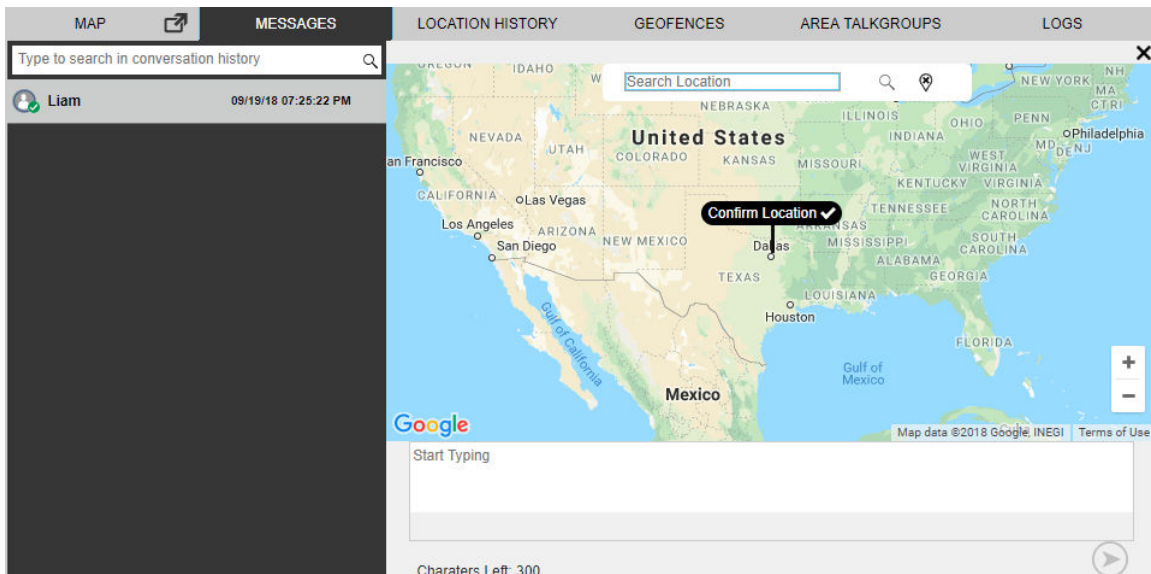

- 4 Choose a location you want to share by moving the map and dropping the location pin. You can also search for the location address to drop the location pin.
- 5 Click the **Confirm Location** icon.
 - Click the **Send** icon to share the location to the contact.
 - Click **Cancel** to cancel the action.

Figure 123: Share Location to Contact

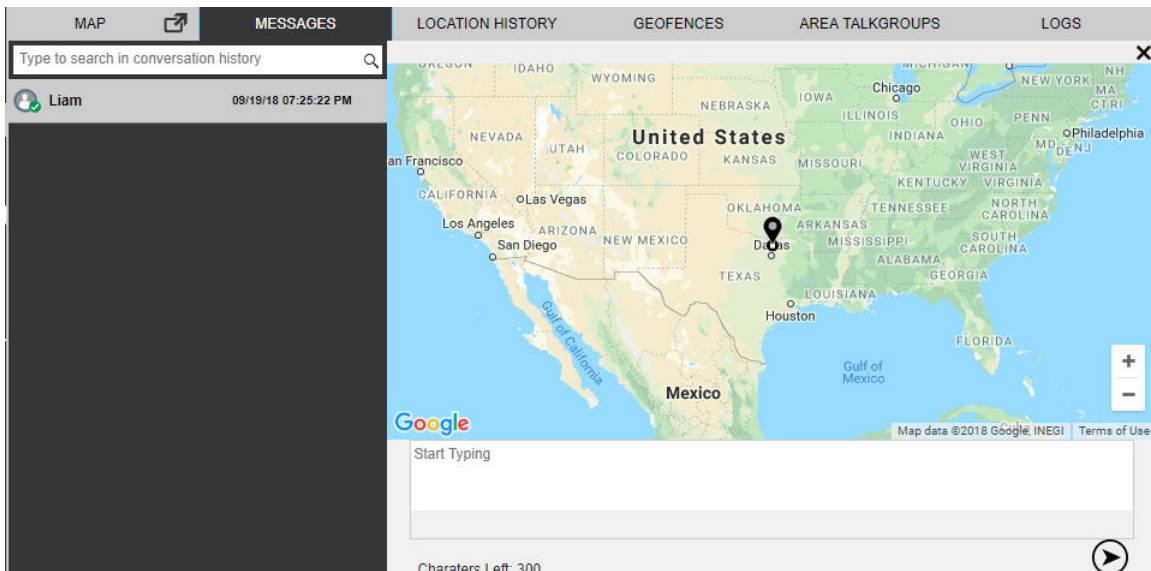

9.3

Sending Message to Quick Group

The Dispatch allows you to send and receive text and multimedia message to and from the fleet members.

9.3.1


Sending text message to a quick group

When and where to use: To send text message to a quick group, follow these steps:

Procedure:

- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Enter the text in the text area and click the **Send** icon.

Figure 124: Send Text Message to Quick Group

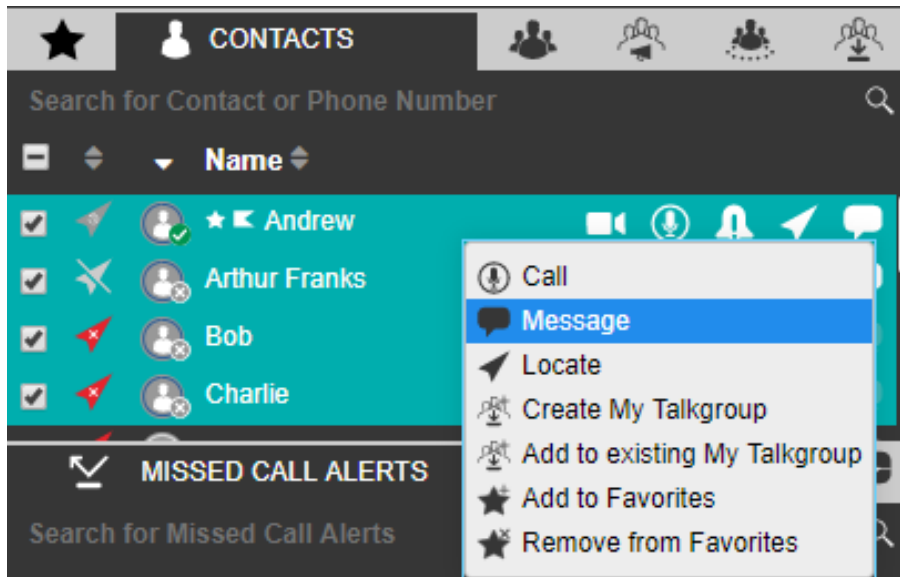

9.3.2


Sending file to a quick group

When and where to use: To send file to a quick group, follow these steps:

Procedure:


- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Attach Files** icon.
- 5 Select the **Attach Document** icon. A file selection window opens.


Figure 125: File Selection Window - Document - Quick Group

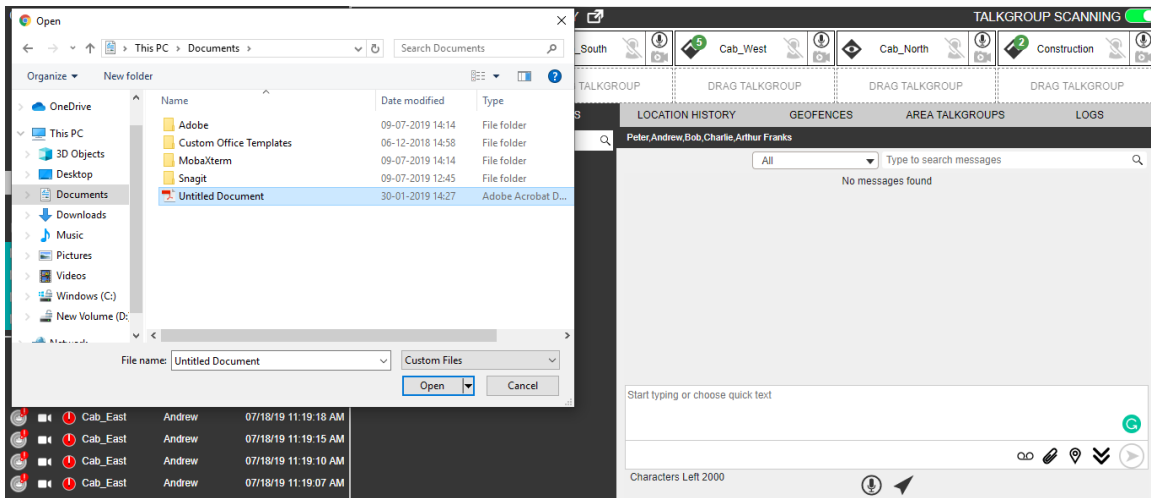

- Select the file and click **Open**.
 - To cancel the action, click **Cancel**.
- 6 To send the file, click the **Send** icon.

Figure 126: Send Document to Quick Group

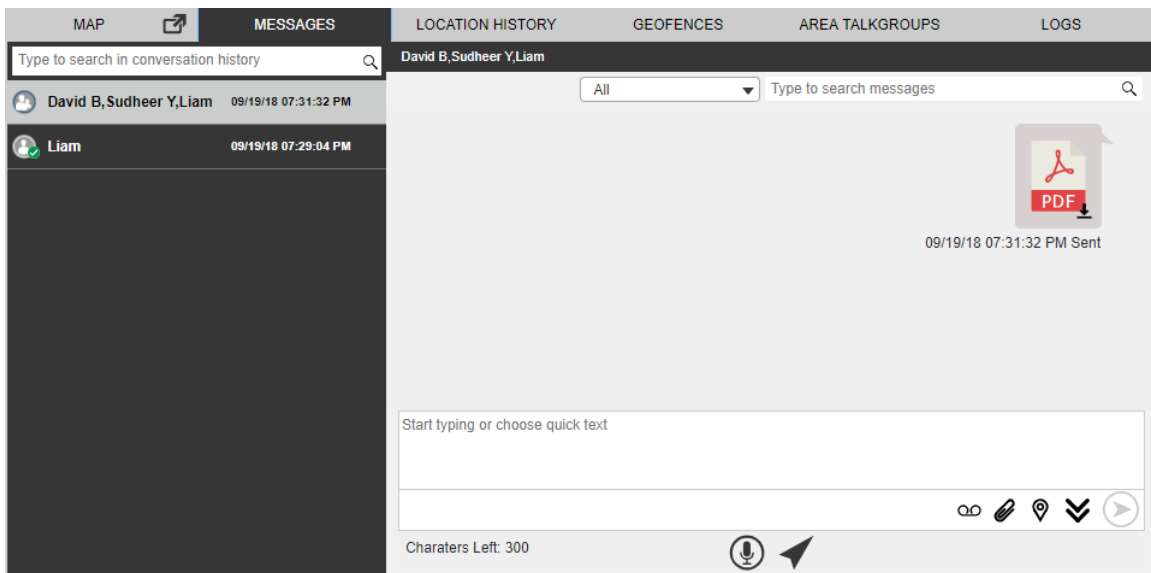

 **NOTICE:** You can also add text with the document attachment.


9.3.3 Discarding the attached document

When and where to use: To discard the attached document, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 127: Delete Confirmation Window

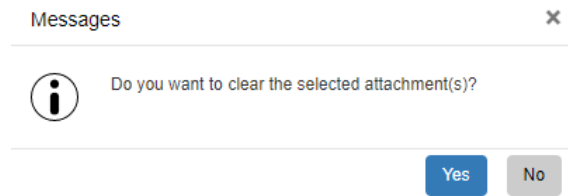

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.3.4


Sending a photo to a quick group

When and where to use: To send a photo to a quick group, follow these steps:

Procedure:


- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Attach Files** icon.
- 5 Select the **Attach Photo** icon. A file selection window opens.


Figure 128: File Selection Window - Photo - Quick Group

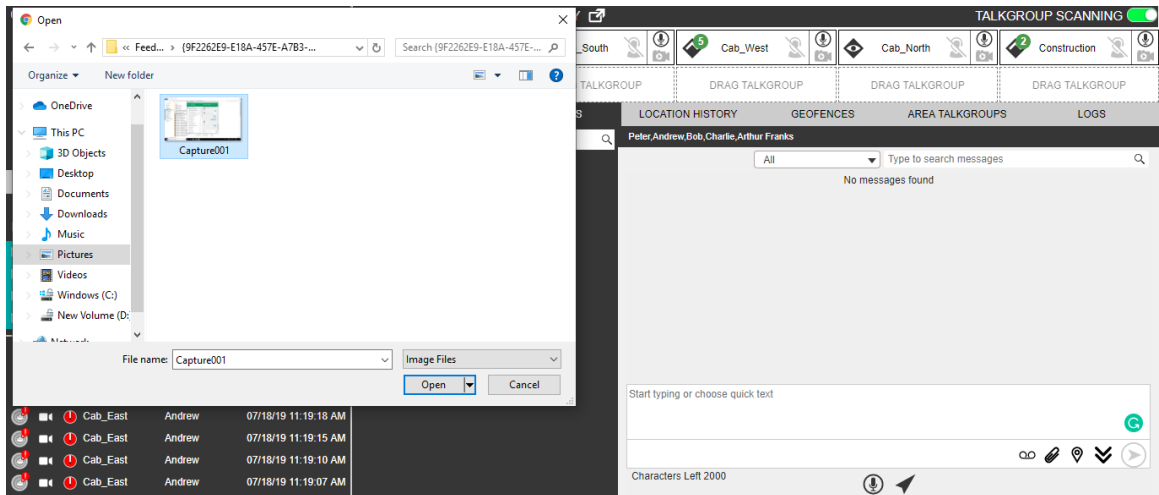

- Select the picture and click **Open**.
 - Cut an image or part of an image and paste.
 - To cancel the action, click **Cancel**.
- 6 To send the photo, click the **Send** icon.

Figure 129: Send Photo to Quick Group

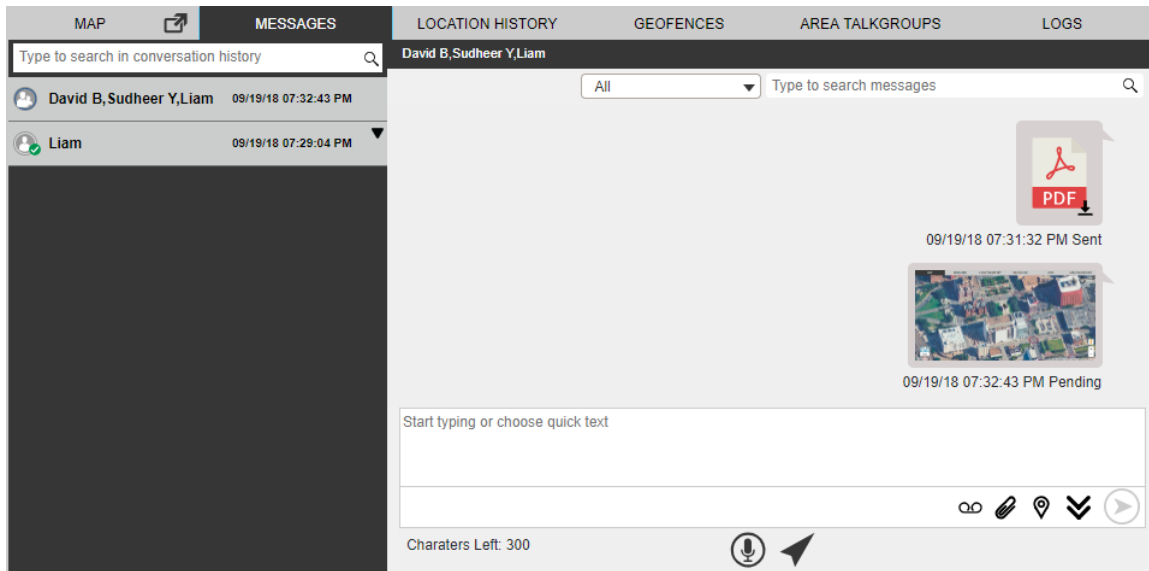

 **NOTICE:** You can also add text with the photo attachment.

9.3.5


Discarding the attached photo

When and where to use: To discard the attached photo, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 130: Delete Confirmation Window

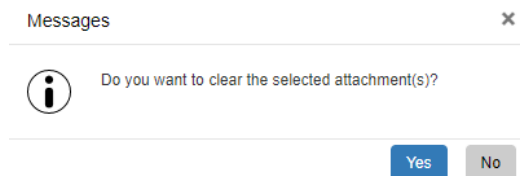

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.3.6

Sending video to a quick group


When and where to use: To send video to a quick group, follow these steps:

Procedure:

- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Attach Files** icon.


- 5 Select the **Attach Video** icon. A file selection window opens.


Figure 131: File Selection Window- Video- Quick Group

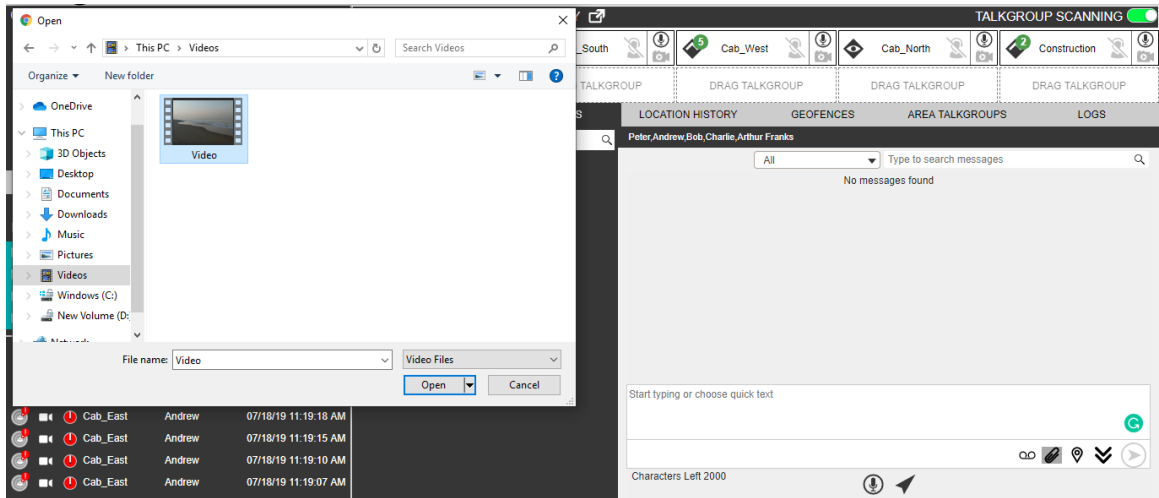

- Select the video and click **Open**.
 - To cancel the action click **Cancel** icon.
- 6 To send the recorded video file, click the **Send** icon.

Figure 132: Send Video to Quick Group

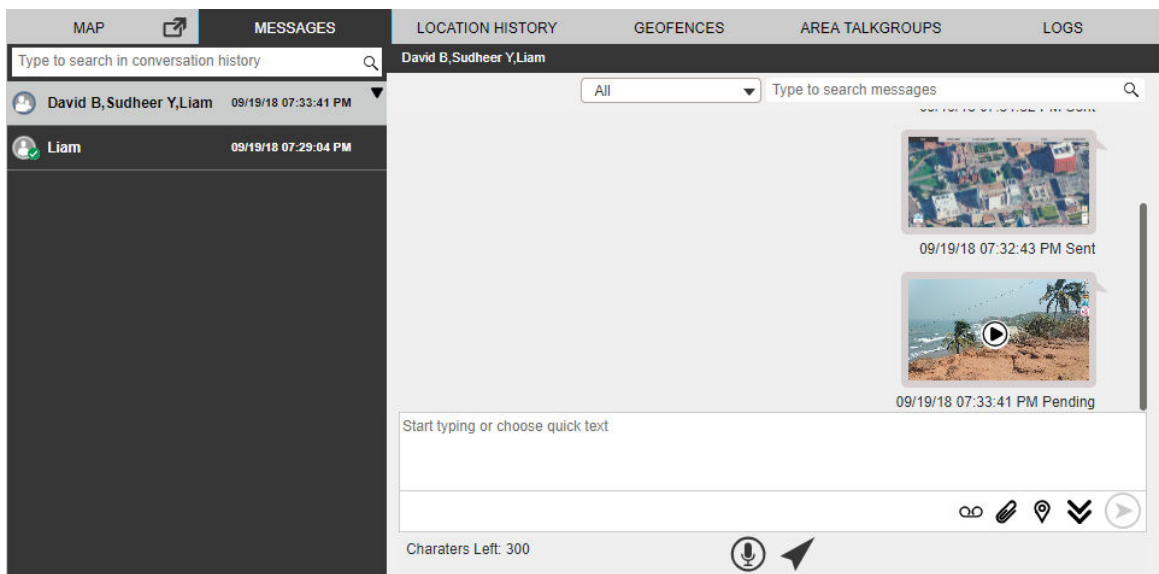

 **NOTICE:** You can also add text with the video attachment.

9.3.7


Discarding the attached video

When and where to use: To discard the attached video, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 133: Delete Confirmation Window

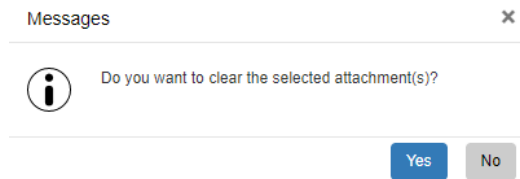

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.3.8

Sending audio to a Quick Group


You can send audio message either by recording from the Dispatch application or pre-recorded audio file from your local PC.

When and where to use: To record and send an audio message from the Dispatch application, follow these steps:

Procedure:


- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Recording** icon.

Figure 134: Record Voice message- Quick Group

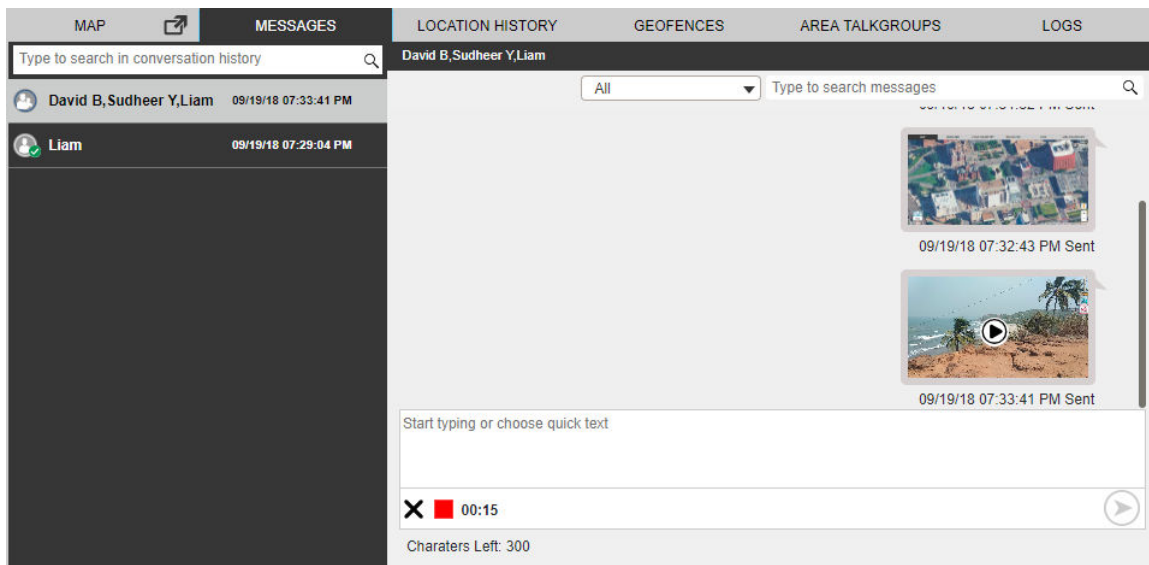

- 5 Record the audio from your device.
 - Click the **Stop** icon to stop the recording.
 - Click the **Cancel** icon to cancel the recording.
- 6 Click the **Send** icon to send the recorded audio.

Figure 135: Send Recorded Voice Message- Quick Group

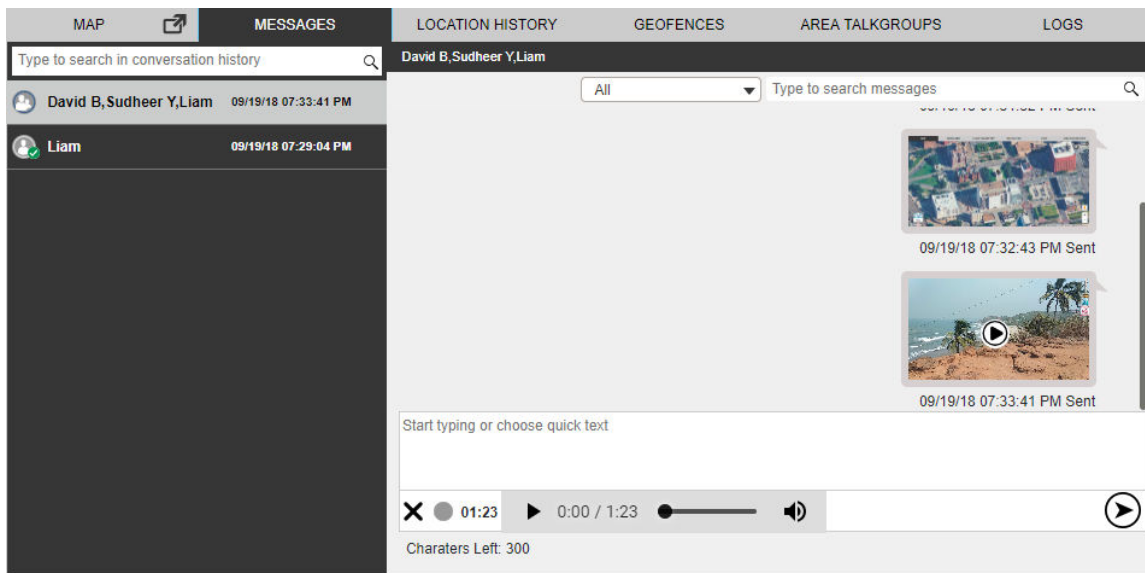

You can preview the recorded audio by clicking the **Play** icon before sending to the quick group.

9.3.9


Sending a pre-recorded audio file from your local PC

When and where to use: To send a pre-recorded audio file from your local PC, follow these steps:

Procedure:

- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.
- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Attach Files** icon.
- 5 Click the **Attach Audio** icon. A file selection window opens.


Figure 136: File Selection Window- Audio- Quick Group

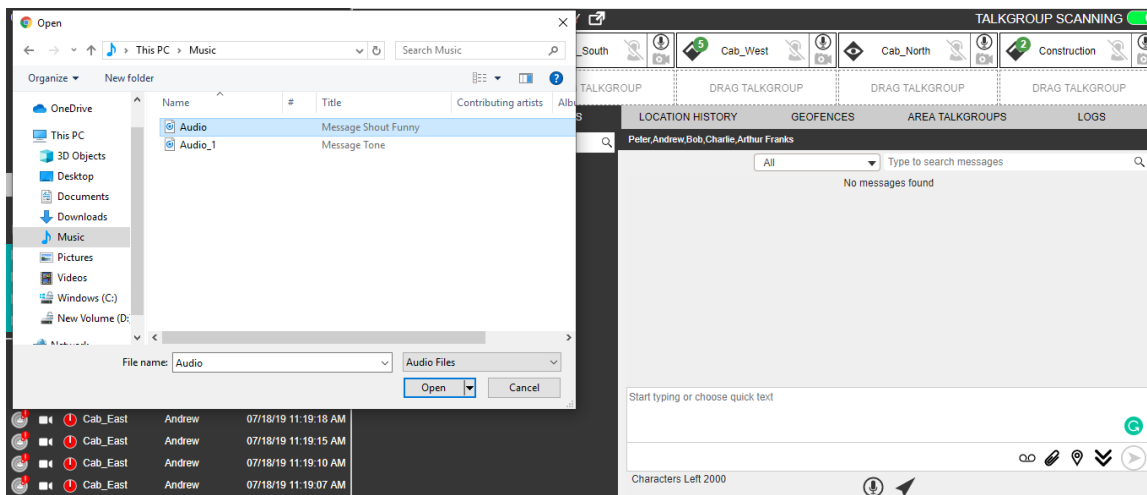


- Select the audio file and click **Open**.

- Click **Cancel** to cancel the action.
- 6 Click the **Send** icon to send the audio file.

Figure 137: Send Audio to Quick Group

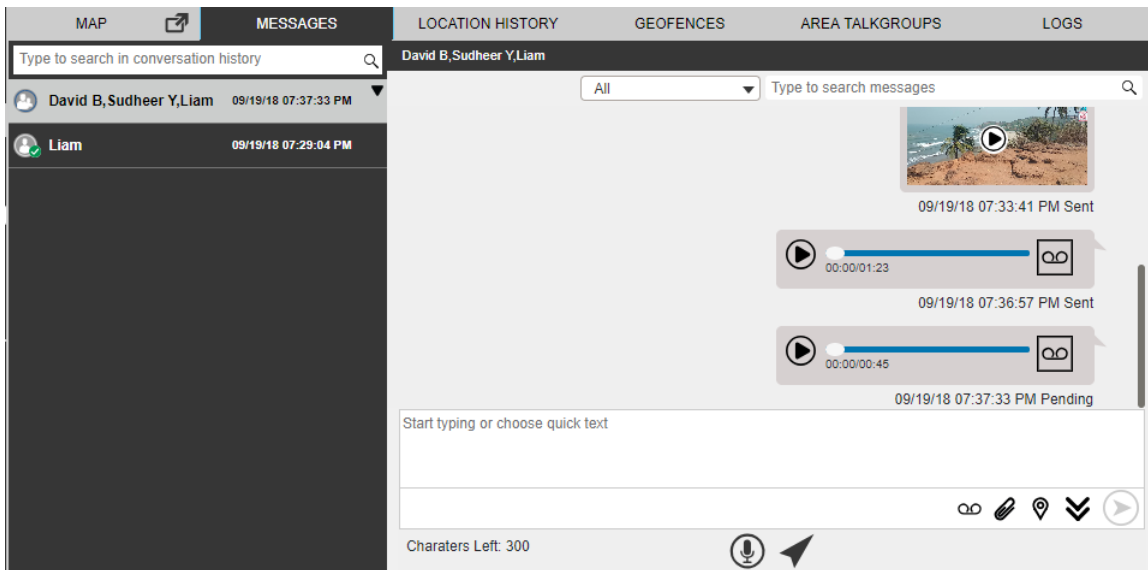

 **NOTICE:** You can also add text with the audio attachment.

9.3.10


Discarding the attached audio

When and where to use: To discard the attached audio, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 138: Delete Confirmation Window

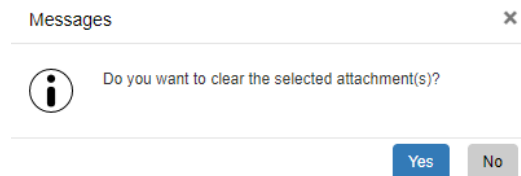

- Click **Yes** to delete
- Click **No** to cancel the action.

9.3.11

Sharing Location to a quick group


When and where to use: To Share Location to a quick group, follow these steps:

Procedure:

- 1 Click the **Contact** tab from the Contacts and Talkgroups.
- 2 Select the check boxes next to the contacts.


- 3 Right-click and select **Message**. A Message tab opens below the monitored talkgroup activity window.
- 4 Click the **Location Sharing** icon. A map with location pin opens.

Figure 139: Choose Location Window- Quick Group

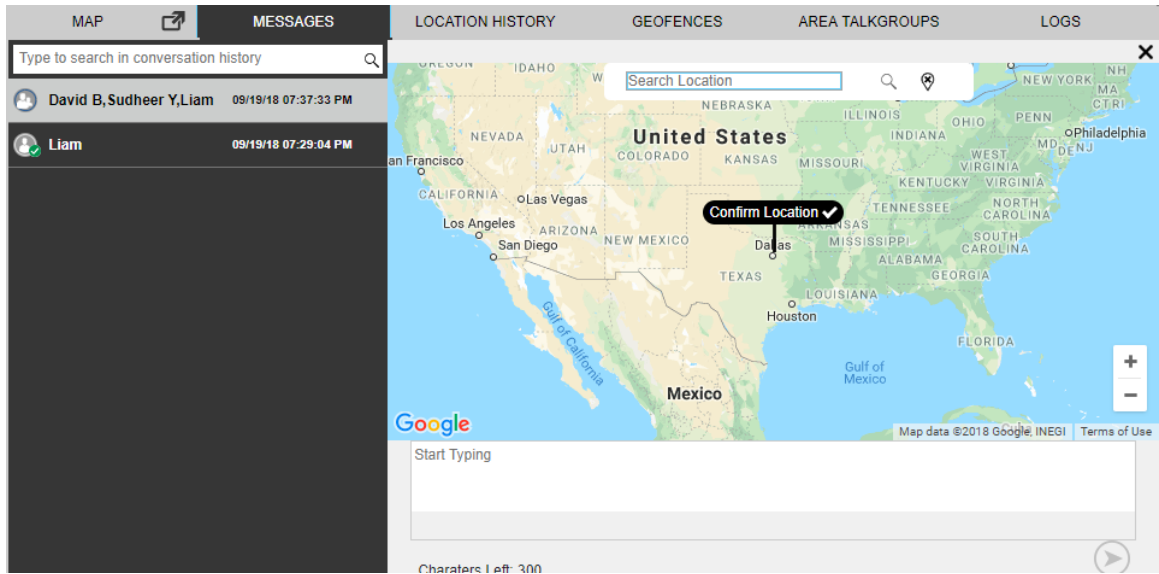

- 5 Choose a location you want to share by moving the map and dropping the location pin. You can also search for the location address to drop the location pin.
- 6 Click the **Confirm Location** icon.
 - Click the **Send** icon to share the location to quick group.
 - To cancel the action, click the **Close** icon.

Figure 140: Share Location to Quick Group

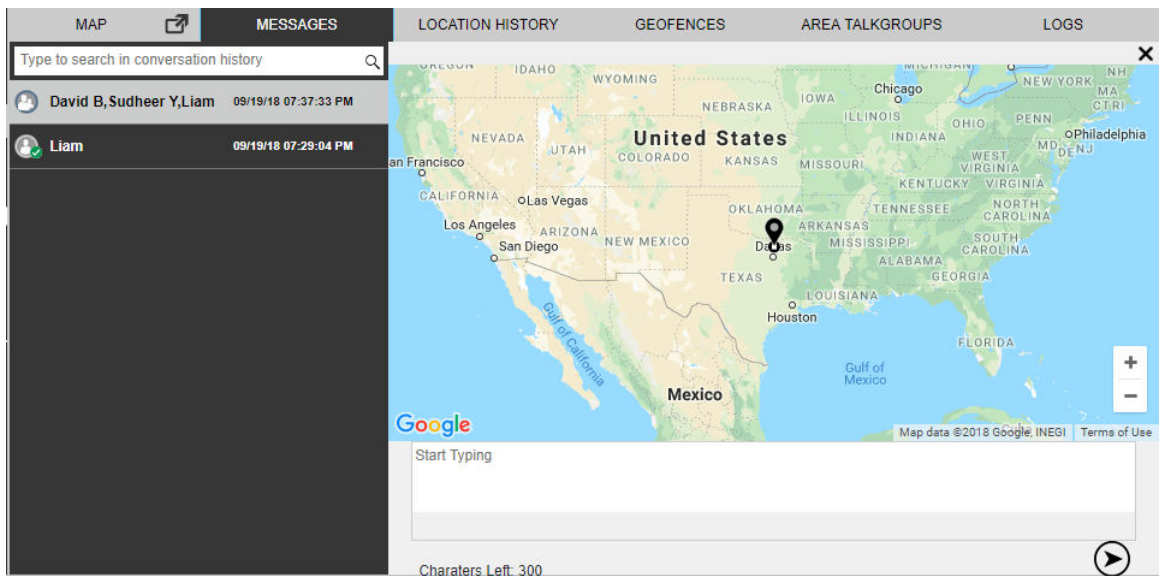

9.4

Sending Message to Talkgroup

The Dispatch allows you to send and receive text and multimedia message to and from the fleet member.

9.4.1


Sending text message to a talkgroup, follow these steps:

When and where to use: To send text message to a talkgroup, follow these steps:

Procedure:

- 1 Select the talkgroup by:
 - Click the **Talkgroup** tab from the Contacts and Talkgroups or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Enter the text in the text area and click the **Send** icon.

Figure 141: Send Text Message to Talkgroup

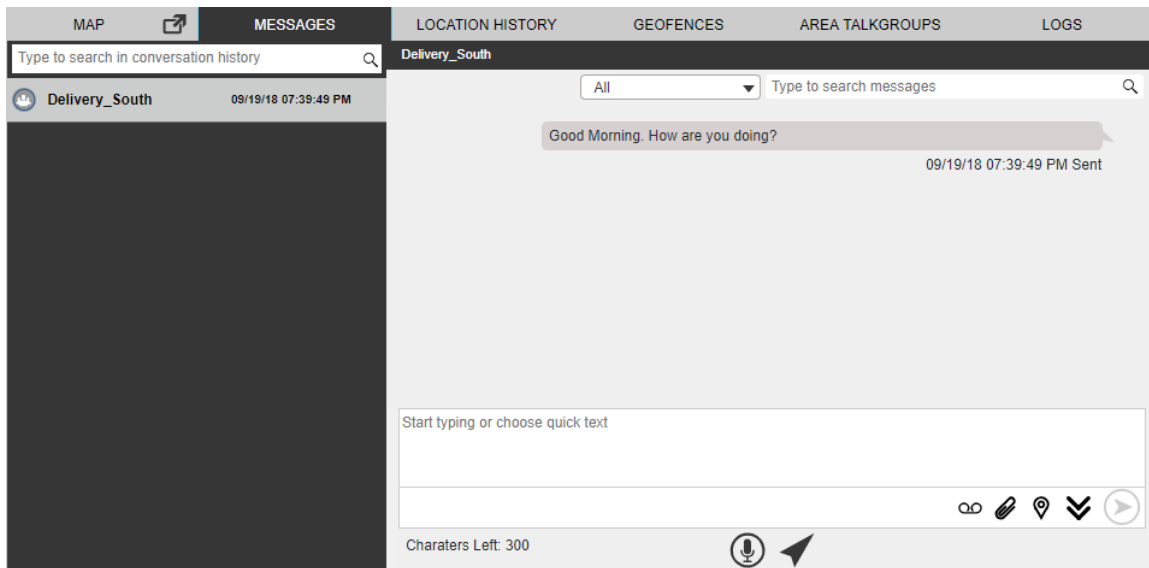

9.4.2

Sending file to a talkgroup


When and where to use: To send file to a talkgroup, follow these steps:

Procedure:

- 1 Select the talkgroup by
 - Click the **Talkgroup** tab from the Contacts and Talkgroup or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.

- 4 Select the **Attach Document** icon. A file selection window opens.


Figure 142: File Selection Window- Document- Talkgroup

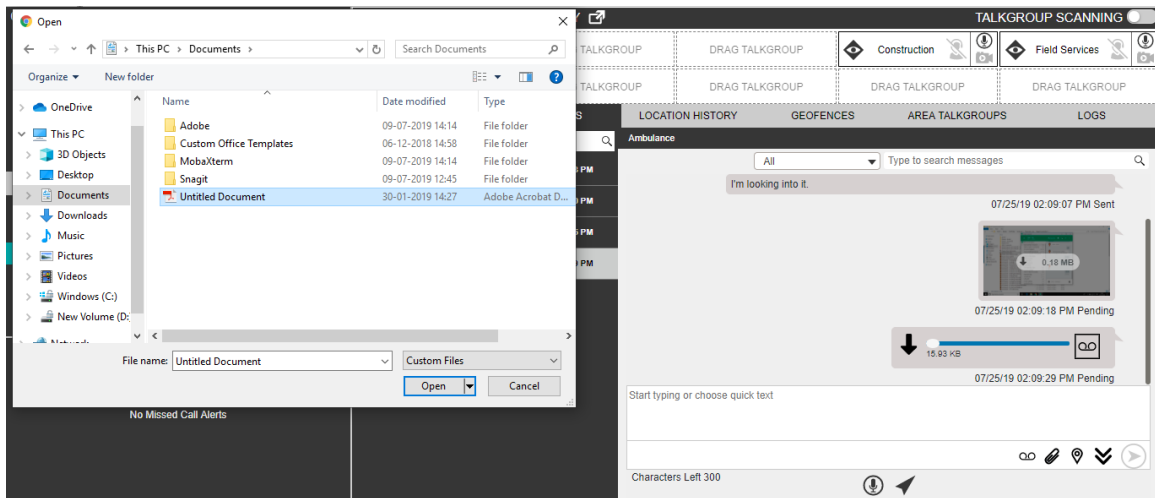

- Select the file and click **Open**.
- To cancel the action, click **Cancel**.

- 5 To send the file, click the **Send** icon.

Figure 143: Send Document to Talkgroup

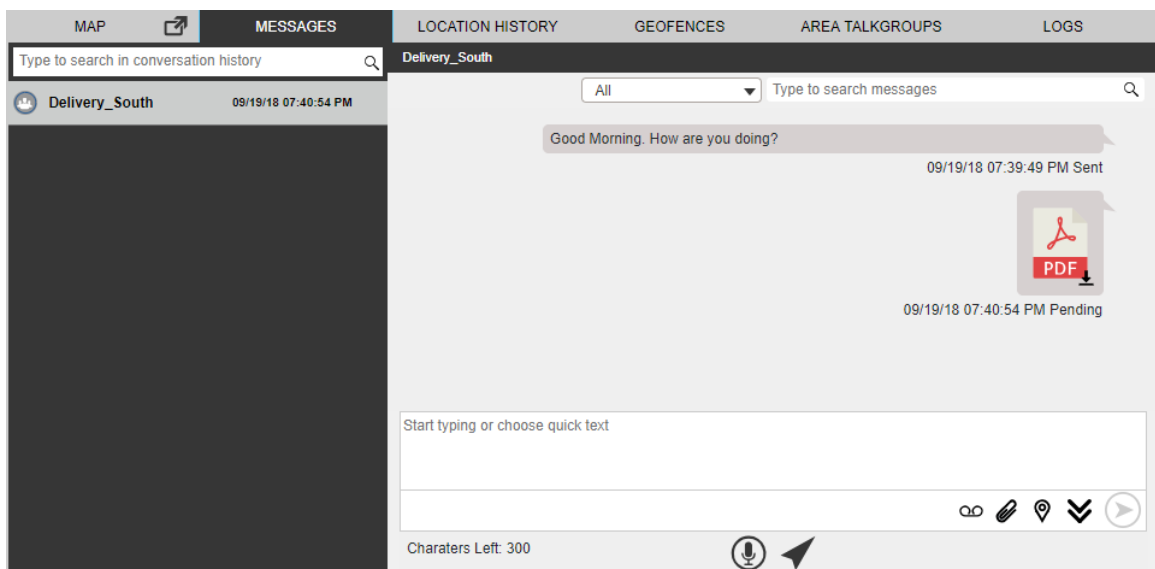

NOTICE: You can also add text with the document attachment.

9.4.3


Discarding the attached document

When and where to use: To discard the attached document, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 144: Delete Confirmation Window

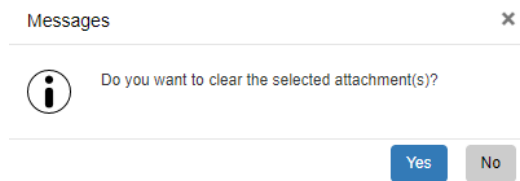

- Click **Yes** to delete.
- To cancel the action, click **No**.


9.4.4 Sending photo to a talkgroup

When and where to use: To send photo to a talkgroup, follow these steps:


Procedure:

- 1 Select the talkgroup by:
 - Click the **Talkgroup** tab from the Contacts and Talkgroup or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.
- 4 Select the **Attach Photo** icon. A file selection window opens.

Figure 145: File Selection Window- Photo- Talkgroup

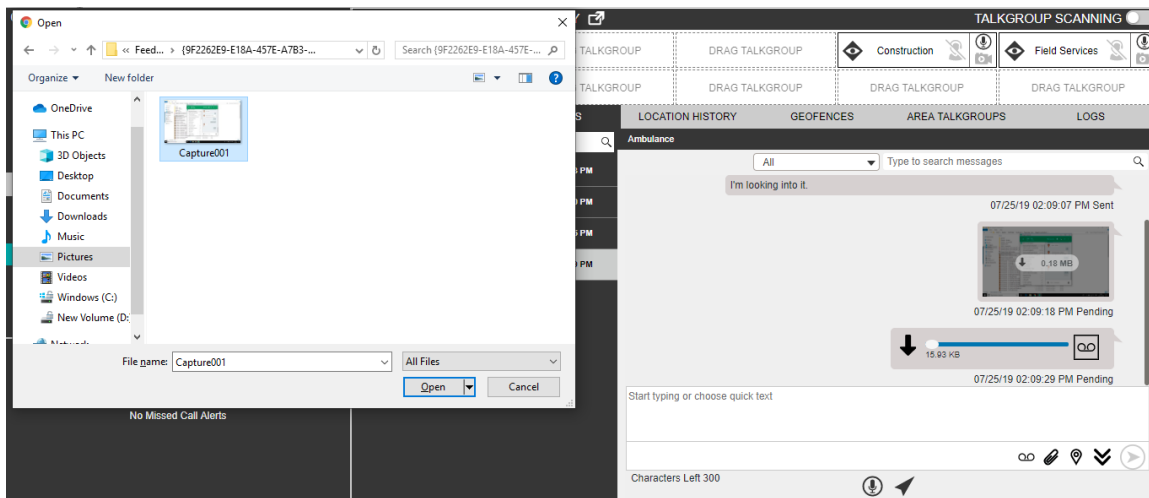

- Select the picture and click **Open**.
 - Cut an image or part of an image and paste.
 - To cancel the action, click **Cancel**.
- 5 To send the photo, click the **Send** icon.

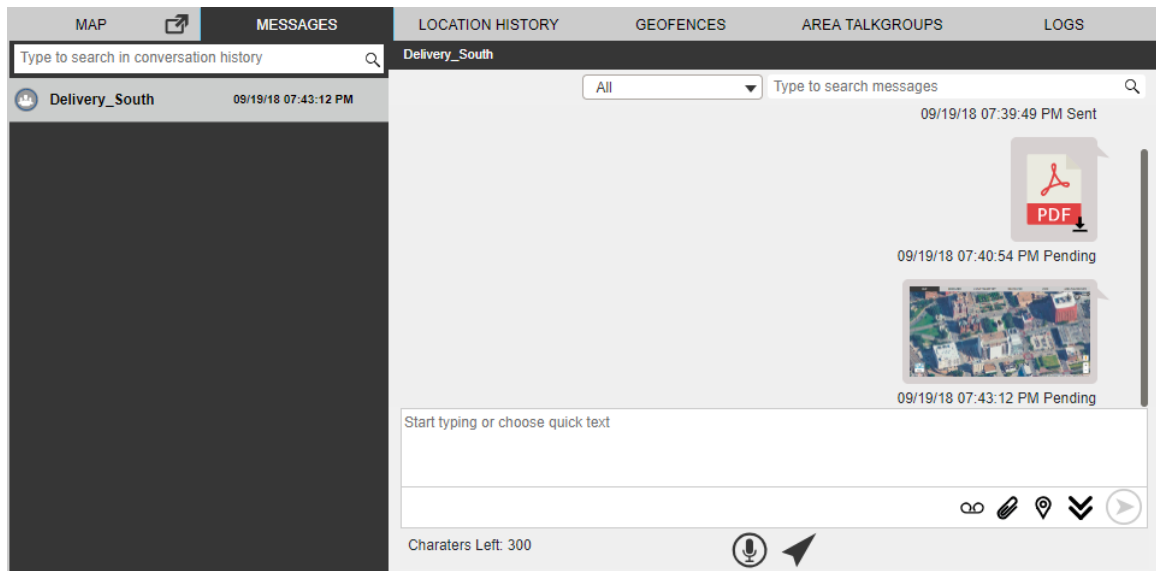Figure 146: Send Photo to Talkgroup

NOTICE: You can also add text with the photo attachment.

9.4.5


Discarding the attached photo

When and where to use: To discard the attached photo, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 147: Delete Confirmation Window

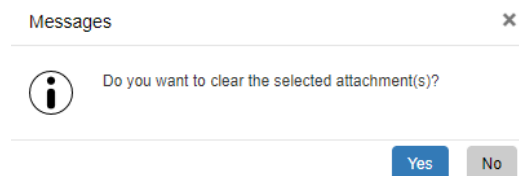

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.4.6

Sending video to a talkgroup


When and where to use: To send video to a talkgroup, follow these steps:

Procedure:

- 1 Select the talkgroup by:
 - Click the **Talkgroup** tab from the Contacts and Talkgroup or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.


- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.
- 4 Select the **Attach Video** icon. A file selection window opens.

Figure 148: File Selection Window- Video- Talkgroup

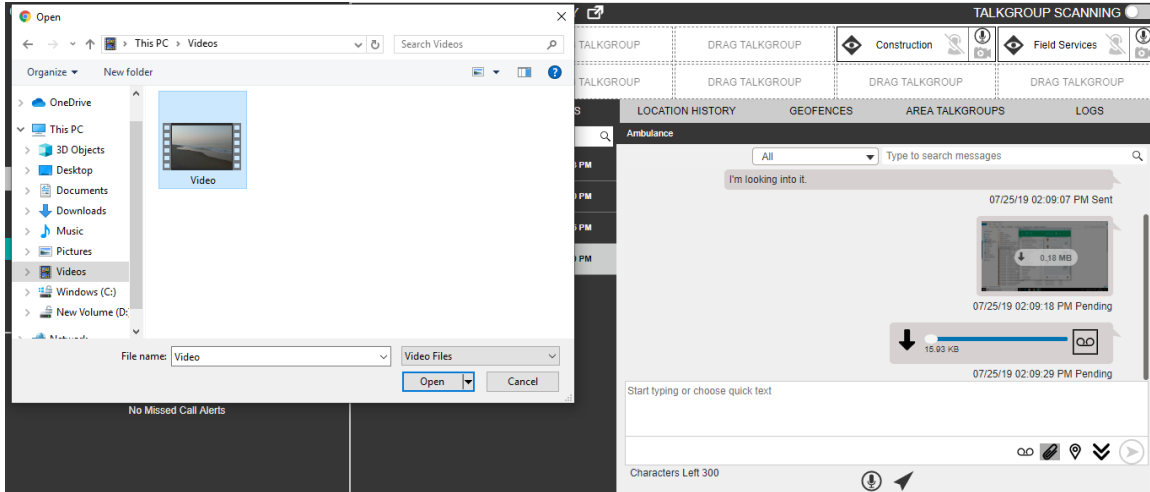

- Select the video and click **Open**.
 - To cancel the action, click **Cancel** icon.
- 5 To send the recorded video file, click the **Send** icon.

Figure 149: Send Video to Talkgroup

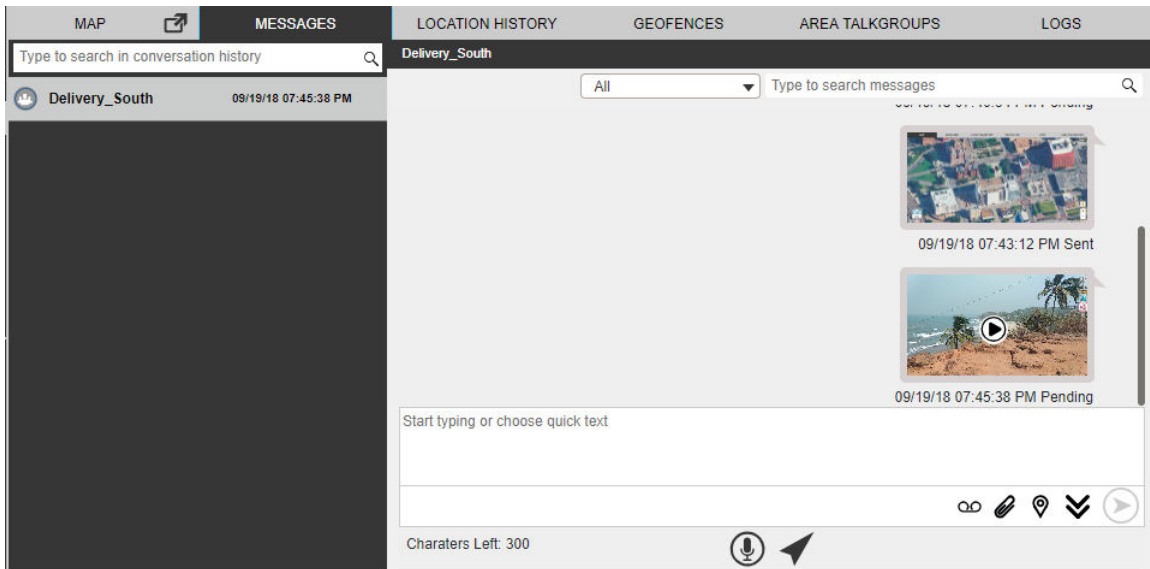

NOTICE: You can also add text with the video attachment.

9.4.7


Discarding the attached video

When and where to use: To discard the attached video, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 150: Delete Confirmation Window

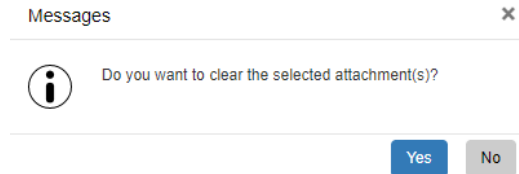

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.4.8

Sending audio to a talkgroup


You can send audio message either by recording from the Dispatch application or pre-recorded audio file from your local PC.

When and where to use: To record and send an audio message from the Dispatch application, follow these steps:

Procedure:


- 1 Select the talkgroup by:
 - Clicking the **Talkgroup** tab from the Contacts and Talkgroup or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Recording** icon.

Figure 151: Record Voice message- Talkgroup

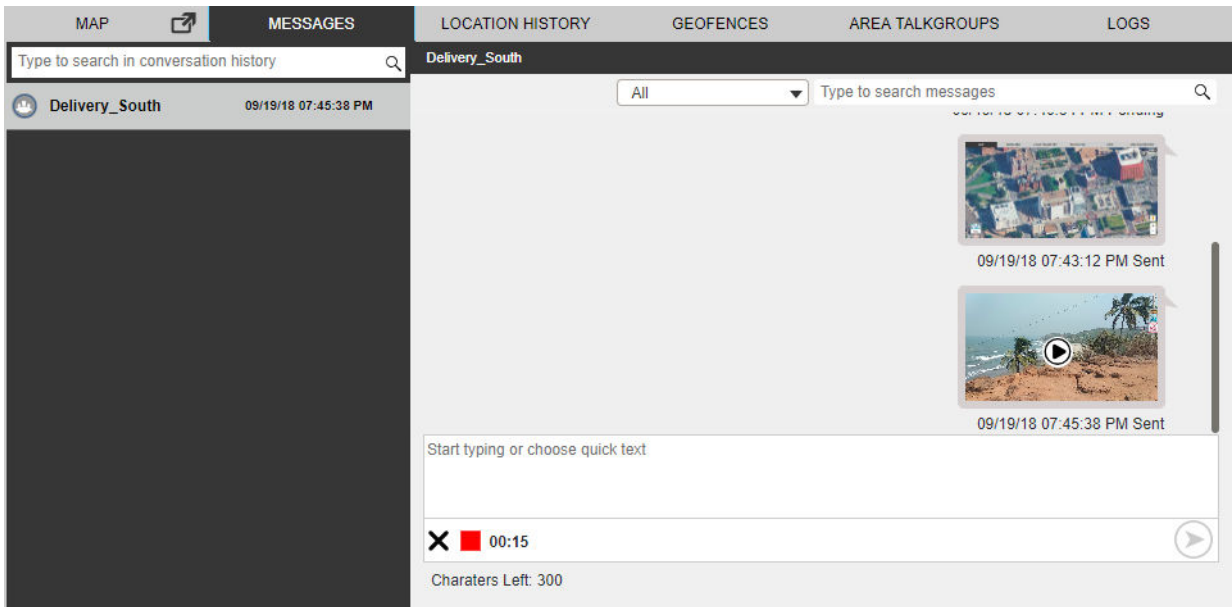

- 4 Record the audio from your device.
 - Click the **Stop** icon to stop the recording.
 - To cancel the recording, click the **Cancel** icon.
- 5 To send the recorded audio, click the **Send** icon.

Figure 152: Send Recorded Voice Message- Talkgroup

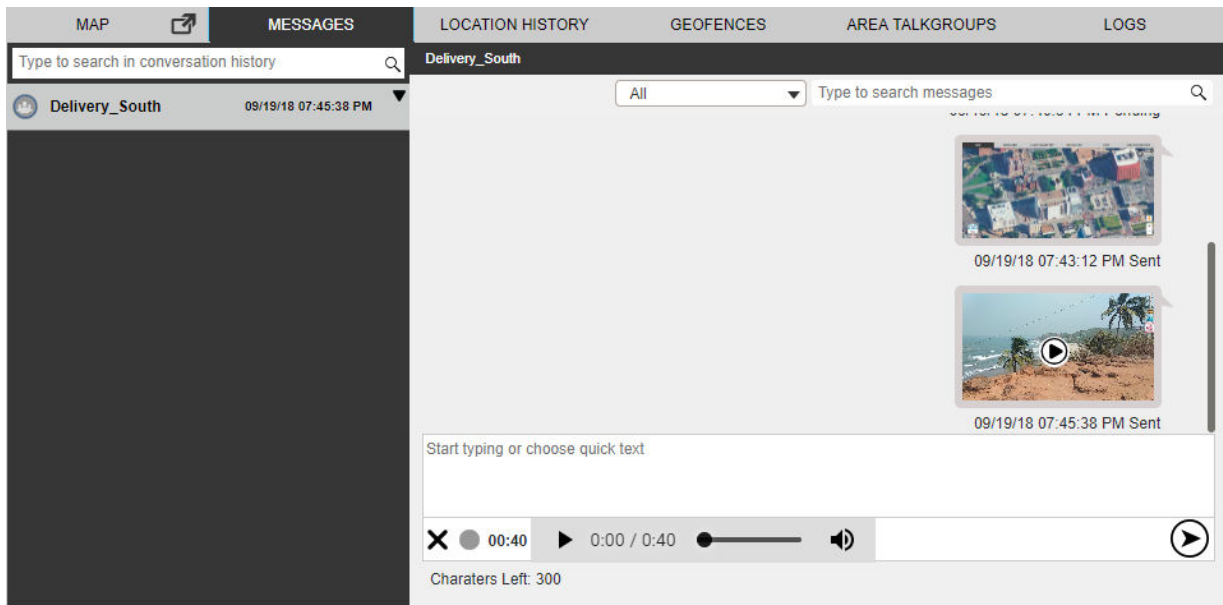

You can preview the recorded audio by clicking the **Play** icon before sending to the talkgroup.

9.4.9


Sending a pre-recorded audio file from your local PC

When and where to use: To send a pre-recorded audio file from your local PC, follow these steps:

Procedure:


- 1 Select the talkgroup by:
 - Clicking the **Talkgroup** tab from the Contacts and Talkgroup or Map Selection List window
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map Marker** of the talkgroup on the map to view the Map Info window.
- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Attach Files** icon.
- 4 Click the **Attach Audio** icon. A file selection window opens.


Figure 153: File Selection Window- Audio- Talkgroup

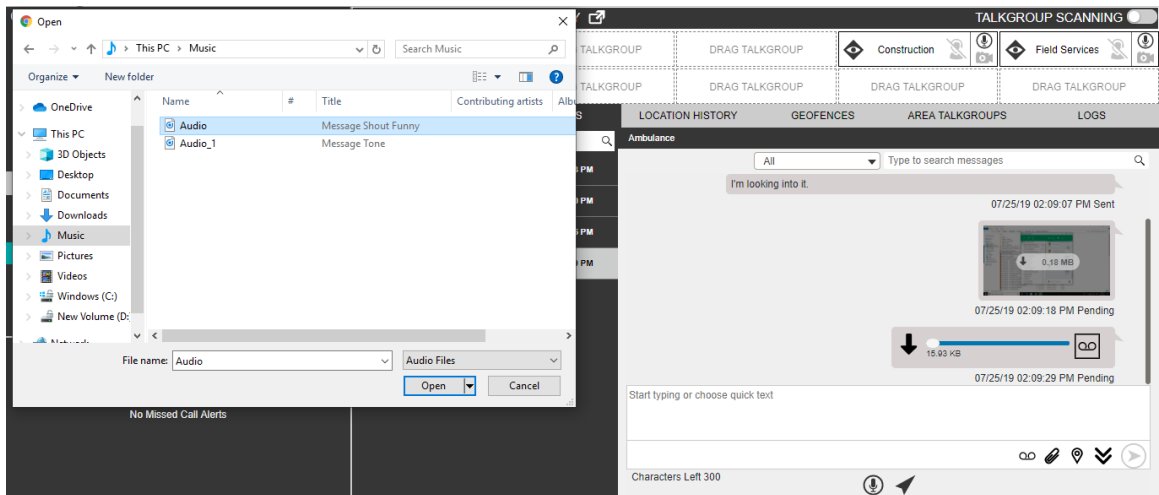

- Select the audio file and click **Open**.
 - To cancel the action, click **Cancel**.
- 5 To send the audio file, click the **Send** icon.

Figure 154: Send Audio to Talkgroup

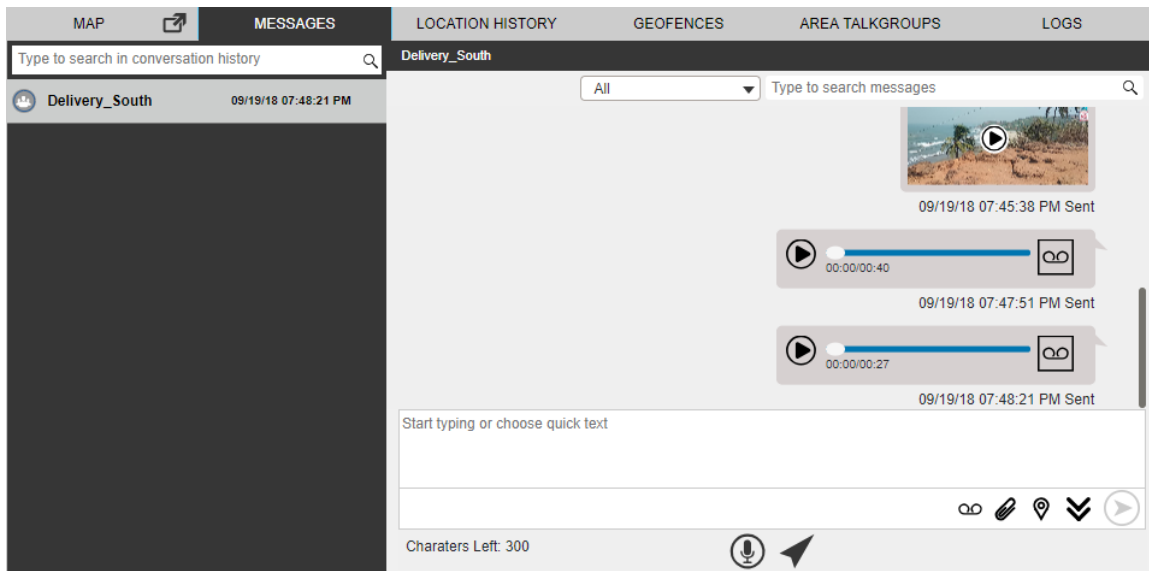

 **NOTICE:** You can also add text with the audio attachment.

9.4.10


Discarding the attached audio

When and where to use: To discard the attached audio, follow these steps:

Procedure:

Click the **Delete** icon next to the attached file. A confirmation window displays.

Figure 155: Delete Confirmation Window

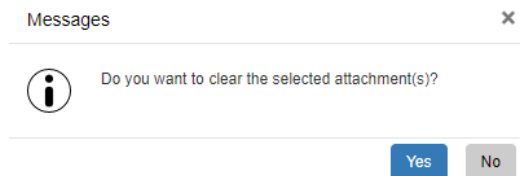

- Click **Yes** to delete.
- To cancel the action, click **No**.

9.4.11

Sharing Location to a talkgroup


When and where to use: To Share Location to a talkgroup, follow these steps:

Procedure:

- 1 Select the talkgroup by:
 - Clicking the Talkgroup tab from the Contacts and Talkgroup or Map Selection List window.
 - Right-clicking on contact in Alerts, Monitored Talkgroup Activity, Call, and Alert Logs window.
 - Clicking the **Map marker** of the talkgroup on the map to view the Map Info window.


- 2 Click the **Message** icon. A Message tab opens below the monitored talkgroup activity window.
- 3 Click the **Location Sharing** icon. A map with location pin opens.

Figure 156: Choose Location Window- Talkgroup

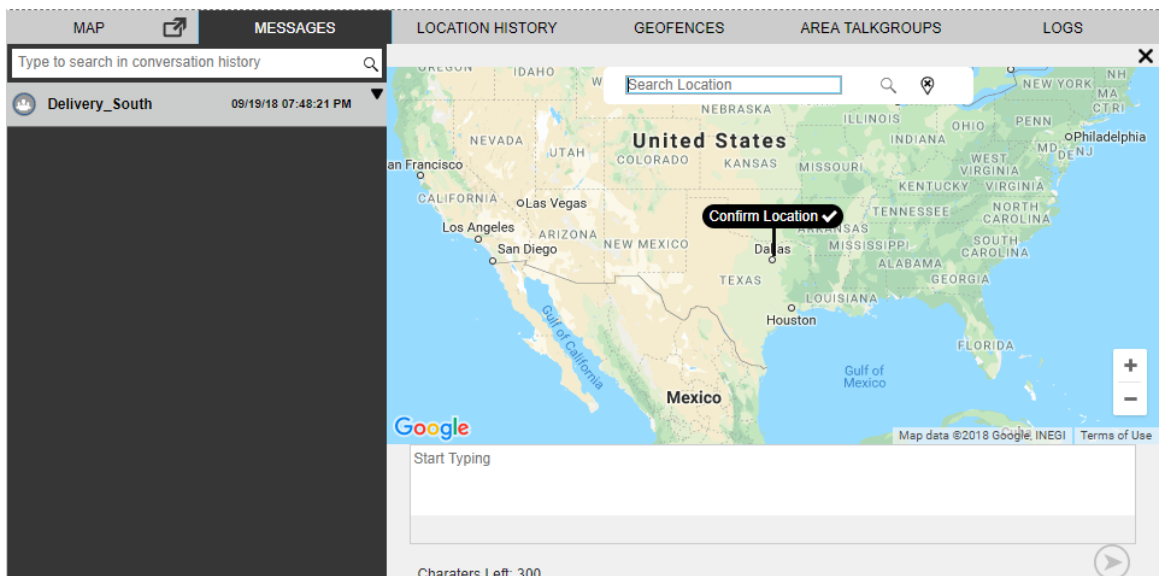

- 4 Choose a location you want to share by moving the map and dropping the location pin. You can also search for the location address to drop the location pin.
- 5 Click the **Confirm Location** icon.
 - To share the location to talkgroup, click the **Send** icon.
 - To cancel the action, click the **Close** icon.

Figure 157: Share Location to Talkgroup

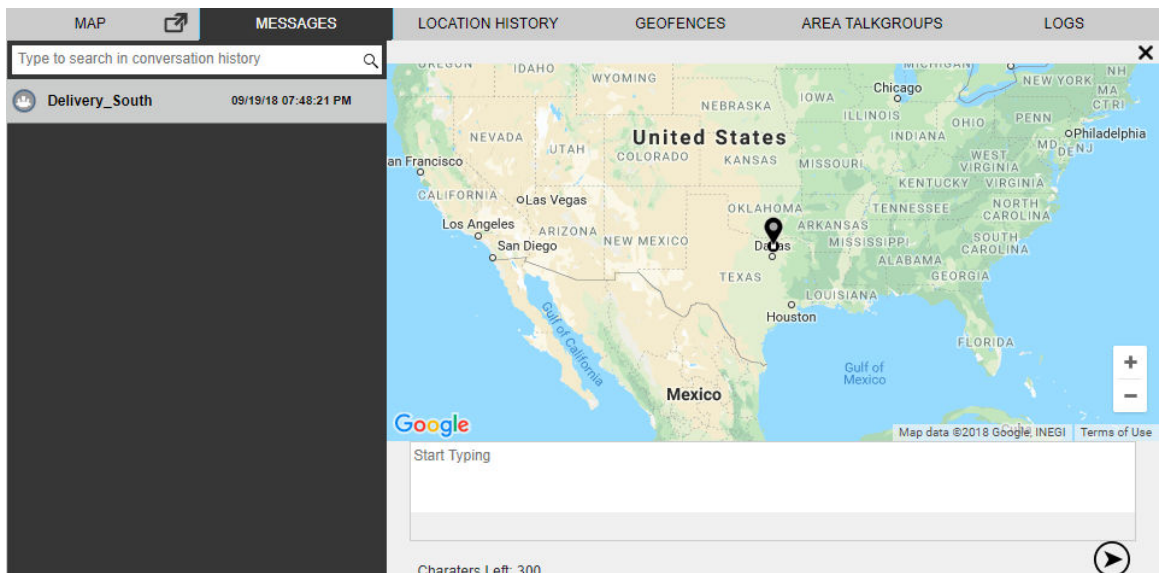

9.5

Sending Message to Broadcast Group

The Dispatch allows you to send only text message to the fleet member.

9.5.1


Sending text message to a broadcast group

When and where to use: To send text message to a broadcast group, follow these steps:

Procedure:


- 1 Select the broadcast group by
 - Clicking the **Broadcast Group** tab from the Contacts and Talkgroups window.
 - Right-clicking on contact in Alerts, Call, and Alert Logs window.
- 2 To send a text message, click the **Message** icon. A confirmation message displays.
 - Click **Yes** to continue sending message.
 - To cancel the action, click **No**.

Figure 158: Sending Broadcast Message Confirmation Window

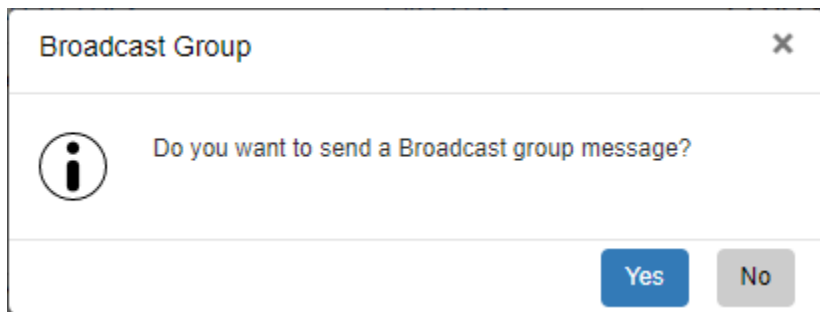

- 3 A Message tab opens below the monitored talkgroup activity window.
- 4 Type the message in the text area and click the **Send** icon.

Figure 159: Send Text Message to Broadcast Group

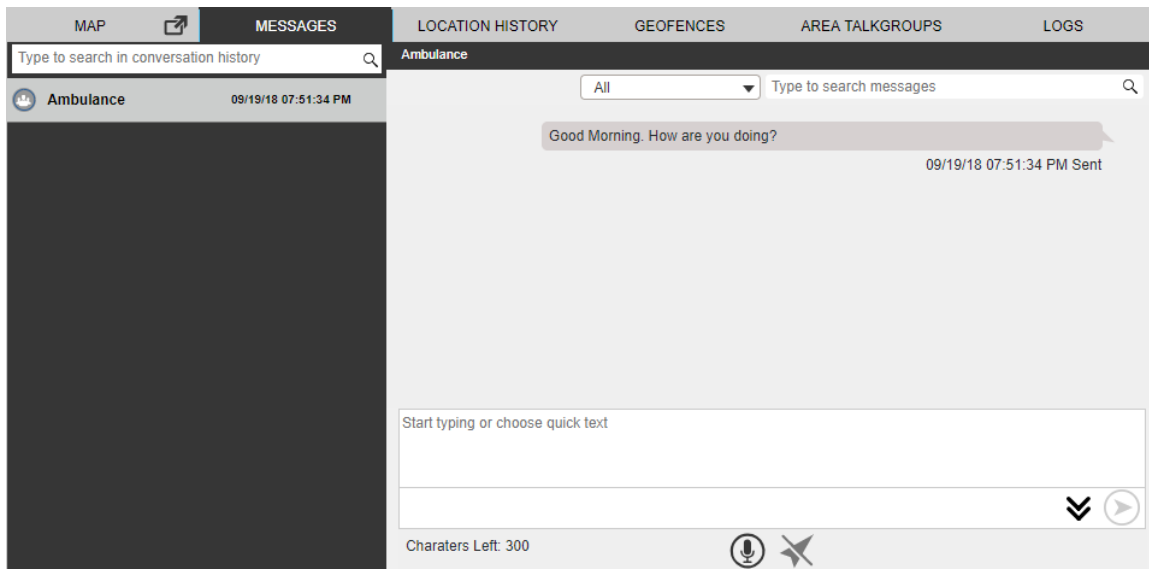


9.6

Search Message

You can search for messages using the search bar on the conversation history and in the individual messages window. To search, enter the few characters of the message content, name of the fleet member, phone number of the fleet member, talkgroup name, broadcast group name, or my talkgroup name in the Search field. The list is filtered to show matching entries.

 Figure 160: Search Message- Individual and Conversation

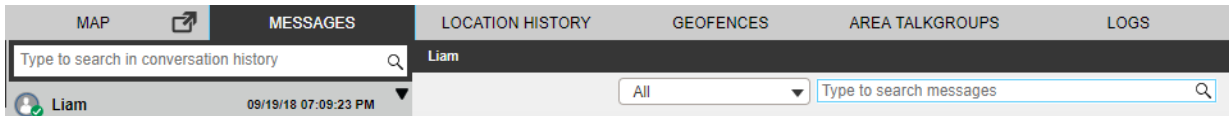

9.7

Quick Text

Instead of typing “Good morning team” every time, add to “Add new text” of the Quick Text box and press Enter. The next time you need that message, insert your “Quick Text” into the message and click the **Send** icon. You can also modify or delete the message. To delete the quick text, click the **Delete** icon next to the message. Quick text helps you to customize frequently used text messages that can be sent quickly to a contact or a talkgroup.

When and where to use: To modify the quick text message, follow these steps:


Procedure:

- 1 Click the **Edit** icon next to the message.
- 2 Modify the message and click the **Save** icon.



NOTICE: The Maximum character limit for the quick test is based on the server configuration (Default- 72). When you enter the text, you can see the available characters left on the right of the “Add new text” box.

Figure 161: Quick Text

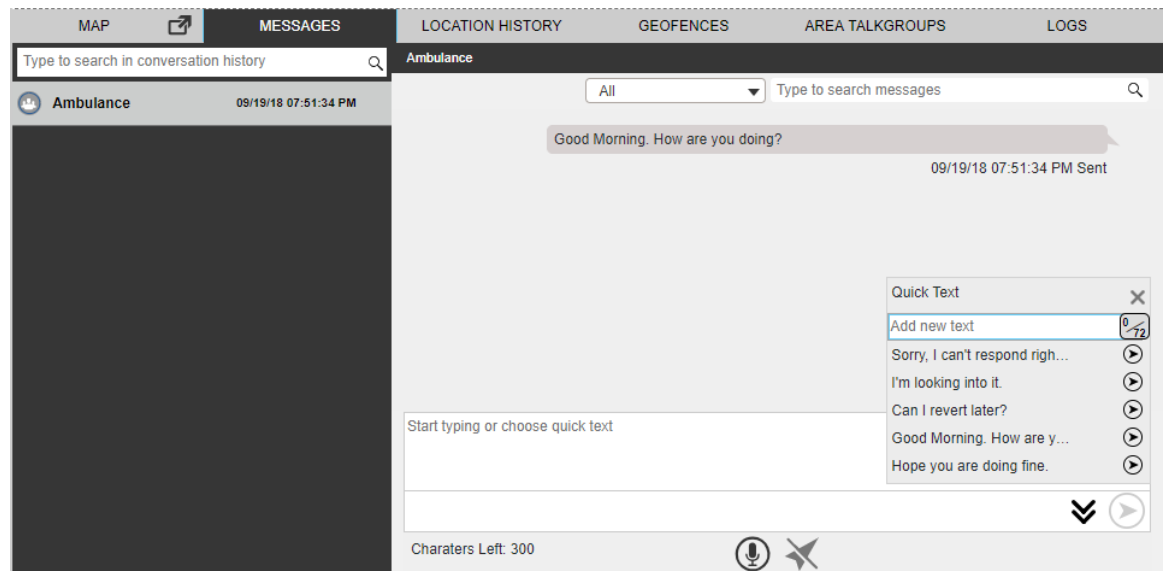

9.8

Delete Conversation History


You can delete the conversation history of a contact, my talkgroup, broadcast group, and quick group.

When and where to use: To delete a conversation history, follow these steps:

Procedure:


- 1 On the message list section, mouse hover on the message. A Show More Option icon displays.
- 2 Click the **Show More Option** icon.

Figure 162: Delete Conversation History

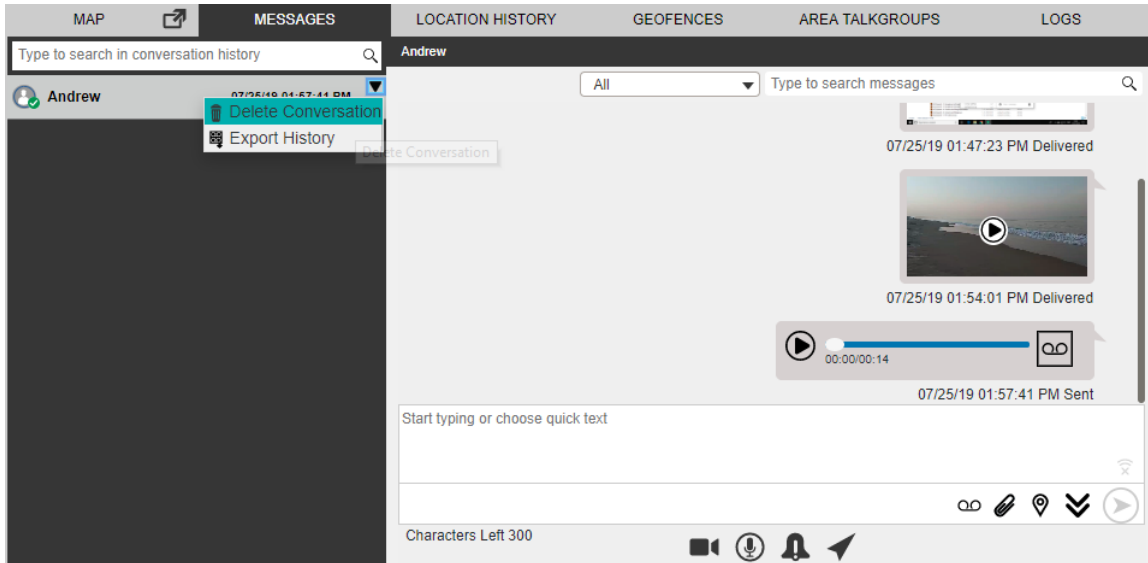

- 3 Click the **Delete Conversation** icon.
- 4 A confirmation dialog box displays.

Figure 163: Delete Conversation Confirmation Dialog Box

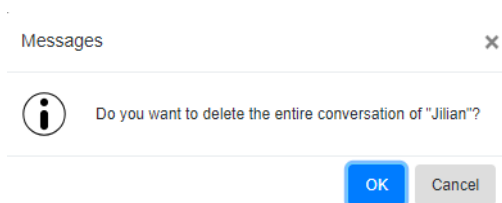

- To delete the message, click **Yes**.
- To cancel the action, click **No**.

9.9

Delete or Forward Single and Multiple Text or Multimedia Message

You can delete or forward a message to any of your fleet member or to talkgroup.

9.9.1

Deleting text or multimedia message


You can select single or multiple messages (text, location, or multimedia) within a conversation and delete. To delete a single multimedia file, open the multimedia file and select the **Delete** icon. You can also delete the message as per the mentioned procedure.

When and where to use: To delete the message, follow these steps:

Procedure:


- 1 Mouse hover on the message. A Show More Option icon displays.
- 2 Click the **Show More Option** icon.
- 3 From the drop-down, click the **Delete Message** icon.
- 4 Select the messages or files that you want to delete.

Figure 164: Delete Single Text or Multimedia File

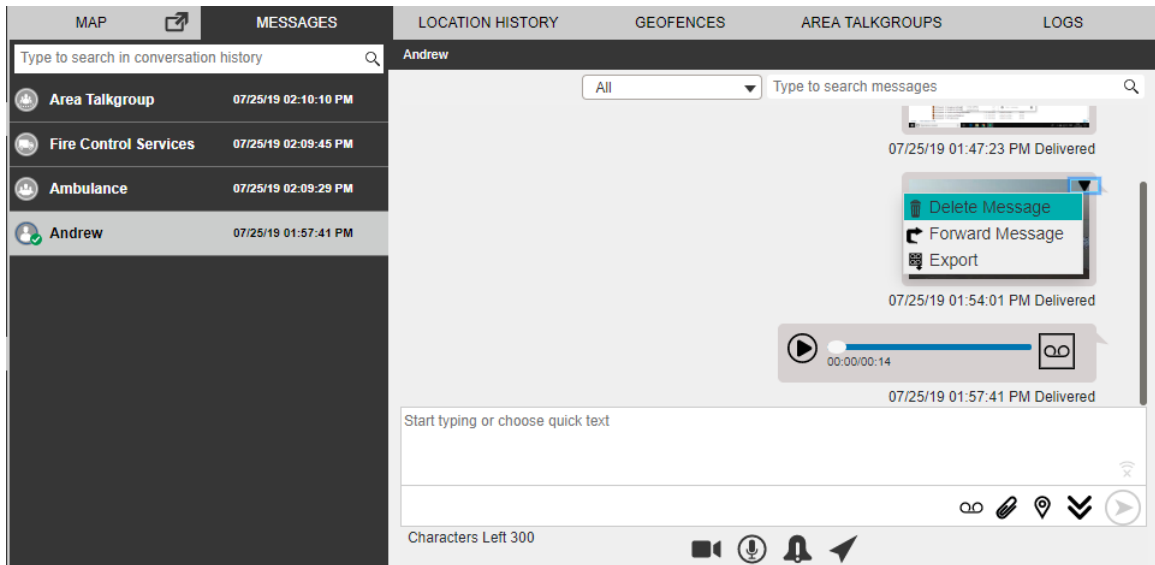

- Click the **Delete** icon.
 - To cancel the action, click **Close** icon.
- 5 A confirmation dialog box displays.

Figure 165: Delete Single Text or Multimedia File Confirmation Dialog Box

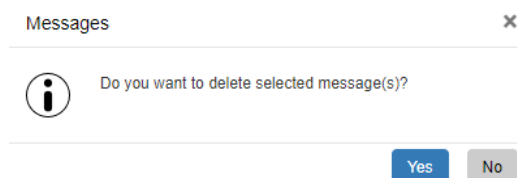

- To delete the message or file, click **Yes**.
- To cancel the action, click **No**.

9.9.2

Forwarding text or multimedia message


To forward an individual multimedia file that is, location, photo, video, audio and document, open and select the **Forward** icon. You can also forward the message as per the mentioned procedure.

When and where to use: To forward the message to a fleet member, follow these steps:

Procedure:


- 1 Mouse hover on the message. A Show More Option icon displays.
- 2 Click the **Show More Option** icon.
- 3 From the available options, click the **Forward Message** icon.

Figure 166: Forward Single Text or Multimedia File

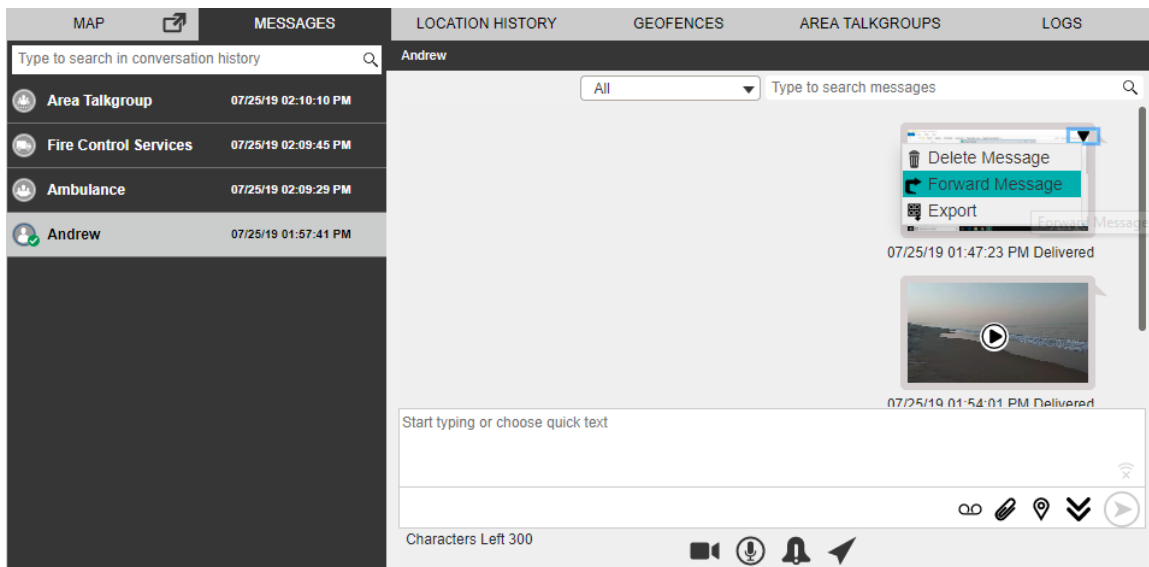

- 4 Select the check boxes to next to the messages or files.

Figure 167: Forward Message Selections Window

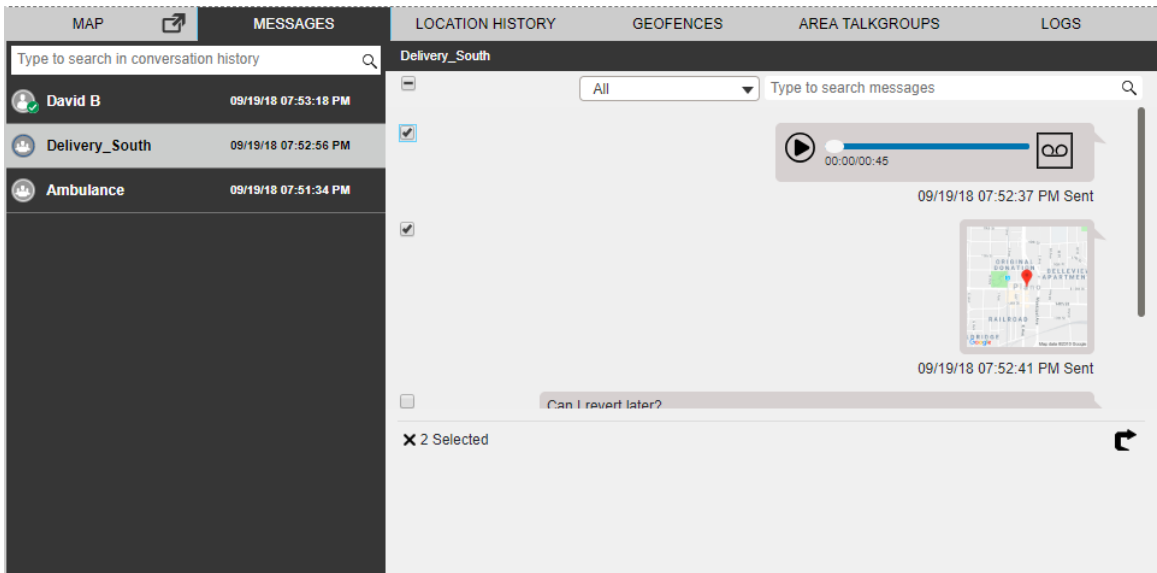


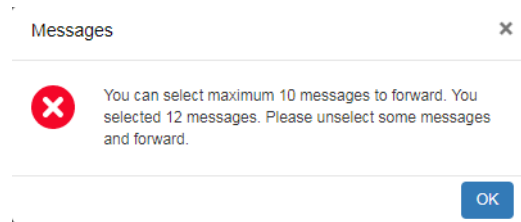
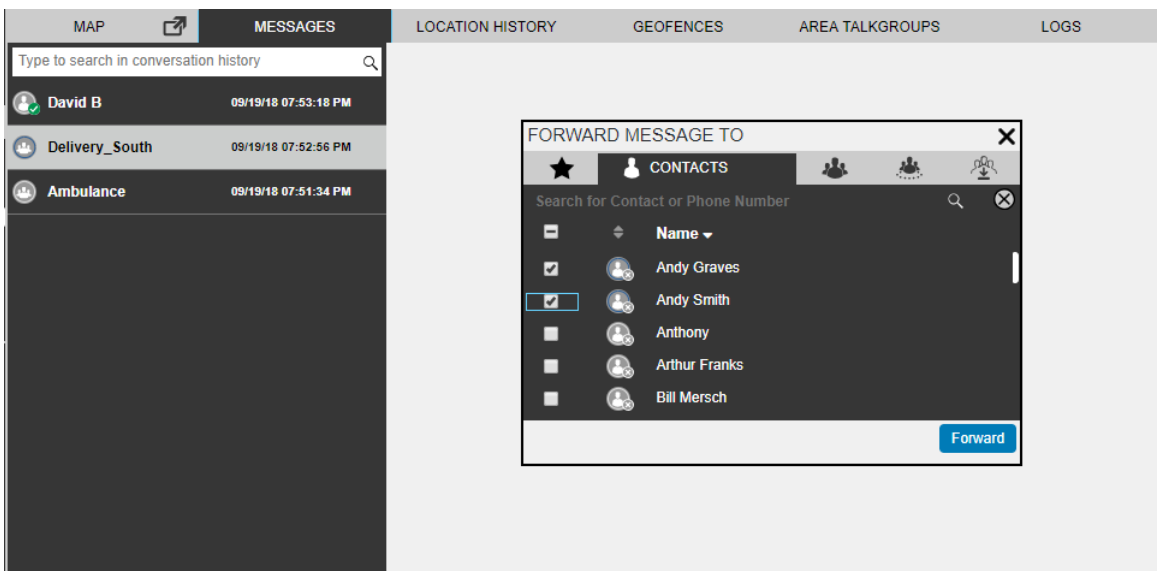
 **NOTICE:** You can select up to ten messages to forward to the Contacts and Talkgroup. If you select more than ten messages, an error window appears.

Figure 168: Forward Message Limitation Error Window



5 Click the **Forward** icon. A Forward Message to contacts and talkgroups window opens.

Figure 169: Forward Message to Contacts and Talkgroup Window



6 Select the contact or talkgroup and click **Forward**.

9.10

View and Download Received file


Download the file to view the attachment. The file downloads under the download folder configured for your browser. You can open the file and click the **Download** icon to download the file. You can use the Zoom In, Zoom Out and Reset button to view an image as per your comfort. For download icons, refer to [Icons and Tones on page 51](#) section of this document. If you are signed out from the Dispatch and you receive a multimedia file, then download to view the file. When you receive a multimedia message, you can view and download the file to your local PC. The attachment is downloaded automatically only if you are signed in.

When and where to use: To download a received file, follow these steps:

Procedure:

- 1 Sign in to Dispatch. Click the **Message** tab.
- 2 Click the **Download** icon on the file as shown in the figure.

Figure 170: View and Download Received File

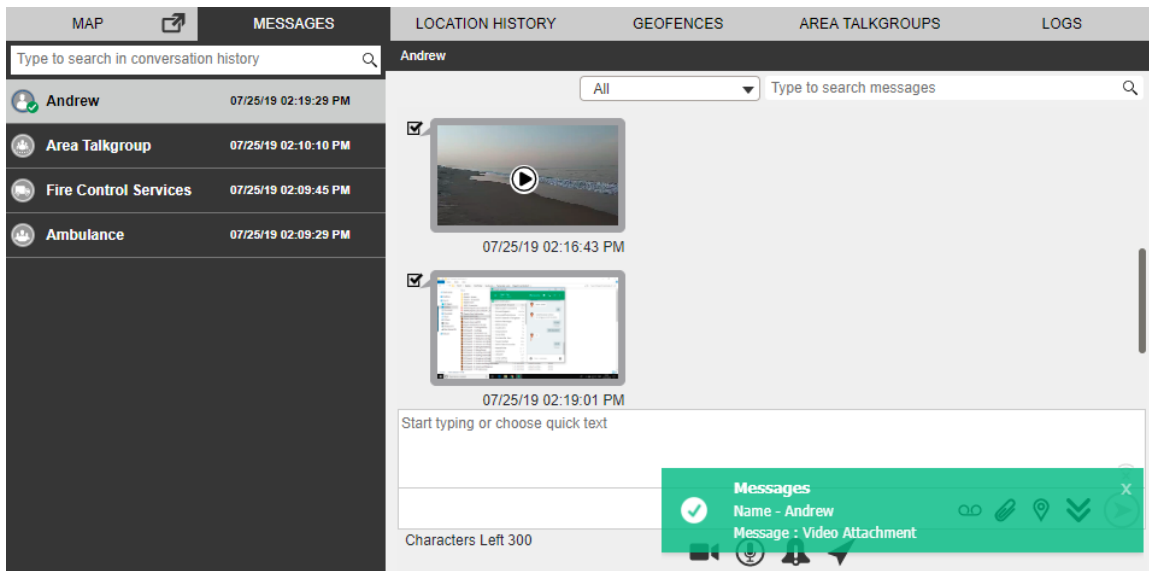


9.11

View Shared Geo Location by the Fleet Member

Fleet members can share a location. To view the shared location of the fleet member, click the received location. The shared location of the member shows in Message tab.

Figure 171: View Shared Geo Location of the Fleet Member

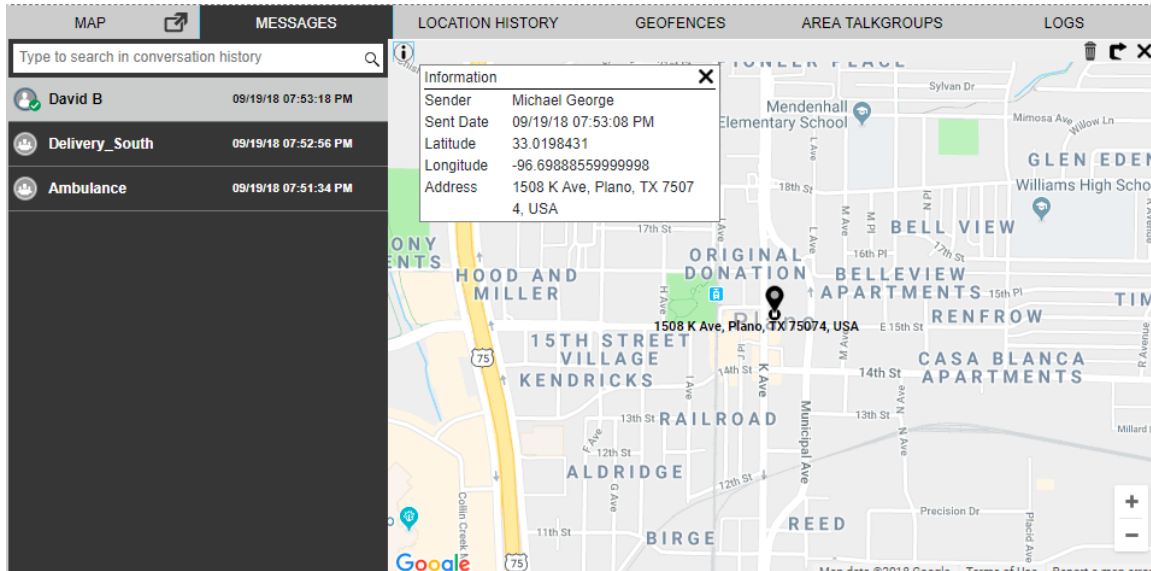

When you view a received message, the status of that message is shown with a **Completed** icon. You can change any message to Parked status. To change the status of the message, click the **Status** icon on the message and change the status.

9.12

Metadata of the Multimedia Files or Location

When you receive a multimedia message (document), you can view the metadata or details of the file by hovering the mouse on the received document. A Details icon is shown when you open the received audio, video, or location message. Clicking the **Details** icon shows the information of the file in addition to the File Name, Sender, Send date, and time:

Table 5: Metadata

Multimedia Type	Details Shown
Image	Size
	Resolution
	Format
Video	Size
	Resolution
	Format
Audio	Size
	Format
Document	Size
	Format

Multimedia Type	Details Shown
Location	Latitude
	Longitude
	Approximate address

9.13 Export

The export operation allows you to export conversation or individual messages with or without attachments in each conversation. You can choose to exclude the media files at the time of exporting conversations. The exported file is in ZIP format and downloads under the download folder configured on the web browser. You can export single or multiple messages at a time. You can filter data available in the exported CSV or Excel sheet.


9.13.1 Exporting conversation history

When and where to use: To export conversation history, follow these steps:

Procedure:


- 1 From the Message tab, Mouse hover on the conversation. A More icon shows.
- 2 Click the **More** icon on the conversation.
- 3 Select **Export History** from the drop-down.

Figure 172: Export Conversation History

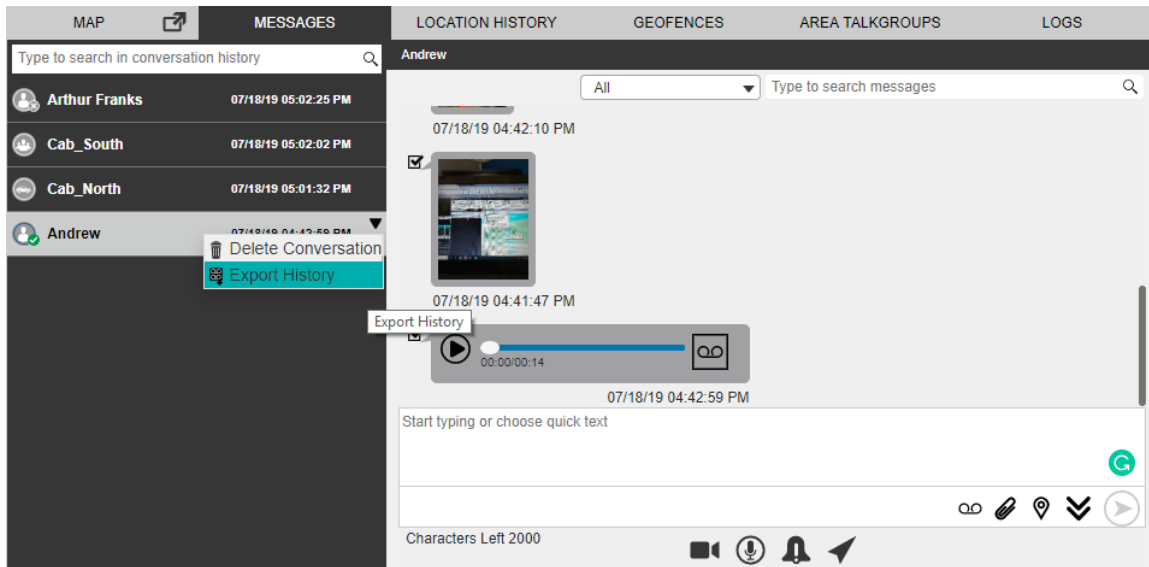

- 4 A confirmation pop-up displays.
- 5 If needed, clear the check box “Include media files in archive” to exclude the attachments to get downloaded.

Figure 173: Export Message History Confirmation Pop up

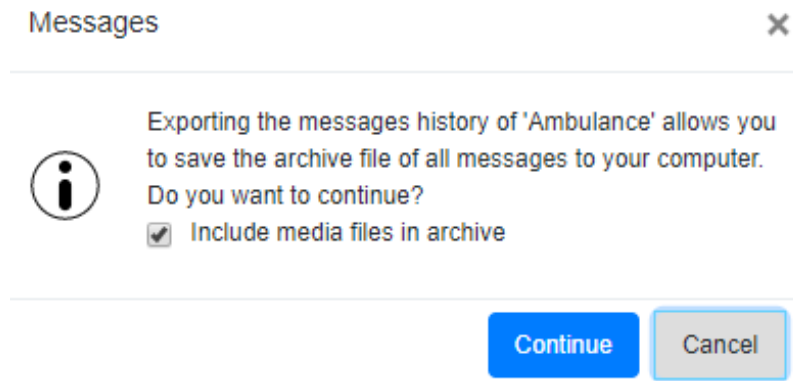

- To export the conversations, click **Continue**.
- To cancel the action, click **Cancel**.

9.13.2


Exporting individual message

When and where to use: To export individual message, follow these steps:

Procedure:


- 1 Select a conversation from the Message tab.
- 2 Mouse hover on the conversation. A More icon shows.
- 3 Click the **More** icon on that message.
- 4 Select **Export** from the drop-down. Check boxes are shown to select the messages.

Figure 174: Export Individual Message

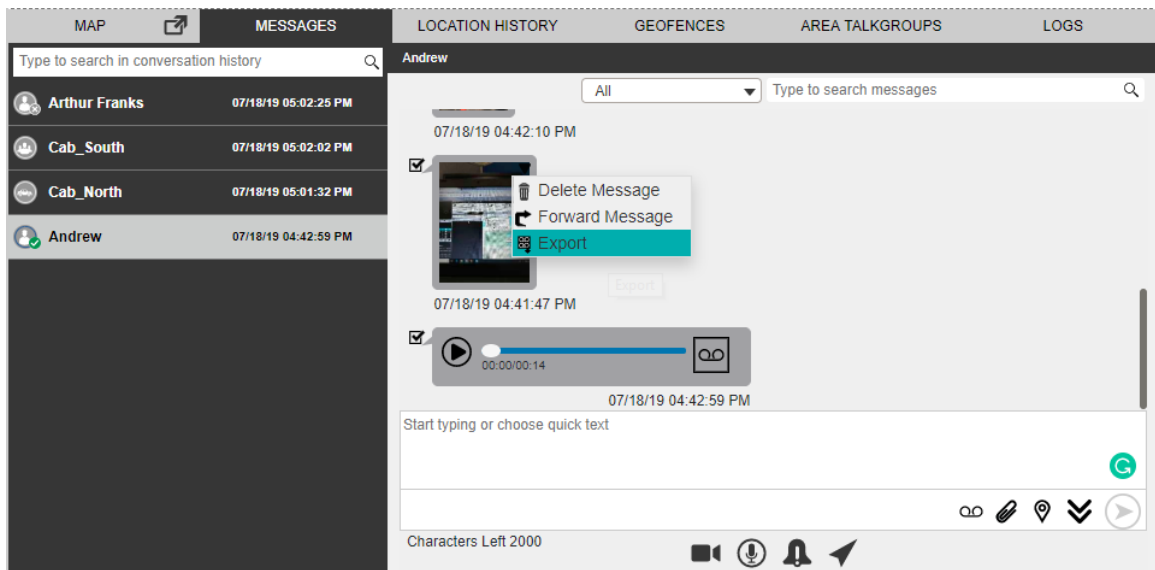


- 5 Select the messages by checking the check boxes and click the **Export** icon.

Figure 175: Select Individual Message for Export

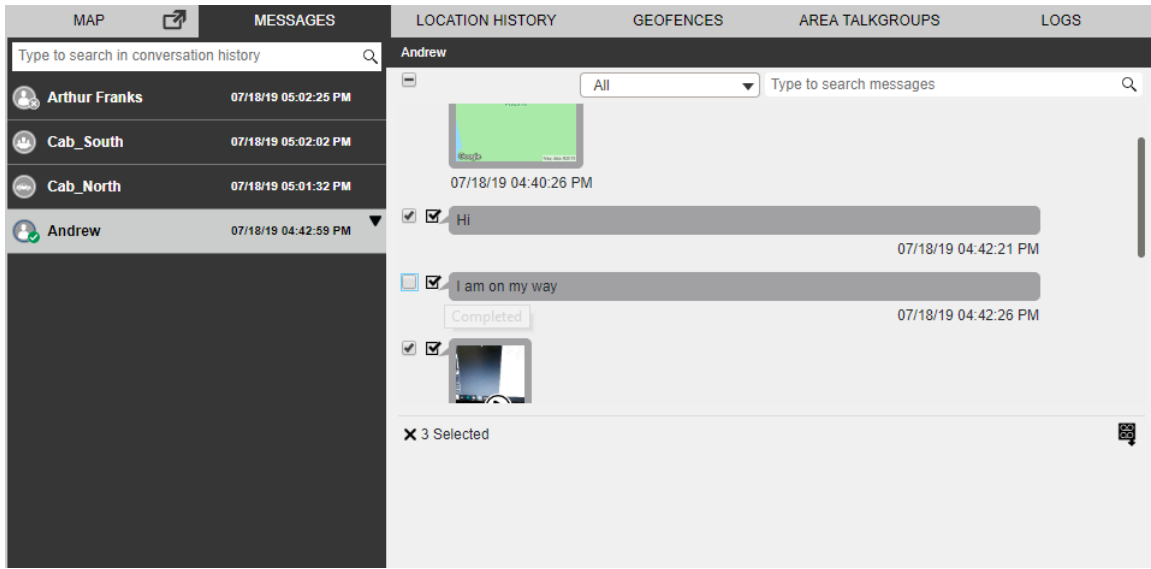

6 A confirmation pop-up displays.

Figure 176: Export Individual Message Confirmation Pop up

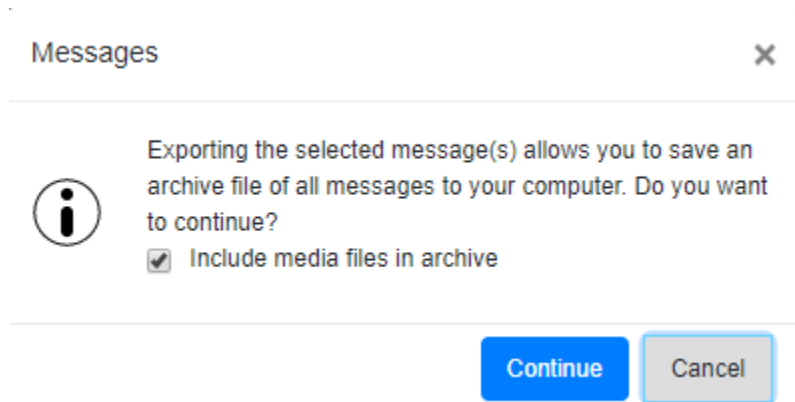


- To export the messages, click **Continue**.
- To cancel the action, click **Cancel**.

Chapter 10

Status Alerts

Fleet member can send status alerts while application is in foreground or background using programmable keys on their device (if the manufacturer has provided) or from the PTT application. Whenever you receive a status alert, it is shown in Status Alerts tab under the Alerts tab along with the toast message. You can click the toast message to view the alert details. If the message is long, scroll down the status alerts window to view the complete content. Status alerts allow you to receive status message from the fleet member and to know their quick status such as on-duty, on-route, busy, at-incident, off-duty. You can take appropriate actions on the status alerts as needed such as PTT call and send message.

Figure 177: Status Alert

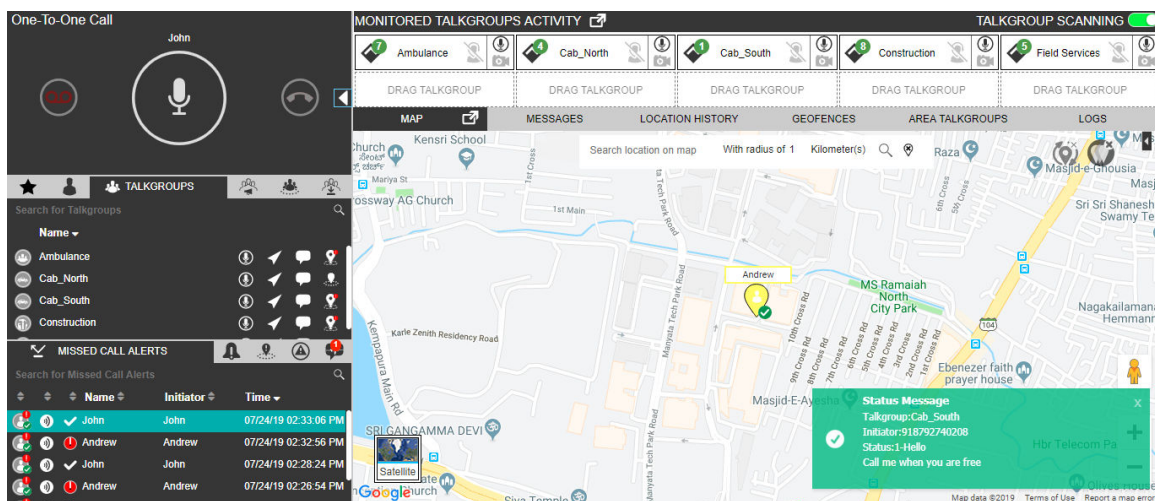

You can also view the status message from the User check window. For more information, refer to [User Check on page 215](#) section of this document.

To configure the settings related to the status alert, refer to the [Settings on page 242](#) section of this document.

Chapter 11

Recording Calls

The recording feature allows you to record PTT calls, Emergency calls, Ambient Listening, and Discreet Listening. The following sections describe the recording options that are available to you in the Dispatch.

11.1

Record Always

Record Always allows you to record each call you join. All the calls you are a participant in are recorded until you switch back to Record Manually from the Settings tab. In Record Always mode, the following behavior is observed for a call:

Procedure:

- 1 The Record icon on the Call Activity window indicates the recording status.
- 2 When the call ends, the call recording creates and automatically stores in the call history. When next call starts, the call automatically records and stores as a new entry.



NOTICE: The only calls recorded are where you are a participant of the call.

For details on the Record Always setting, see the [Recording Settings on page 245](#) section of this document.

11.2


Record Manually

Manual recording allows recording the whole or part of the call by using the start and stop record button whenever you want to record. Every time you stop the recording, a new log record is created. Perform the following steps to manually record a call manually:

Procedure:

- 1 To start recording the call, click the **Record** icon.

Figure 178: Manual Record button

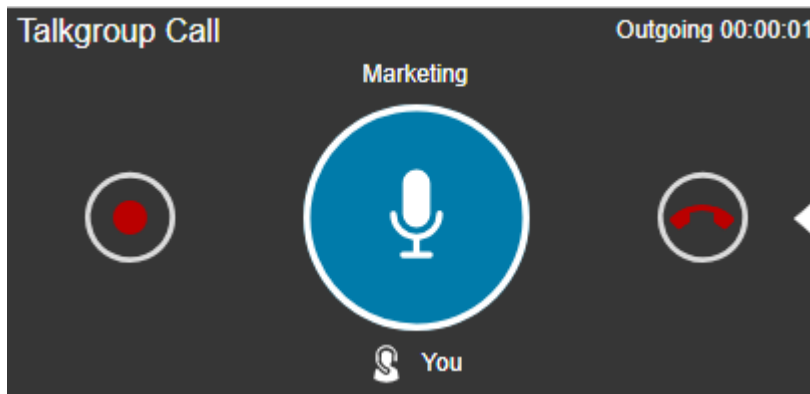

- 2 Click the **Stop Recording** icon to stop recording. A record entry is made in the call logs.



NOTICE: During a call, if the recording setting is changed, it is applicable from the start of the next call.

11.3

Playing Back the recorded calls

The recorded calls are stored under Call Logs.

When and where to use: To view recorded calls, follow these steps:

Procedure:

- 1 Click **Logs** → **Call Logs**.
 - Select a recording from the Call Logs section and click the **Play** button.
 - Double-click the recorded file from the Call Logs section or on the recorded files (displays below the Call Logs section).
- 2 While a recorded file is being played and if you click another recorded file, the player stops playing the file.
- 3 In the case of a manually recorded file, there may be multiple recording files under a single log file. Selecting a manually recorded log file from Call Logs highlights the first recorded file. If you click the **Play** button, the player starts playing from the first recorded file unless you double-click or select any other recorded file to play.
- 4 You can view the start time and end time of the file being played beside the player controls.
- 5 To rewind or forward a recording while it is being played, hold the track slider, and drag it backward or forward.

Figure 179: Play Back the Recorded File

The screenshot shows the 'LOGS' section of a web application. It includes a navigation bar with tabs for MAP, MESSAGES, LOCATION HISTORY, GEOFENCES, AREA TALKGROUPS, and LOGS. Under LOGS, there are sub-tabs for ALERT LOGS, CALL LOGS, VIDEO LOGS, GEOFENCE LOGS, AUDIT LOGS, and LOCATION REPORTS. The CALL LOGS tab is active, displaying a search and filter area with fields for From Date (07/12/2019), To Date (07/19/2019), Direction (Both), Category (Any), Name, Initiator or Target User, Type (Any), and Member. Below the filters is a table of call logs:

	Name	Member	Initiator Or Target User	Duration	Time
<input checked="" type="checkbox"/>	Andrew	370-692-4013	370-692-4013	00:00:30	07/19/19 10:44:46 AM
<input type="checkbox"/>	Andrew	370-692-4013	370-692-4013	00:00:05	07/19/19 10:36:12 AM
<input type="checkbox"/>	Andrew	370-692-4013	370-692-4013	00:00:01	07/19/19 09:57:21 AM
<input type="checkbox"/>	Cab_East	370-692-4013	999050000102	00:00:14	07/18/19 02:44:23 PM
<input type="checkbox"/>	Andrew	370-692-4013	999050000102	00:00:05	07/18/19 02:28:34 PM

Below the table, there are 'Start Timestamp' (07/19/19 10:44:46 AM) and 'End Timestamp' (07/19/19 10:45:17 AM) fields. At the bottom, a playback player is visible with a pause button, a progress slider at 0:01 / 0:18, and a volume icon.

11.4

Exporting the Recorded Call Conversation


You can export the recorded call conversations to the download folder configured on the web browser. You can export single or multiple call records at a time. The exported file, which is in ZIP file format, contains the details of calls in HTML format and a link to the call recording file which is in MP3 format. You can click the **Export with call recording** icon in the filter area to export all the call recordings.

When and where to use: To export a single call recording, follow these steps:

Procedure:

- 1 Click **Logs** → **Call Logs**.
- 2 Select a recording from the Call Logs section and right-click on the log.

Figure 180: Export Single Recorded File

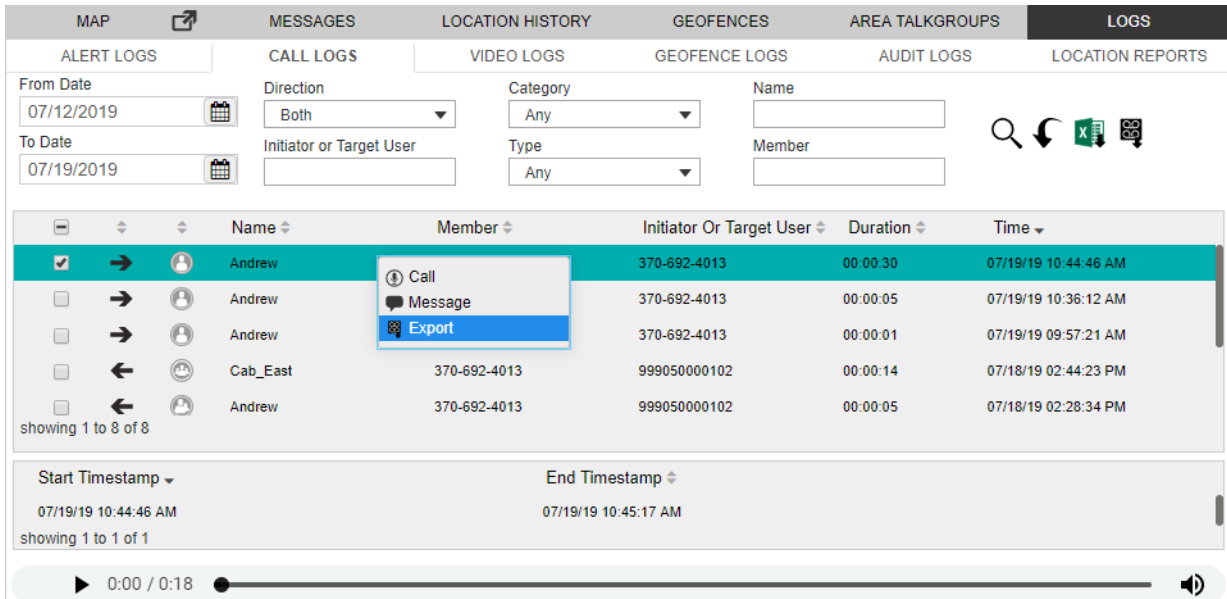

- 3 To export the recorded file to a location you specified, click the **Export** icon.

11.4.1


Exporting multiple call recordings

When and where to use: To export multiple call recordings, follow these steps:

Procedure:

- 1 Click **Logs** → **Call Logs**.
- 2 Set the filters, if needed, and click the **Search** icon. The details of the filtered call recordings are shown.
- 3 Select the check boxes next to the call recordings for which you want to export the details.

Figure 181: Export Multiple Recorded File

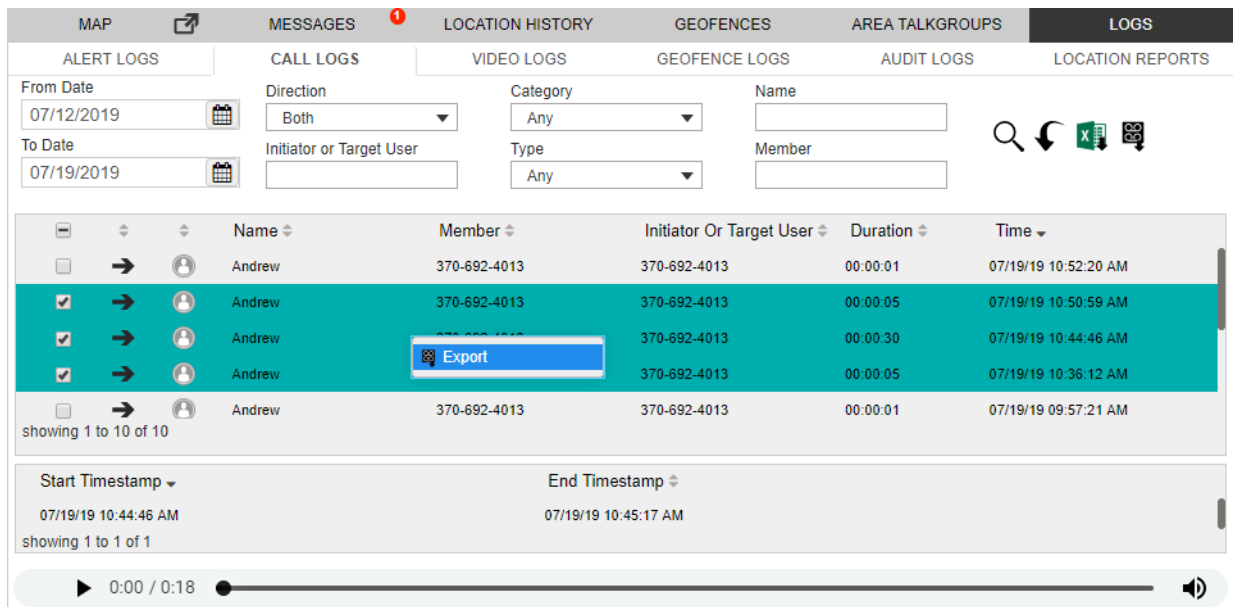

- 4 Right-click and select **Export** to export the call recordings.



NOTICE: The files store with an MP3 extension.

11.5


Backup- Call Recordings

The backup action ensures that the call details along with the call recordings are saved for the future reference. The dispatcher can choose to take necessary action whenever a backup pending message is displayed. In the following conditions, a backup confirmation message displays:

Procedure:


- 1 If there are any call recordings and the dispatcher has not at all taken the backup of the call recording, then a pop-up message displays every time the dispatcher signs in.

Figure 182: Back up notification- Sign in

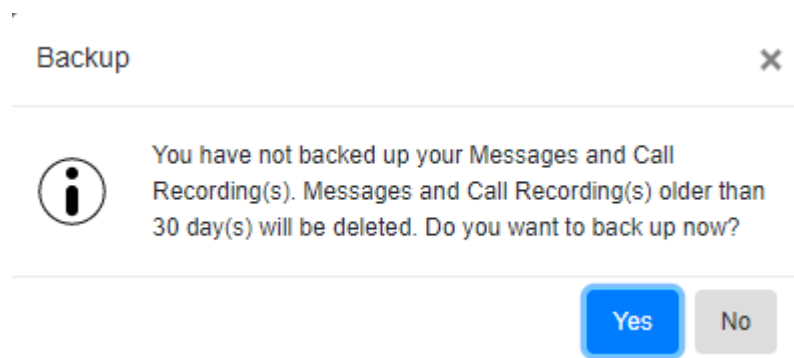

- To take backup, click **Yes**.
 - To cancel the action, click **No**.
- 2 If the backup is due and the dispatcher has not backed up, then a pop-up message displays on the sign in.

Figure 183: Back up notification

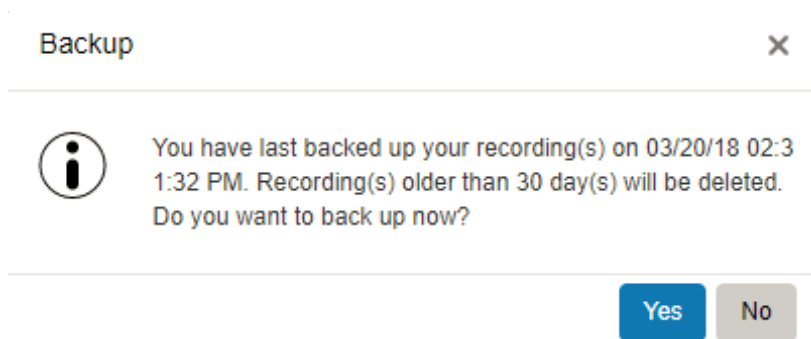

- To take backup, click **Yes**.
- To cancel the backup action, click **No**.

3

Clicking **Yes** starts the backup and the backup file downloads to the browser downloads. A confirmation message displays to make sure that the backup file is downloaded to the download folder.


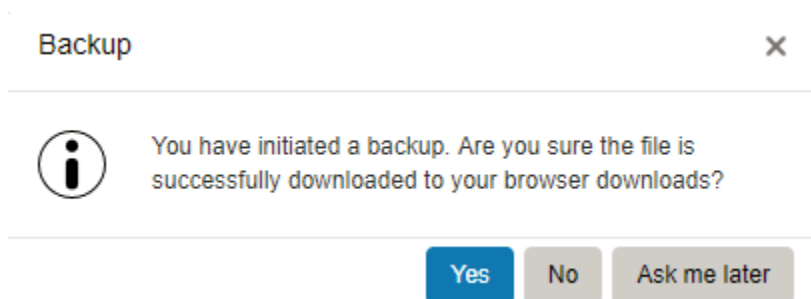
 **NOTICE:** The backup interval and periodic reminder notification for backup depends on the server configuration. The recordings older than the configured period are deleted and a reminder through a periodic toast message displays until the successful backup is taken.

Figure 184: Backup file download- Confirmation message



- Click **Yes** to confirm that the download is successful.
- Clicking **No** confirms backup is unsuccessful.
- Clicking **Ask me later** pops-up the confirmation message until you that confirm the download completes.


In the header, a warning  icon displays next to the Settings if call records are not backed up. The last backup date, backup due date, and the configured backup interval are shown under the Settings>General. The dispatcher can take the backup anytime from the Settings and the backup file will contain the details after the last backed up date. The backup file, which is in ZIP file format, contains the details of calls in HTML format and a link to the call recording file which is in MP3 format.

Figure 185: Back up HTML file

Dispatch (Name: Jack; email: jack.guna@motorolasolutions.com; MDN: 919916142494)							
Exported recordings at 03/26/18 12:14:57 PM (UTC + 05:30)							
Number of records: 14							
Name	Time	Direction	Phone Number	Duration	Type	Delivery Report	Audio File
Cab_East	03/26/18 10:12:18 AM	Outgoing	912222201522 912222220608 918050533081 919066000450 919902844299 919880066322 917090546777	00:00:32	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-12-18_0.mpg
Cab_East	03/26/18 10:12:56 AM	Outgoing	912222201522 912222220608 918050533081 919066000450 919902844299 919880066322 917090546777	00:00:03	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-12-56_0.mpg
Michael George	03/26/18 10:14:44 AM	Incoming	917090546777	00:00:00	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-14-44_0.mpg
Michael George	03/26/18 10:14:44 AM	Incoming	917090546777	0	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-14-44_0.mpg
Cab_South	03/26/18 10:20:56 AM	Outgoing	912222201522 919591605500 919902844299 912222201462 919880066322 917090546777	00:00:04	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-20-56_0.mpg
Robert_Handset	03/26/18 10:31:22 AM	Outgoing	912525001002	00:00:07	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-31-22_0.mpg
Cab_South	03/26/18 12:01:29 PM	Incoming	912222201462 912222201522 917090546777 919591605500 919880066322 919902844299	00:00:37	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-01-29_0.mpg
Fire Control	03/26/18 12:09:46 PM	Outgoing	919916142494	00:00:07	Broadcast call	Missed Call: 2 Offline: 0 Rejected: 0 Successful Delivery: 1 Total: 3 Unavailable: 0	Recording_Export_919916142494_03-26-18_12-09-46_0.mpg
Talkgroup75	03/26/18 12:10:00 PM	Outgoing	919066000339 919066000362 9190000112233	00:00:02	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-10-00_0.mpg
Cab Services	03/26/18 12:10:34 PM	Outgoing	9190000112233 919066000339 919066000362	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-10-34_0.mpg
Cab Services	03/26/18 12:11:49 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:06	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-11-49_0.mpg
Cab Services	03/26/18 12:12:02 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-12-02_0.mpg
Cab Services	03/26/18 12:12:18 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-12-18_0.mpg

The backup file is downloaded to the download folder configured on the web browser. For more details, refer to [General on page 242](#) in the [Settings on page 242](#) section of this document.

Figure 186: Backup Now- Settings

Last Backup date: 03/12/18 02:32:21 PM

Backup due date: 03/13/18 02:32:21 PM !

Backup Interval: 1 Day(s)

[Backup Now](#)



NOTICE: If there is an ongoing backup of recording and you sign out from the Dispatch, then a cancellation confirmation message appears. Selecting Continue sign out the Dispatch and cancels the backup.

Chapter 12

Supervisory Override

Supervisory override allows you to take the floor and speak at any time during a call, even if someone else is speaking. When you take the floor while someone else is speaking, the floor is revoked from the fleet member and given to you. As a dispatcher, you have Supervisory Override capability by default, unlike some other clients where corporate admin may assign the supervisory override to them.



NOTICE: There may be a delay of 0 to 10 seconds before you get the floor and you can hear a floor busy tone during that time. You can use supervisory override rights during any call you are participating in including a one-to-one call.

Chapter 13

Alerts

Alerts can be a request from a fleet member for a call or a notification that you missed an incoming PTT call or Video call or a geofence alert or status alert from a fleet member. Alerts display in the Alerts window. You can respond to an alert with an action (locate, message, call, or send an IPA). Alerts also have a status (Attended, Unattended, Parked, or Complete). You can sort the alerts by the Name of the Sender, Time, Type, or Status by clicking the column label. By default, the alerts are sorted by time. The number of unattended alerts are shown with a badge in the header of the Alerts tabs.

13.1

Instant Personal Alert (IPA)


An Instant Personal Alert (IPA) is a way for a fleet member to ask for a call-back from you or conversely. An IPA is especially useful if the fleet member you want to call has a presence status of Do Not Disturb.

Sending an Alert

Click the **Contacts** tab from the Contacts and Talkgroups window and select a fleet member using the check box next to the name of the member.

Click the **IPA** icon. When the IPA is sent, a message appears at the bottom right-hand part of the screen with the status showing "Success".

 Figure 187: Successful Outgoing IPA

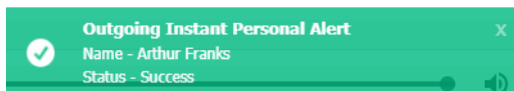


NOTICE: IPAs can be sent to only one contact at a time. You cannot send an IPA to a talkgroup.

Receiving an Alert

Whenever you receive an Instant Personal Alert, it shows in the Alerts window with the IPA icon next to the name of the sender. From this window, you can return a call. For more details, see the [Placing a Call from the Alerts Window on page 95](#) section of this document.

Figure 188: Dispatcher Alerts window

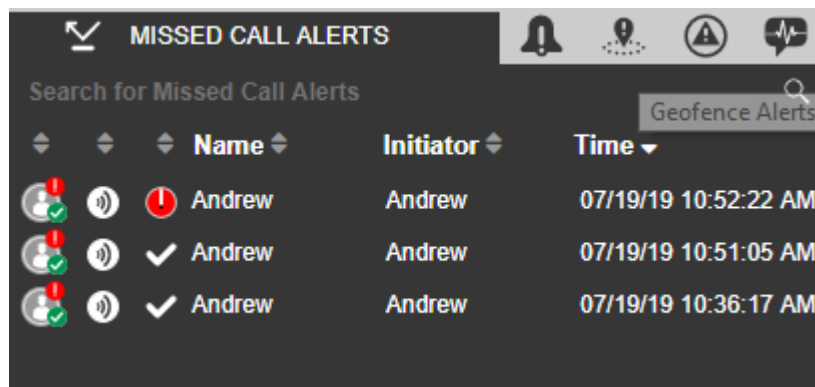

13.2


Missed Call Alerts

A missed call alert displays when you do not receive an incoming PTT call.

One-to-one Missed Call Alert

When you miss a one-to-one call, a missed call alert displays in the Alerts window. An icon ahead of the name of the caller indicates missed call:


Figure 189: One-to-one Missed Call Alert on Alerts

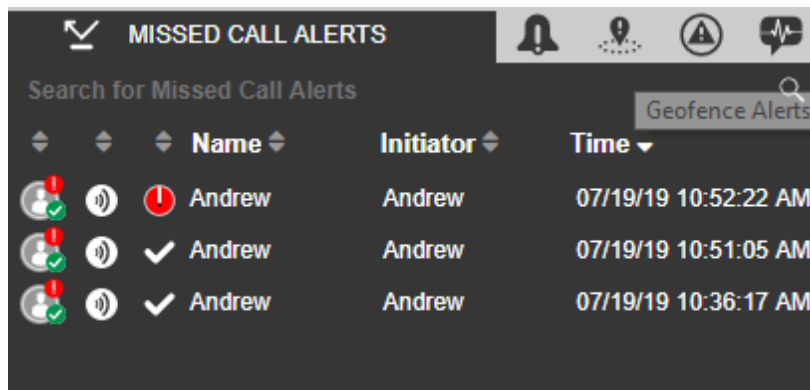

From the missed call alert, you can originate a call.


Talkgroup Missed Call Alert


Whenever a talkgroup call completes with you as a member of the talkgroup (except when you are camped on one), without you actively participating in that talkgroup call, a missed call alert is provided in the Alerts window. An icon ahead of the name of the talkgroup indicates the missed call.

 **NOTICE:** Talkgroup calls from talkgroups other than the scan list is always missed whether you are busy on another call or not. You receive a talkgroup missed call when monitor talkgroup status is Monitor Only or Talkgroup Group Scanning mode is off.

The following screen shows an example of a missed talkgroup call where a row with name Cab_North is missed talkgroup call:

Figure 190: Talkgroup Missed Call Alerts on Alerts Window

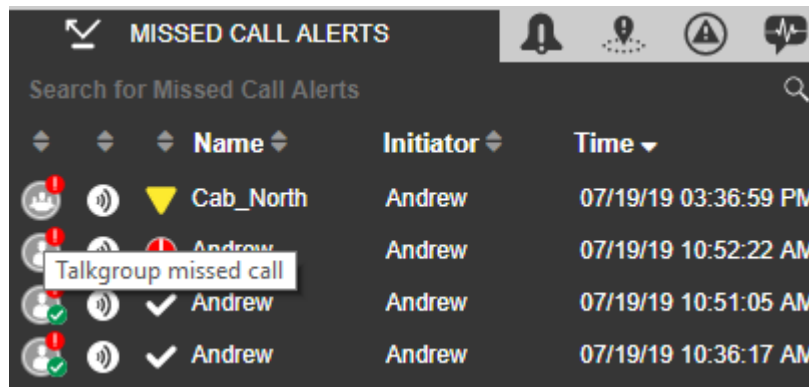

 **NOTICE:** When you are on a high priority talkgroup call, lower priority calls are missed.


Quick Group Missed Call Alert


Whenever an incoming Quick Talkgroup Call ends with you as a member of that quick talkgroup without you actively participating in that quick talkgroup, a missed call alert is provided in the Alerts

window. An icon ahead of the name of the talkgroup indicates the missed call. The name of the originator is shown in the name column.

The screen here shows an example of a missed Quick Talkgroup Call, where a row with name “Michael Georange” is a missed Quick Talkgroup Call.

Figure 191: Quick Group Missed Call Alerts on Alerts Window

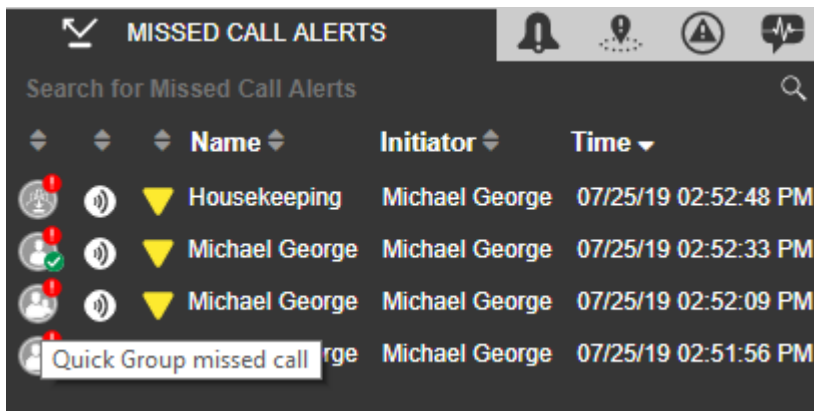

 **NOTICE:** Quick Talkgroup Calls are always missed whether you are busy on another call or not.


Broadcast Group Missed Call Alert

Whenever you are in a one-to-one call that you initiated and another Broadcast Group call is received, a broadcast group missed call alert is provided in the Alerts window. An icon ahead of the name of the talkgroup indicates the missed call. The broadcast group name is shown in the name column.

Missed Incoming Video Call Alert

Whenever you receive a video stream request and you choose to close the toast notification or you are already in another video stream, then a missed video call alert show in the Alerts window. An icon ahead of the name indicates the missed call.

Figure 192: Video Missed Call Alerts on Alerts Window

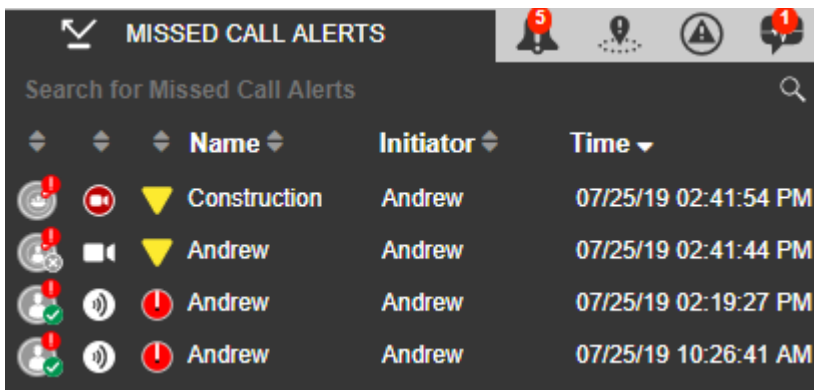


13.3

Geofence Alerts

When any fleet member crosses the fence that you define, an alert is shown in the Geofence Alert tab. A geofence alert shows next to the name of the fleet member name with an icon showing out of fence or inside the fence.

Figure 193: Geofence Alert

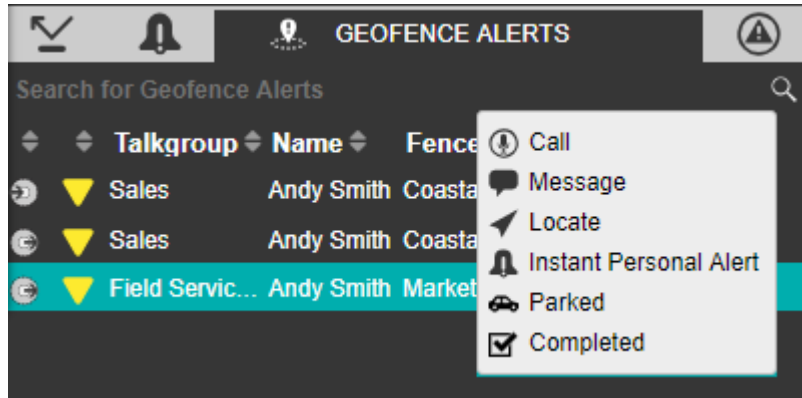


13.4

Emergency Alerts

The emergency alert notifies you that an emergency has been declared for the fleet member. An emergency alert shows in the Emergency Alert tab whenever an emergency whenever the fleet member or the dispatcher activates the emergency. For actions on the Emergency alert, refer to the [Emergency on page 103](#) section of this document.

Figure 194: Emergency Alert

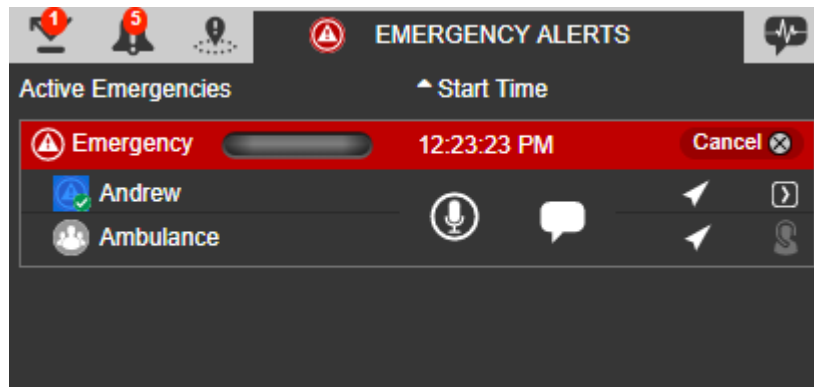


13.5

Status Alerts


The status alert notifies you the status of their fleet members such as on-duty, on-route, busy, at-incident, off-duty, and can contain a short message of the status. The fleet member manually sends their quick status from the list of pre-configured messages stored in their device. Status alert shows in the Status Alert tab along with the toast message whenever you receive a status alert from fleet member.

Figure 195: Status Alerts

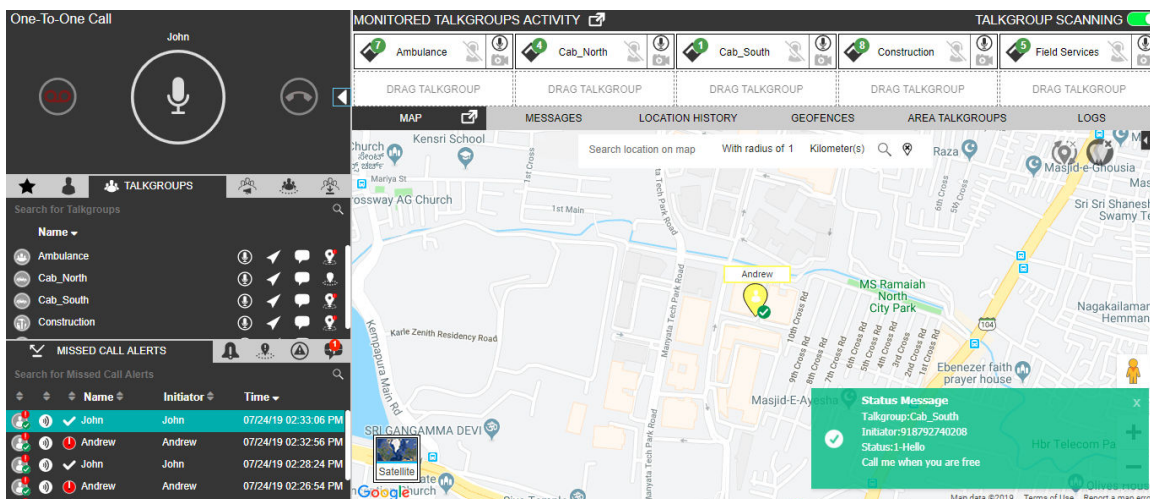

Mouse hover on the status column shows the information of the status. You can also click the **More** icon associated to the status alert to view status message details. The screen here shows the details that display when you click the **More** icon.

Figure 196: Status Alerts Details

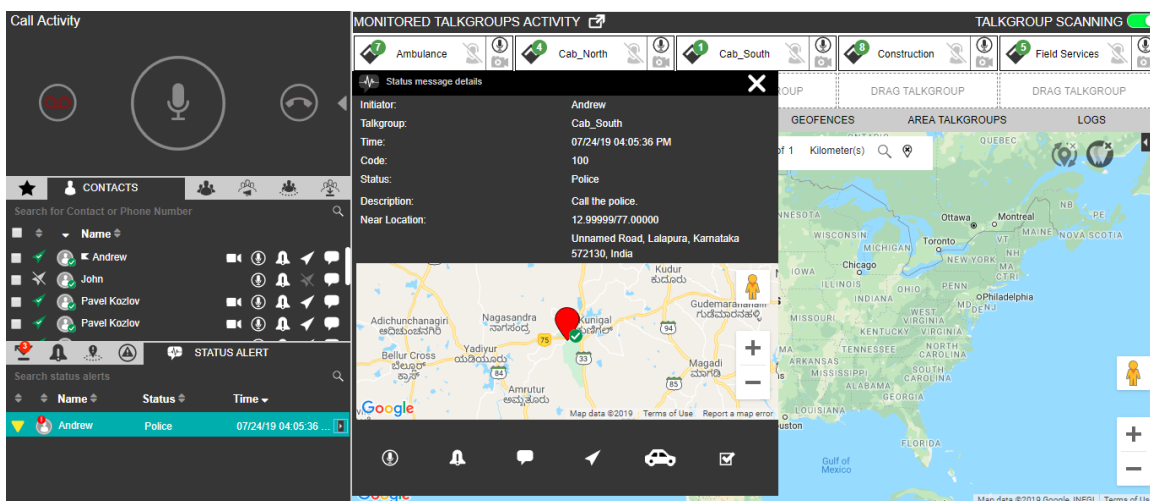


You can call, send IPA, message, locate, and move the status of the status message to parked or completed state from the status alerts details window.

Actions for an Individually Selected Alert

For each of the alerts in the Alerts window, you can locate, message, call, or send an Instant Personal Alert.

Figure 197: Actions on Alerts Window

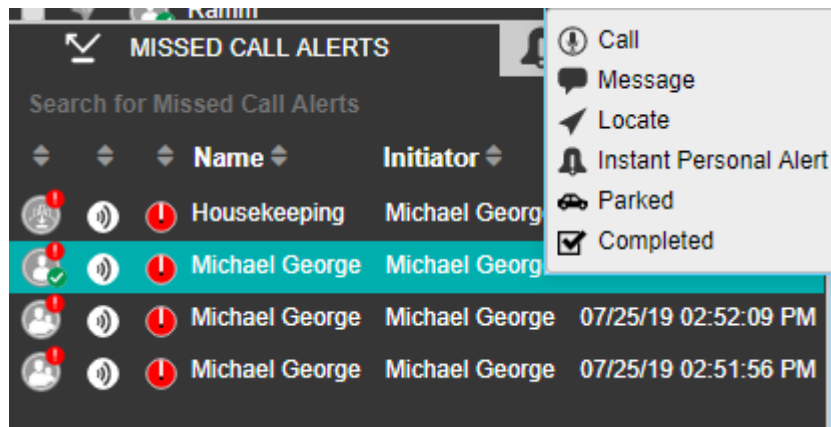

Locate

Helps you to locate the fleet members on the map. To locate from the alerts tab:
Select the alert, right-click, and click **Locate**. For a One-To-One missed call alert, the fleet member is located. For a Quick Talkgroup missed call alert, the originator is located and for a Talkgroup missed call alert, all the members of the talkgroup are located.

Call

Helps you to call to the fleet member or talkgroup after you receive IPA. To call from the alerts tab:
Select the alert, right-click, and click **Call**.

Instant Personal Alert

Helps you send an IPA to the fleet member. An acknowledgment displays on the Dispatch. To send an IPA from the alerts tab:
Select the alert, right-click, and click **IPA**.

Message

Helps you send a message to the fleet members. To send a message from the alerts tab:
Select the alert, right-click, and click **Message**.

Parked

Helps you to specifically assign the alert to parked status. If you are busy with some other activity and want to flag the alert for later, you would typically do this action.

Completed


If you have finished responding to an alert, this action helps you to complete the alert. This action moves the alert to the alert logs.



NOTICE: You cannot send an Instant Personal Alert to talkgroup missed call alerts. Also, you cannot locate the Broadcast group.


When you respond to an alert with an Instant Personal Alert (IPA) or call, the status of alert becomes "Attended" as shown here:

Figure 198: Attended Status Alerts Window

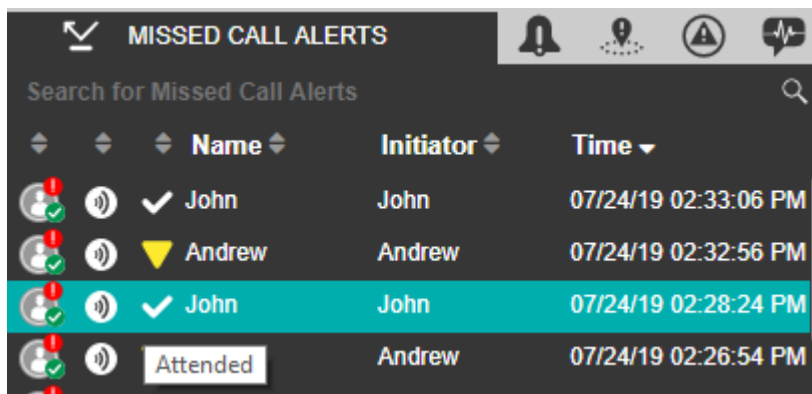


When you do not respond to the alert, a toast message reminds you to take the necessary action. The status of the alert shows “Expiring” as here:

Figure 199: Expiring Status Alert Window

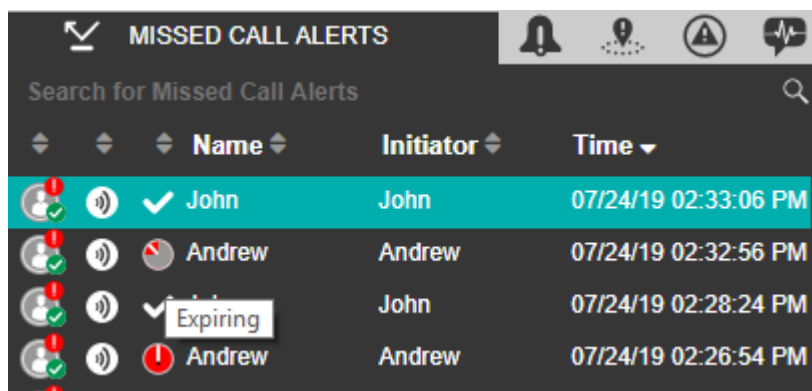

When you do not act on the alert before the expiry of configured alert reminder, the status of the alert becomes “Expired” as shown here:

Figure 200: Expired Status Alert Window

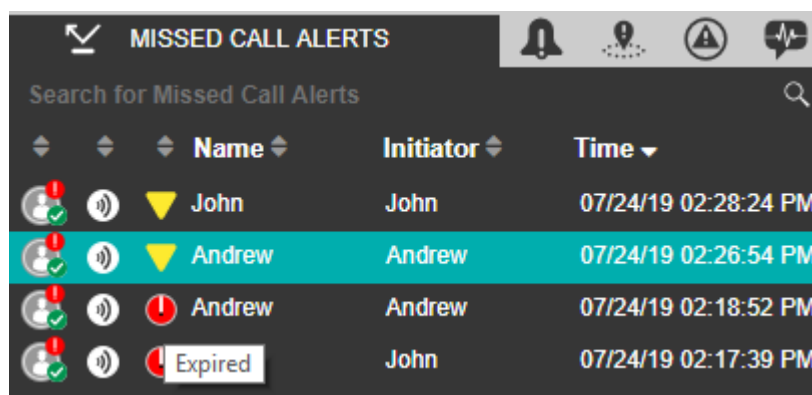

NOTICE: The status of an alert does not change when you use the locate operation.

To move an alert to the alert logs history, select the **Completed** icon.

Each alert in the Alerts window has an action status associated with it. The action status helps you determine which alerts have been acted upon and which ones are pending a response. The

following icon indicates the status of an alert. To change the status of the alert, select the alert, right-click, and select the status.

Unattended

Indicates you have a pending (unattended) alert.

Attended

Appears when you call or send an IPA in response to the alert.

Parked

Appears when you specifically assign a parked status. If you are busy with some other activity and want to flag the alert for later, you would typically do this action.

Completed

After you finish responding to an alert, you can complete the alert. This action moves the alert to the alert logs.




NOTICE: From each of the alerts tab, except Parked, alerts are moved to the logs as per the duration set by the dispatcher in Alerts section of the Settings tab. You can choose the tones or disable the tones for all alerts under the Tones and Notifications header on the Settings page. For more information, refer to the [Tones on page 247](#) section in this document.

Actions for Multiple Selected Alerts

You can also respond to multiple alerts from the Alerts window. To select multiple alerts, press either the Shift key or the CTRL key on your keyboard and click the alerts you want to select. When selecting multiple alerts, you can right-click to choose the action status of Parked or Completed.

Figure 201: Multiple Selection Alerts Window

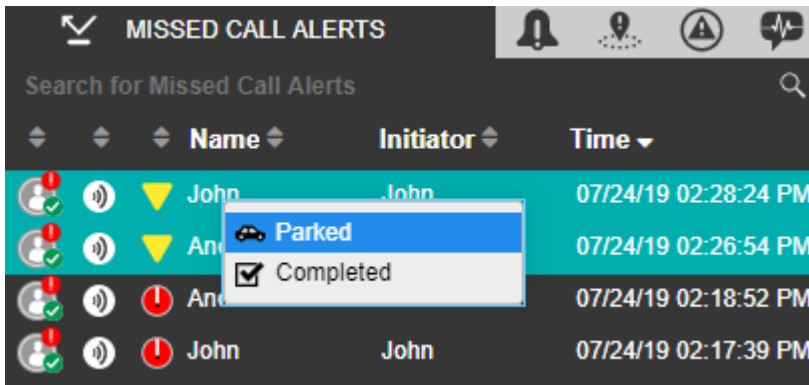


Parked

Appears when you specifically assign a parked status. If you are busy with some other activity and want to flag the alert for later, you would typically do this action. When you respond to multiple alerts with a Parked status, the status of the alert becomes "Parked" as shown here.

Completed

After you finish responding to an alert, you can complete the alert by selecting the Completed option. This action moves the alert to the alert logs.

Figure 202: Multiple Selection Status Window

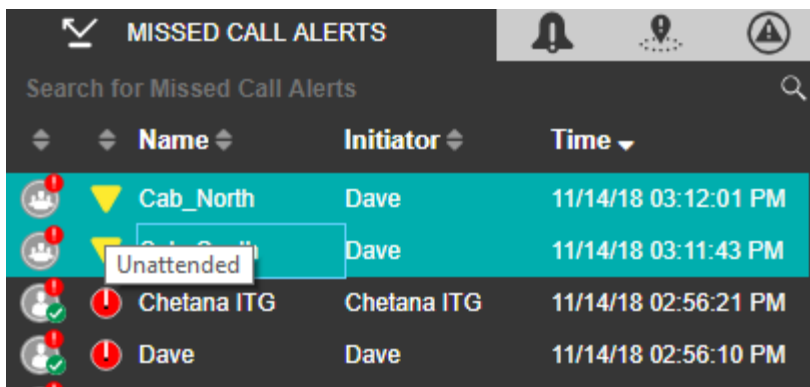

The initiator column in the Missed call Alerts shows the name or phone number of the member who initiated the call.

13.6

Geofence Alerts


When any fleet member crosses the fence defined by you, an alert shows in the Geofence Alert tab. A geofence alert shows next to the name of the fleet member with an icon showing out of fence or inside the fence.

13.7

Emergency Alert

The emergency alert notifies you that an emergency has been declared for the fleet member. An emergency alert show in the Emergency Alert tab whenever the fleet member or the dispatcher activates an emergency. For actions on the Emergency alert, refer to the [Emergency on page 103](#) section of this document.

Figure 203: Emergency Alert

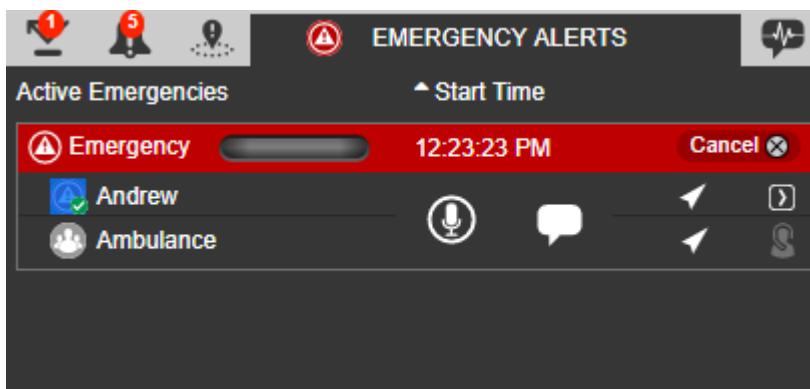


Chapter 14

Talkgroup Scanning

The calls that you originate are not pre-empted. The calls that you do not originate are pre-empted only after the floor is released. The talkgroups that are not in the scan lists do not barge in. A missed call alert is received for every unanswered call including the one with the lower-priority scan call. Talkgroup mentioned in the following sections include both talkgroups and area talkgroups. The Talkgroup Scanning feature allows you to scan through a list of talkgroups and area talkgroups for calls. The higher-priority talkgroup calls take precedence over lower-priority talkgroup calls.

The following screen shows the Monitored Talkgroups Activity window.


Figure 204: Talkgroup Scanning - Monitored Talkgroups Activity Window

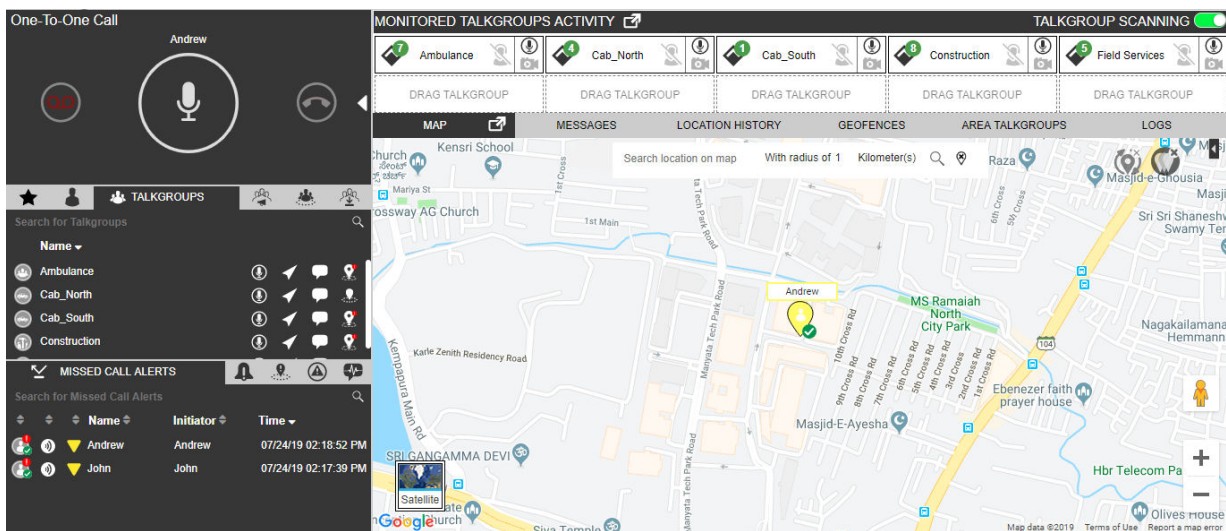

14.1 Setting the Talkgroup Priority

Once you have added at least one talkgroup in a monitored talkgroup window and selected the priority level, slide the **Talkgroup Scanning Slider** icon to set the Talkgroup Scanning priority for that talkgroup. If you do not want to assign a scanning priority to the talkgroup, then you can select priority 1-10 (depend on the configuration) for the talkgroup or you can select the “Normal Priority” option. When you select a talkgroup priority, the Set Talkgroup Priority icon changes to indicate that Talkgroup Scanning is enabled for that talkgroup and it shows the scanning priority that you selected to the right of the icon.

Figure 205: Set Talkgroup Priority Icon

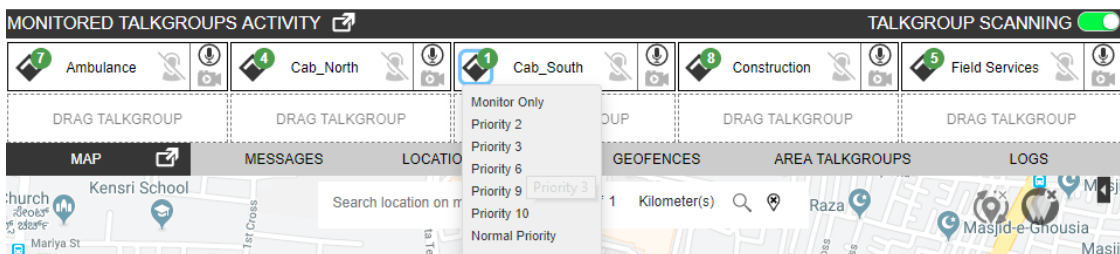



NOTICE: You can add or remove the talkgroups from a scan list or change the priority on the talk talkgroups in the scan list while on a call. Any changes you make during the call is applied once the call ends.

14.2

Enabling Talkgroup Scanning for a Talkgroup


Once you have selected the priority level for your talkgroups, click the **Talkgroup Scanning** icon to turn on Talkgroup Scanning for your monitored talkgroups. The Talkgroup Scanning icon changes to indicate that Talkgroup Scanning is enabled for that talkgroup and the Talkgroup Scanning Priority icon in the Monitored Talkgroups Activity window changes to show the scanning priority that you selected for that talkgroup. When the scanned talkgroup activity starts while Talkgroup Scanning is turned on, the call is heard immediately as per the priority.

When and where to use: In one of the two cases, the call does not barge in:

Procedure:

- 1 Talkgroup scanning is off.
- 2 Monitored talkgroup priority status is “Monitored Only”.

Figure 206: Turn on Talkgroup Scanning

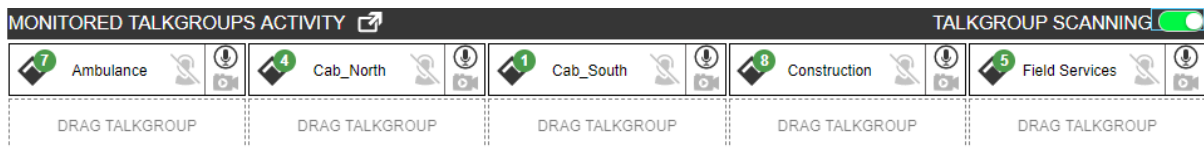


14.3

Turning off Talkgroup Scanning for a Talkgroup

Click the **Talkgroup Scanning** icon to turn off Talkgroup Scanning. When you select this option to turn off Talkgroup Scanning for the talkgroup, you still see the activity indicator for the talkgroup but do not automatically hear the call. That means the talkgroup is being monitored but not scanned.

Figure 207: Turn off Talkgroup Scanning

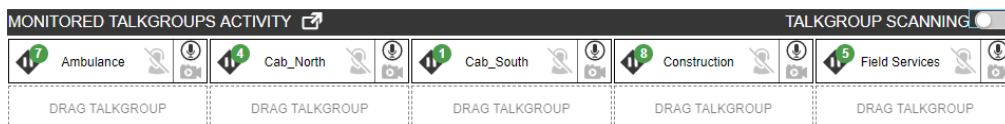


14.4

View Dispatchers on the Monitored Talkgroup

If any dispatcher has joined the call (other than you), a dispatcher **S** icon is shown which indicates some other dispatcher of the monitored talkgroup has joined the call. To view the number of dispatchers and the dispatchers in the call you click the **Dispatcher Information** **S** icon. On clicking the dispatcher information icon, a list tray displays. The dispatcher list tray shows the total number of dispatchers in the talkgroup, dispatchers on call and dispatcher name. Dispatcher icon is enabled when the first dispatcher joins the call and disabled again when the last dispatcher left the call, or no dispatcher is on the call. The details in the tray also show the last refreshed date and time. To refresh

the dispatcher list, click the **Refresh** button on the tray. A corporate admin can assign multiple dispatchers in a talkgroup.

Figure 208: Dispatcher List Tray

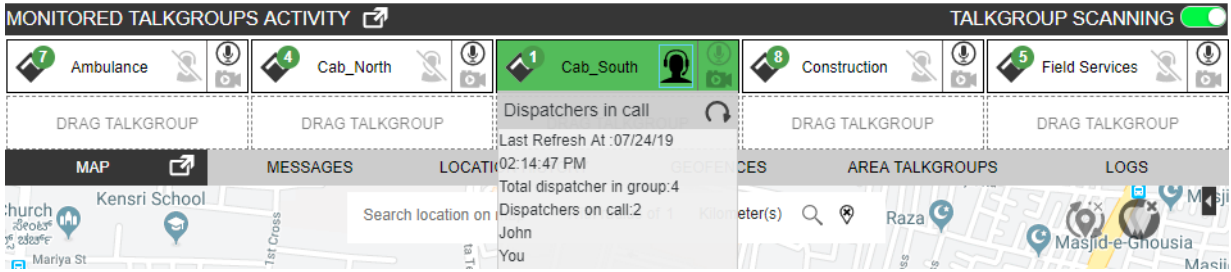

Chapter 15

Monitoring Talkgroups

The Dispatch allows you to monitor up to 20 talkgroups. When monitoring, you can see call activity on monitored talkgroups and optionally join a talkgroup call if it is active. This is helpful when you want to be aware of the call activity on specific talkgroups but do not want to participate immediately. Talkgroup mentioned in the following sections include both talkgroups and area talkgroups.



NOTICE: Broadcast talkgroups cannot be monitored.

15.1

Adding a Talkgroup to a Monitored Talkgroup Activity


To add a talkgroup, follow these steps:

Procedure:

- 1 Click the **Talkgroups** or Area Talkgroup tab in the Contacts and Talkgroups window.
- 2 Choose the talkgroup you want to monitor and click the talkgroup name.
- 3 Drag and drop the talkgroup from the Talkgroups or Area Talkgroup tab of the Contacts and Talkgroups window to the Monitored Talkgroups Activity window.

The following figure shows an example of the Monitored Talkgroups Activity window:

Figure 209: Monitored Talkgroups Activity Window

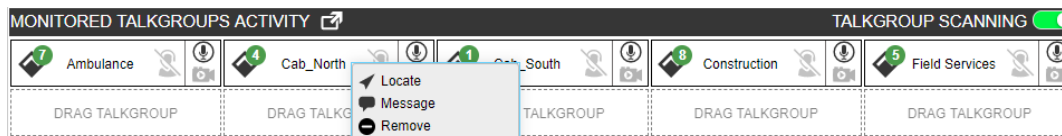

When the talkgroup is successfully added, the icons for call, message, location, talkgroup Priority, dispatcher information (if any dispatcher is in call) and remove talkgroup are enabled and the name of the monitored talkgroup is shown.

15.2

Removing a Talkgroup from the Monitored Talkgroup Activity Window

You can remove or replace a talkgroup from a monitored talkgroup window.

When and where to use: To remove monitored talkgroup, follow these steps:

Procedure:

- 1 Right-click on the talkgroup and select **Remove** icon.



NOTICE: You can remove a talkgroup from a monitored list only if there is no call-in progress for that talkgroup. A scanned talkgroup cannot be removed.

15.3

Replacing a Talkgroup from the Monitored Talkgroup Activity Window


You can remove or replace a talkgroup from a monitored talkgroup window.

When and where to use: To replace an existing monitored talkgroup with a new talkgroup, follow these steps:

Procedure:

- 1 Drag and drop a new Talkgroup from Talkgroups or Area Talkgroup tab onto the existing Monitored Talkgroup window. A confirmation window appears as shown below:

Figure 210: Monitored talkgroup replacement confirmation

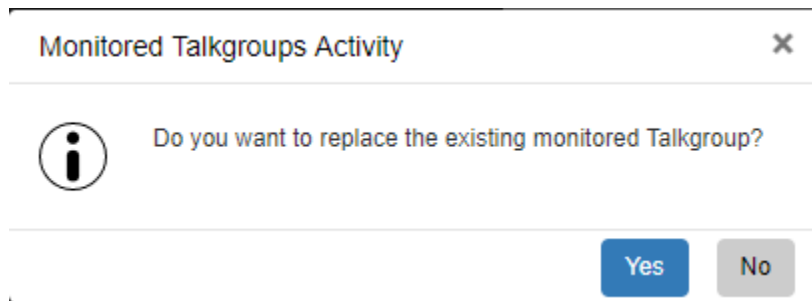

- Click **Yes** to replace the existing monitored talkgroup with the new talkgroup.
- Click **NO** to cancel.




NOTICE: Irrespective of whether scanning mode is on or off, scanned talkgroups cannot be replaced. You can replace a monitored talkgroup if there is no call-in progress for that talkgroup.

15.4


Actions on a Monitored Talkgroup

The following actions are available in the Monitored talkgroup window.



If no Dispatcher has joined Active Talkgroup

When an incoming call starts in a monitored talkgroup, the monitored talkgroup area background turns from White to blinking Amber to indicate that an incoming call has started. A No Dispatcher in the Call  icon indicates that you or another dispatcher has not yet joined the call. Right-click on the talkgroup allows you to locate or send a message.

If another Dispatcher joins the Active Talkgroup

If call is already started and a dispatcher, other than you, joins the active call, then the Dispatcher  icons is enabled to indicate that another dispatcher joined the call. Right-click on the talkgroup allows you to locate or send a message. The dispatcher information icon enables, which shows you the total dispatchers in that talkgroup, the dispatchers on call and last refreshed time.

Joining an Active Talkgroup

If the call is already started, you can join the call by clicking the  icon. The monitored talkgroup area background turns from Amber to Green. Right-click on the talkgroup allows you to locate and send a message. The dispatcher information  icon enables to show you the total dispatchers in that talkgroup, the dispatchers on call and last refreshed time. During the call, use the Call Activity window or Monitored Talkgroup Window icons.

Placing a Call to a Non-active Talkgroup

You can call to a Monitored Talkgroup not currently on a call by clicking the **Call** icon. The White background color turns to Green During the call, use the Call Activity window.

Silent Rejoin

If pre-arranged talkgroup call is already in progress, then the floor is not be given to you automatically from “Alert Window”, “Contacts and Talkgroups”, “Monitored talkgroups” “Alert Logs” or from the “Call logs”. You can join the call silently and then take the floor.

Video Streaming

You can join the video streaming request received in a Monitored Talkgroup that is not in an ongoing video session. The white background color of the video streaming turns green when you receive a video stream request. Clicking the **Video stream** icon opens the video streaming block. If you leave or close the video streaming block, then the background color turns blinking red. To rejoin the ongoing video streaming, click the **Video Stream** icon again.




NOTICE: If you re-login or due to network fluctuations there may not be an indication of ongoing call.

Chapter 16

Using the Map

The Dispatch uses the Google map service to display the location of fleet members on the map.

 **NOTICE:** To get the location information for a fleet member, the Location feature must be enabled on the device of the fleet member. Also, the fleet member must be listed in the contact list.

When signing in to the Dispatch for the first time, no contacts is on the map. Locate contacts using the steps in the [Locating Fleet Members on page 172](#) section of this document. The next time you sign in, you can see the last located contacts on the map before exiting or signing out.

This section is organized as follows:

16.1

Locating Fleet Members

You can locate talkgroup members, single, or multiple fleet members on the map.

16.1.1


Locating a Single Fleet Member

When and where to use: To locate a single fleet member, follow these steps:




Procedure:

- 1 Click the **Contacts** tab on the Contacts and Talkgroups window.

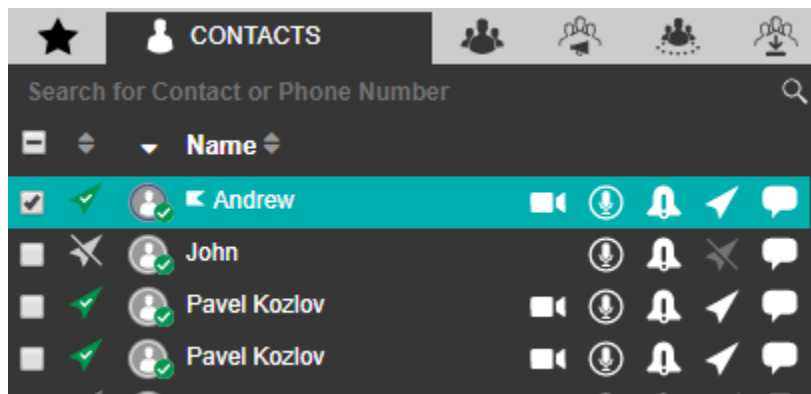Figure 211: Single Contact Selected




- 2 Click the **Locate** icon of the contact to locate the selected fleet member on the map. When the fleet member is on the map, a marker displays at the location of the fleet member.
- 3 To view information for the fleet member, click the **Marker**.

 **NOTICE:** If location information is expired for the fleet member, then the fleet member displays on the map with the  icon. Location information is not available for External contacts display with the  icon. The color of the push pin indicated on the map depends on the color you set in the Map Settings section of the Setting tab. For more details, refer the [Map Settings on page 248](#) section of this document.

The following screen shot shows an example of fleet member “Andrew” location:

Figure 212: Locating Fleet Member

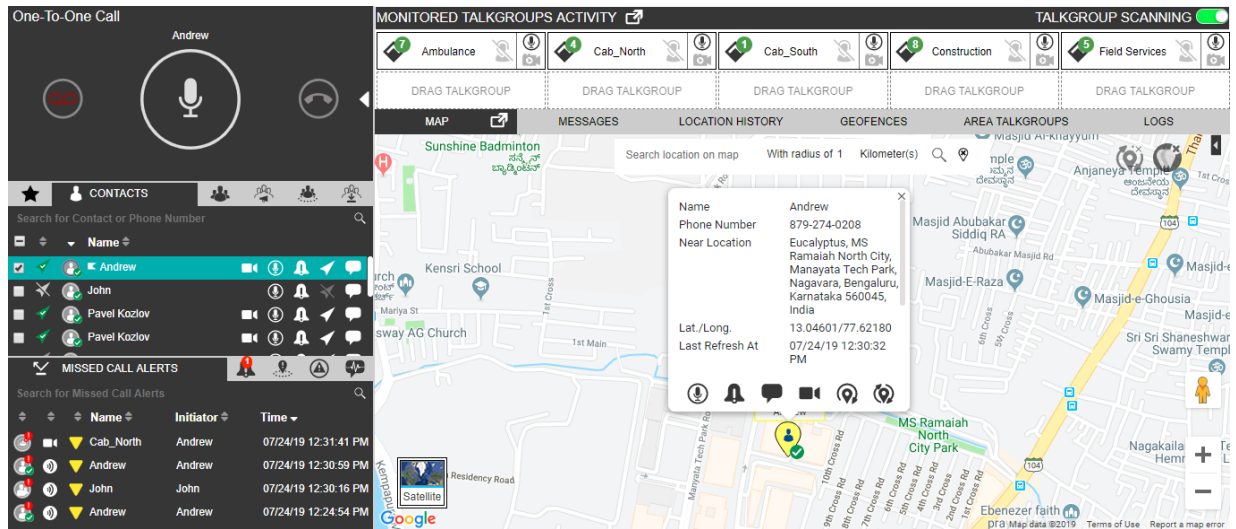


16.1.2

Locating Multiple Fleet Members

Procedure:


- 1 Click the **Contacts** tab on the Contacts and Talkgroups window.
- 2 Select the check boxes next to fleet members you want to locate.


Figure 213: Multiple Contacts Selected

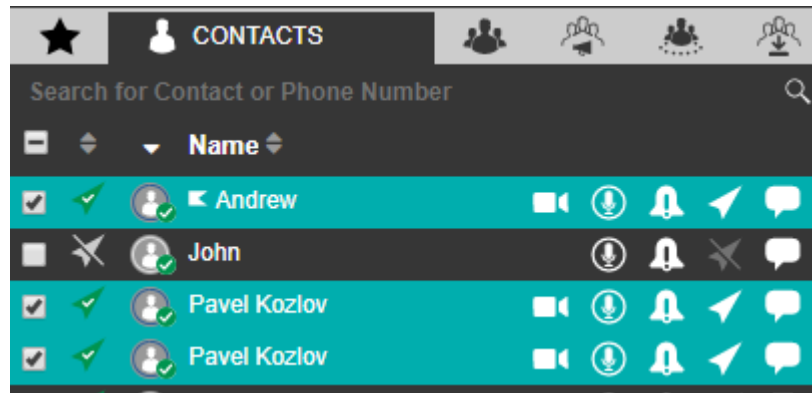

- 3 To locate the members on the map, right-click, and select the **Locate** icon. When the fleet members are on the map Dispatch displays a marker for each fleet member.
- 4 To view information for a fleet member, click the Location Marker.
- 5 In the following screen shot, multiple fleet members have been located and are shown on the map.

Figure 214: Locating Multiple Fleet Members

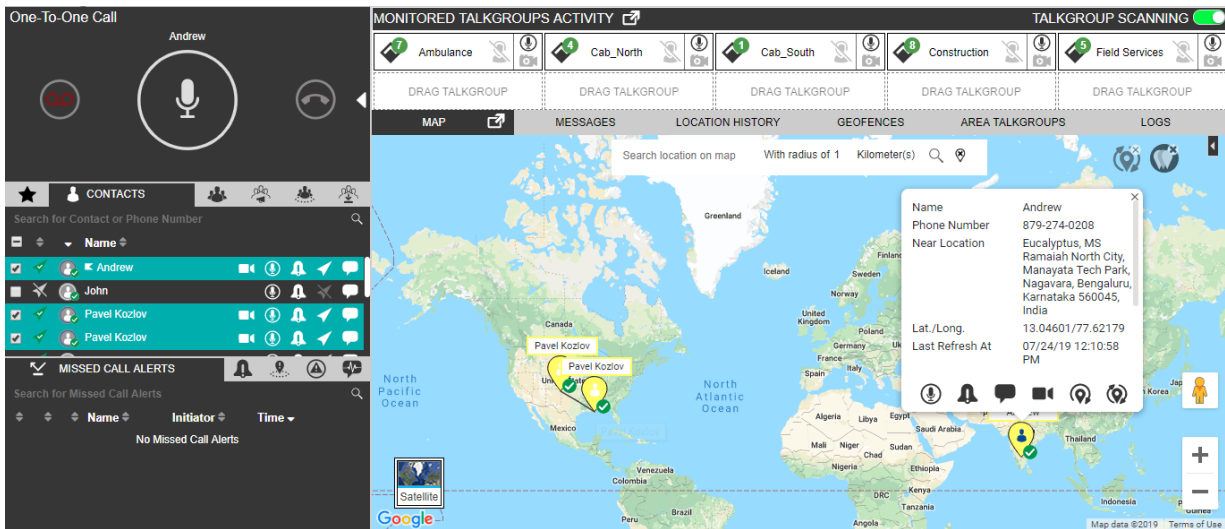

 **NOTICE:** You can also locate fleet members from alerts. Refer to the [Alerts on page 157](#) sections of this document for details.

16.1.3


Locating Talkgroup Members

You can locate all the members of a talkgroup in one location.

Procedure:

- 1 Click the **Talkgroups** or **Area Talkgroup** tab in the Contacts and Talkgroups window.
- 2 Choose the talkgroup you want to locate in the list and click the talkgroup name.


Figure 215: Selected My Talkgroup

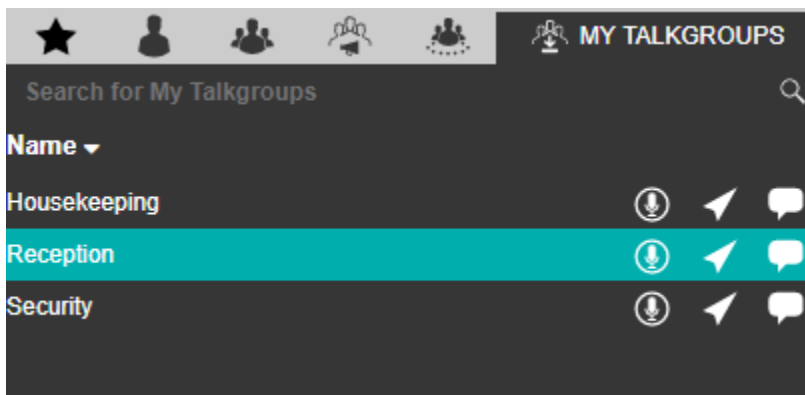

- 3 To locate the talkgroup members on the map, click the **Locate** icon. For each located member, a marker displays on the map.
- 4 To view information about the talkgroup member, click the **Marker**.

In the following screen shot, all the members of the talkgroup “Reception” are on the map.

Figure 216: Locating My Talkgroup Members

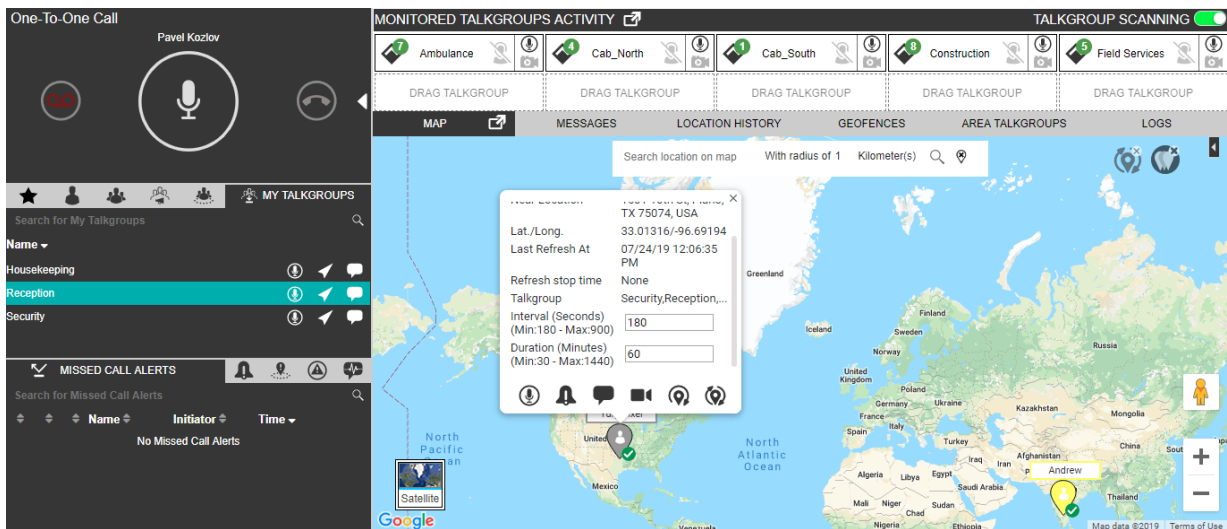

16.2

Clear Located Fleet Members off the Map

To clear all the located fleet members off the map, click the **Clear Map** icon provided at the top right corner of the map. To selectively clear the fleet members on the map, use the selection list window. To clear the selected fleet members on the map, select the fleet members by checking the check boxes on the selection list window and click the **Clear Map Selection** icon.




NOTICE: Performing either of the clear map actions stop the periodic location updates for the fleet members you clear from the map.

16.3

Fleet Member Information Window

When you click the **Marker** icon on the map, the fleet member information window displays.

Figure 217: Info Window

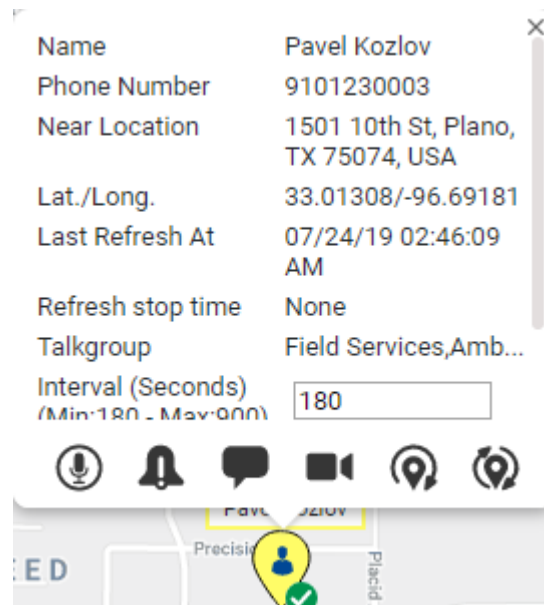

The information window shows the name, phone number, refresh intervals, refresh duration, a complete address of the nearest location of the member, latitude, longitude of that place, refresh stop time, talkgroups, and the time of the last location update. You can click the **Marker** icon in the Geofence and Area Talkgroup window to view the information window.

Observe the time stamp when the location update was last initiated for the selected fleet member.

The following actions are available on the information window:

- To call the selected fleet member, click the **Call** icon.
- To send an Instant Personal Alert to selected fleet member, click the **IPA** icon.
- To send a message to selected fleet member, click the **Message** icon.
- To initiate video stream to the selected fleet member, click the **Video Stream** icon.
- To refresh the current location information of the fleet member periodically, click the **Periodic Location Refresh** icon. The location refresh period depends on the settings you specify in the [Location](#) on page 254 section of this document.
- To fetch the actual location information of the selected fleet members, click **One Time Location Refresh** icon. A message appears stating that an on-demand location request has been sent to the server.
- To close the information window, click the **Close** icon.

16.4

Selecting Multiple Fleet Members on a Map

You can select multiple fleet members on the map:

Press the Shift Key and holding the left or right mouse button, drag the mouse over the marker icons. The Selection List window appears displaying the fleet members that you select.

Figure 218: Fleet Members Selection Drag Option Window


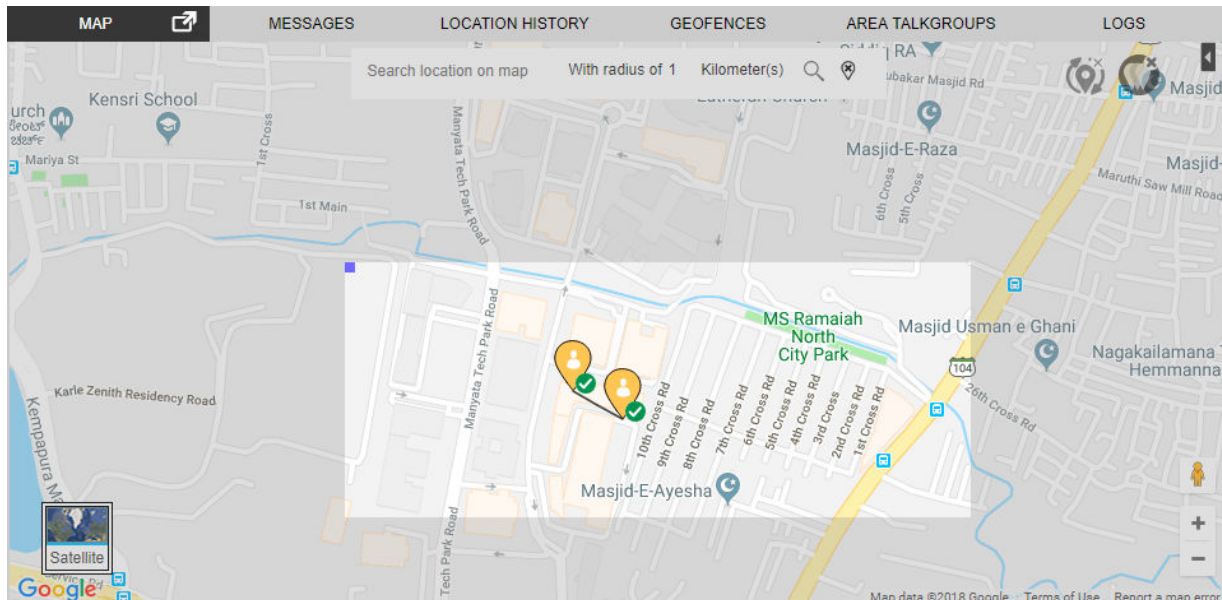


Figure 219: Selection List Window

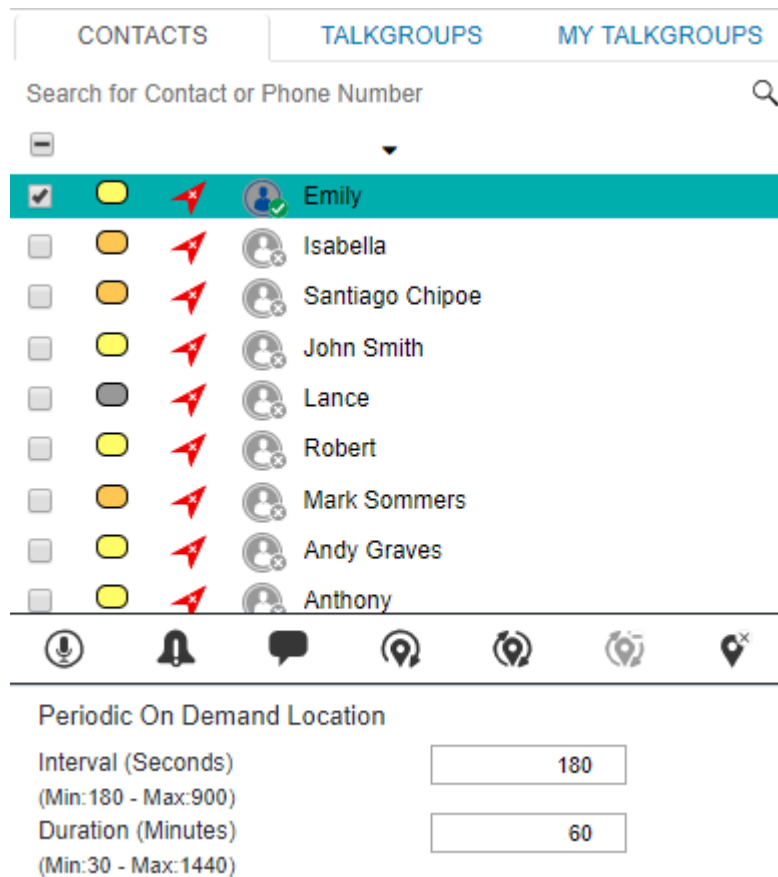

The figure shows the Selection List window that has three tabs:

- Contacts
- Talkgroups
- My Talkgroups

You can perform the following activities in these three tabs:

To expand the selection list, click the **Expand** icon.

To collapse the selection list, click the **Collapse** icon.

Search

To search for fleet members, enter a name in the “Filter by Name” field.

Sort

To sort the fleet members by their presence status, location status, and name, click the top of the header column of each field.

Call

To call the selected Contacts or Talkgroups or My Talkgroups, click the **Call** icon.

IPA

To send an IPA to a contact, click the **IPA** icon.

One Time (manual) Location Refresh

To refresh the location information of the selected contact, click the **Map One Time Location Refresh** icon.

Start Periodic Location Refresh

To start the periodic location refresh of the selected contact, click the **Start Periodic Location Refresh**.

Stop Periodic Location Refresh

To stop the periodic location refresh for the selected contact, click the **Stop Periodic Location Refresh**.

Message

To send a message to the selected Contacts or Talkgroups or My Talkgroups, click the **Message** icon.

To remove the selected contact from the selection list and the map, click the **Map Reset** icon from the selection list.

To remove all the fleet members on the map and from the selection list, click the **Map Clear** icon available on the map.

You can also select multiple members on the map using the shift key and mouse click action. This kind of selection overrides previously selected members from the selection list window.



NOTICE: You can send an Instant Personal Alert to only one fleet member at a time.

16.5

On Demand Location Update

To request the most up to date location of a fleet member, it is necessary that the fleet member is on the map first.

16.5.1


Performing a One Time Location Update of a Fleet Member

When and where to use: To perform one time location update of a fleet member, follow these steps:

Procedure:

- 1 Click the **Contacts** tab from the Contacts and Talkgroups, Map Selection List, or Map Info window.
- 2 Select a contact by clicking the check box next to the name of the fleet member from Contacts and Talkgroups or Map Selection List.

Figure 220: Single Contact selected

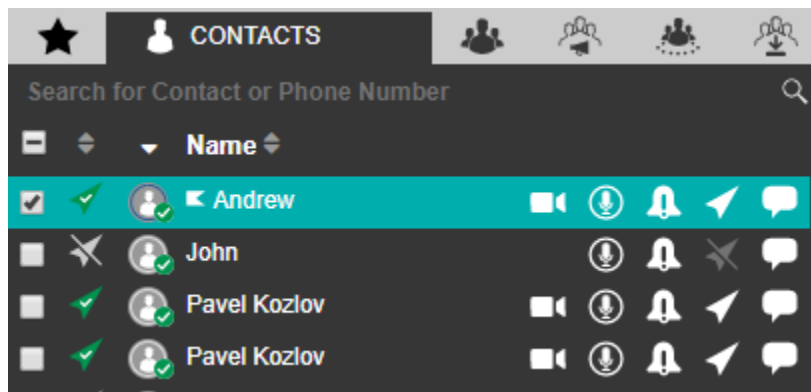


- 3 Click the **Locate** icon to locate the selected fleet member on the map. When the fleet member is on the map, a Marker displays at the current location of the fleet member.

- 4 From the selection list window, select the check box next to the fleet members name and click the button on the bottom of the selection list window to fetch the actual location information of the selected fleet members.


A message appears stating that an on-demand location request has been sent to the server. The following screen shot shows an example of an on-demand location request sent to the server.

Figure 221: On-demand Location Request

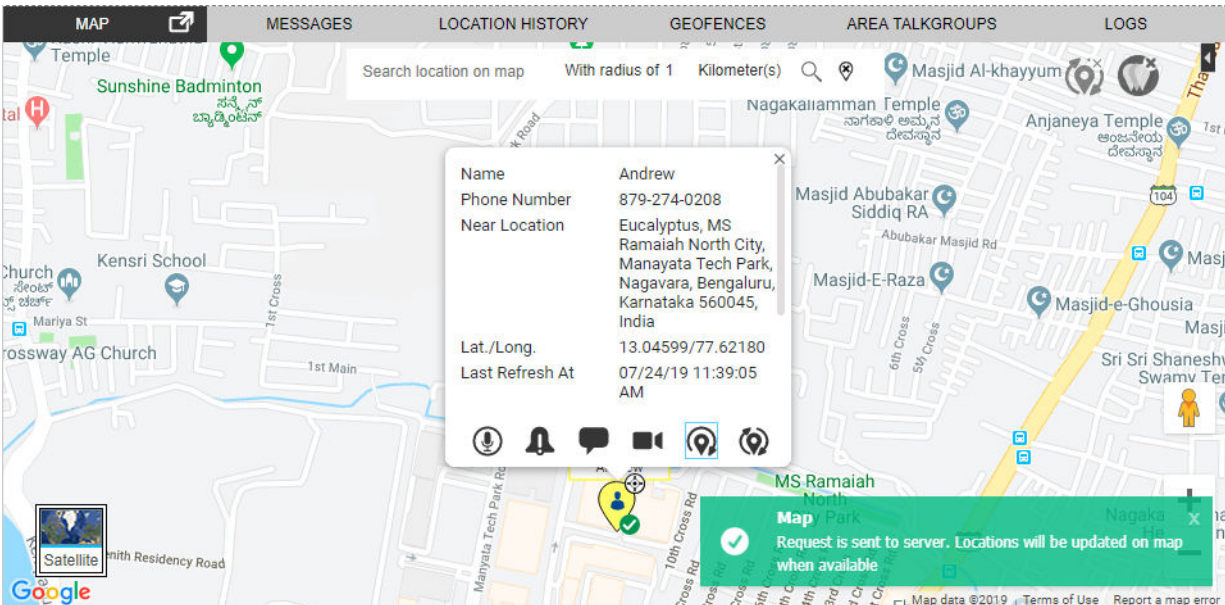

When the location is available from the server, the marker pin updates to show the current location of the fleet member as shown in the following screen.

Figure 222: On-demand Location Response

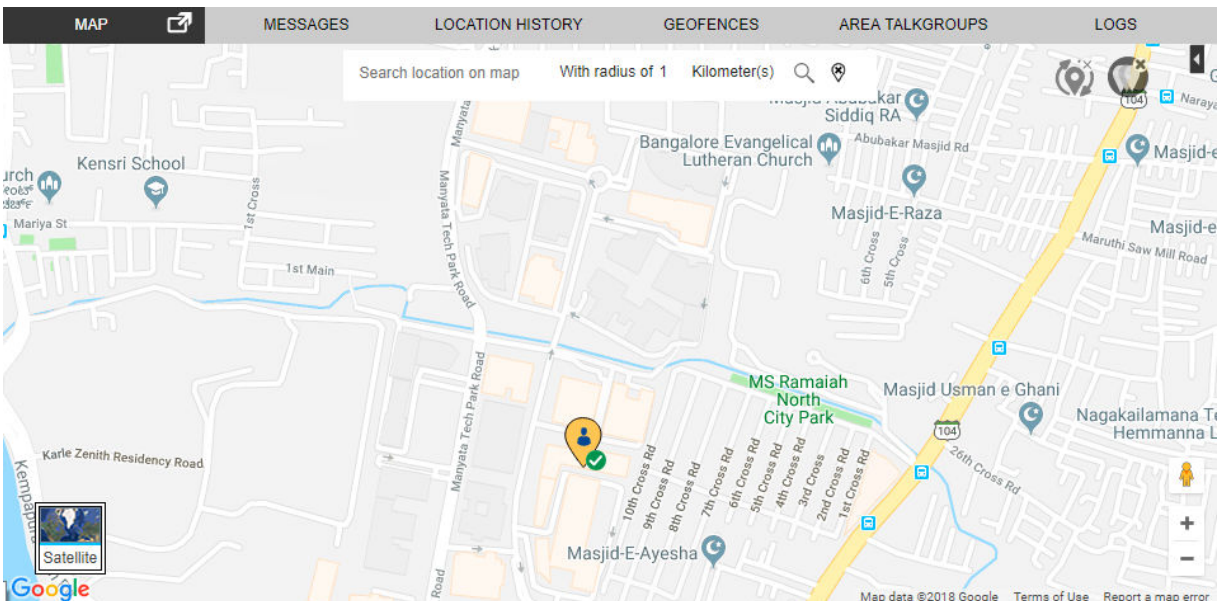

16.6


Periodic Location Update

Periodic location update provides the location information of fleet members listed under contacts on the dispatcher demand at a set intervals.

16.6.1

Starting a Periodic Location Update of a Fleet Member


When and where to use: To start a periodic location update for a fleet member, follow these steps:

 **NOTICE:** Make sure that you verify the interval and duration values set at the on demand location settings section from the Map Setting that appears under the Settings tab.

Procedure:

- 1 Click the **Contacts** tab from the Contacts and Talkgroups window.
- 2 Select a contact by clicking the check box next to the name of the fleet member.

Figure 223: Single Contact Selected

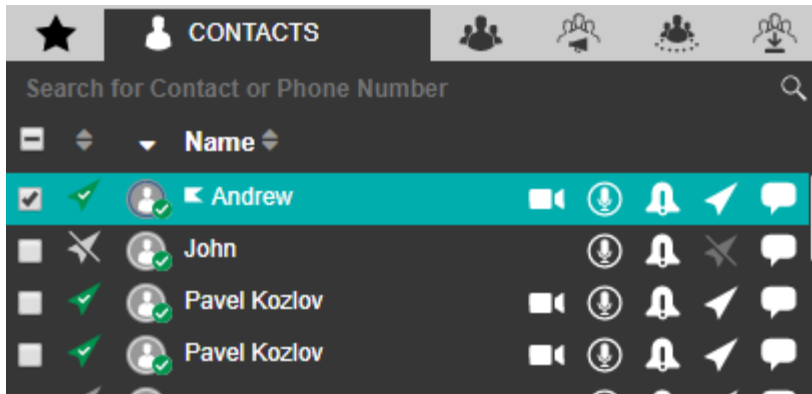






- 3 To locate the selected fleet member on the map, click the **Locate**  icon. When the fleet member is located on the map, a Marker  displays at the current location of the fleet member.
- 4 To display an information window, click the **Location Marker** of the fleet member.

Figure 224: Info window of a fleet member for location update




- 5 To initiate a periodic location refresh for the selected fleet member, click the  icon on the information window.

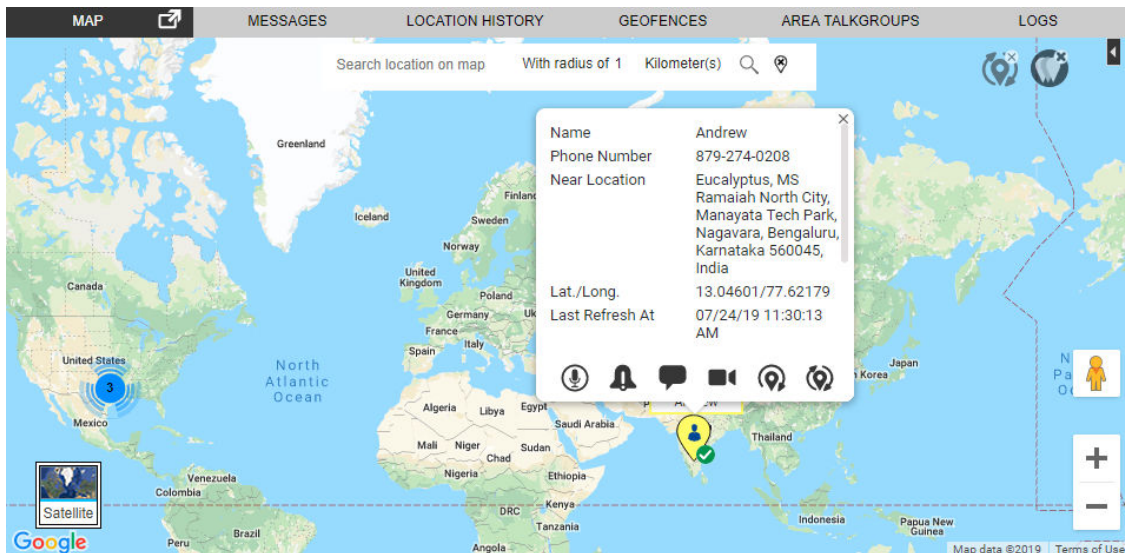A periodic on demand location refresh request is sent to the server and the icon on information window changes to the  icon.

The following screen shot shows an example of retrieving a fleet member's location from the server. The marker is placed in the new location. If the response is a success, then the location update accordingly.

Figure 225: Periodic On Demand Location request

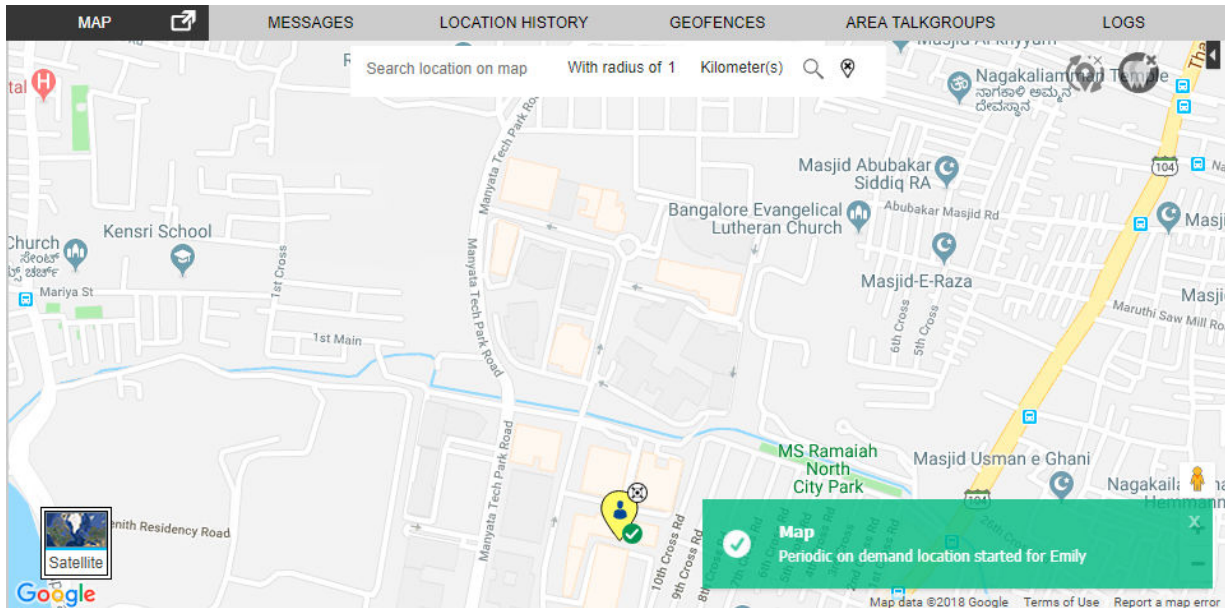


16.7

Finding an Address

Mouse over on the map icon at the lower left-hand area of the screen and select **Display Find Location** to display a Display Find Location window. To hide or display the find location window, mouse over on the map menu and select the **Display Find Location** option.


When and where to use: To find the location on the map, follow these steps:

Figure 226: Find Location Window

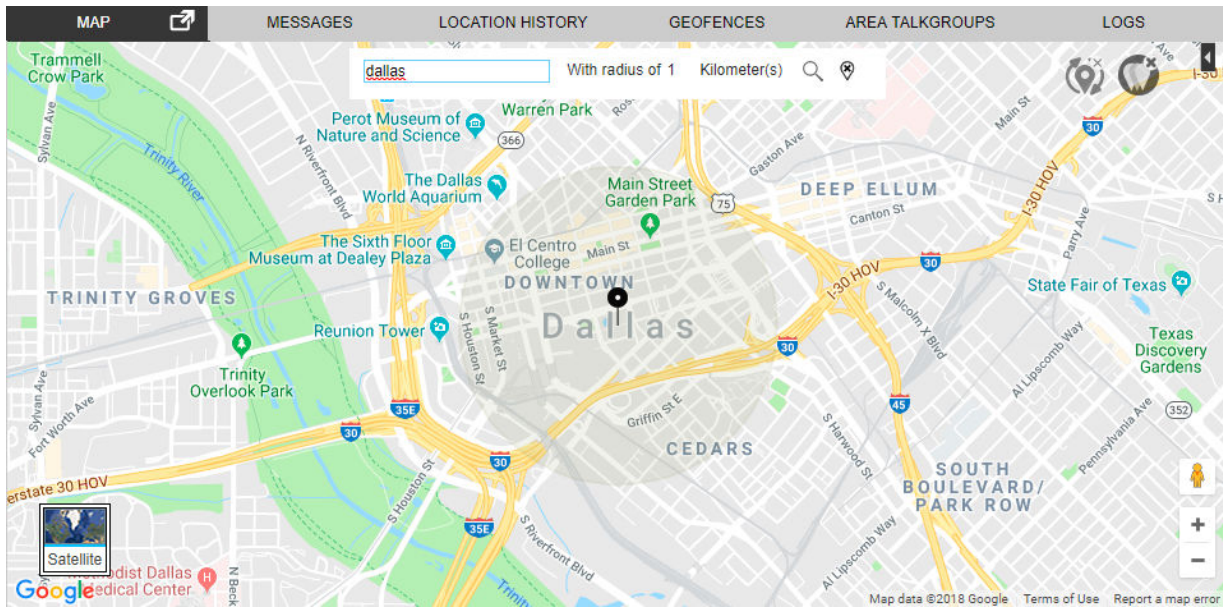

Procedure:

- 1 Enter an address in the Location Address field.
- 2 Enter the Radius.
- 3 To find the location of the given address, click the **Search** icon. There is a circle around the found address and a **Push Pin** icon at the center of the circle indicating the address located. If you move your mouse cursor over the push pin icon, the map also displays the searched address.
- 4 Click the **Clear** icon to remove the find push-pin icon from the map.

 **NOTICE:** The right-click option is not available for Map Center and Zoom In/Out on a circle denoting a range of the found location.

16.8

Centering the Map

You can bring a specific location to the center of the map. This feature works only when the Auto Track feature is disabled. You can also set the center of the map manually.

When and where to use: To set the center of the map, follow these steps:

Procedure:


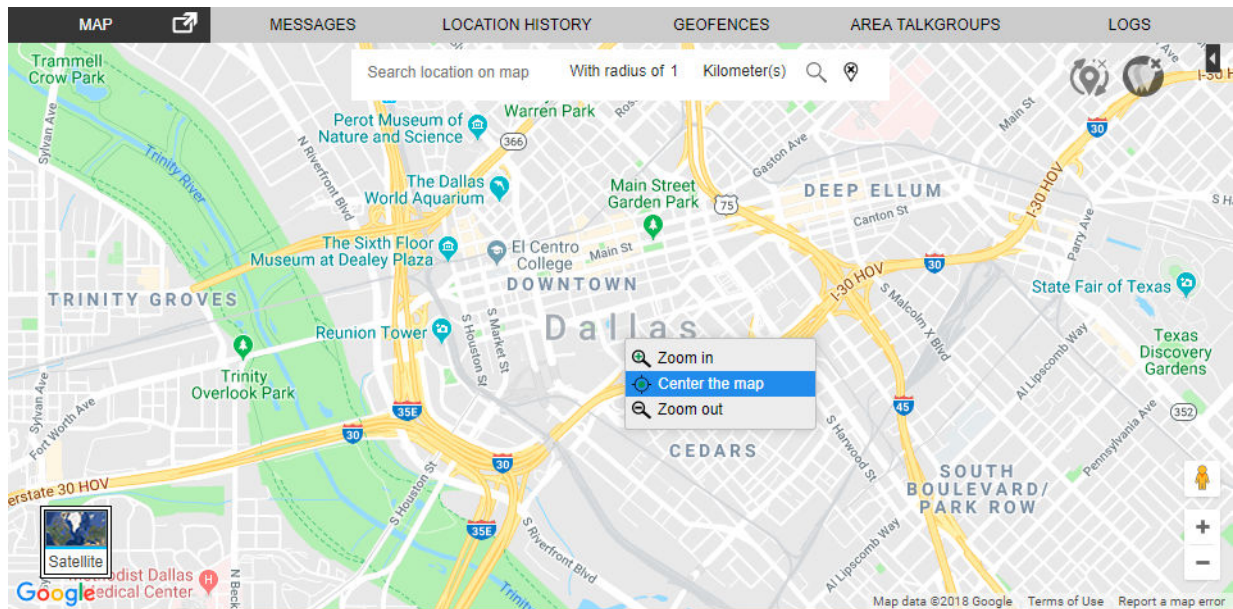
- 1 Click the  icon.
- 2 Select the **Set the Map Center**.

Figure 227: Map Center



To bring any location of the Map to the center of the Map window, right-click on the location you want to center the map to and select the **Map Center** icon that appears. Click the **Map Center** icon and the selected location becomes the center of the map window.



NOTICE: When using the Display Find Location option available on the map to search for a specific location, there is a circle denoting an area surrounding the found location. The right-click option for centering the map and zooming in or out does not work inside that circle.

16.9

Zooming in and out on a Map

The map view on Dispatch screen can be maximized (zoom-in) or minimized (zoom-out). This feature works only when the Auto Track feature is disabled.

To find the Zoom-in/Zoom-out options along with the Map Center icon, right-click again on the same location.

- Selecting the Zoom-in option increases the map zoom view by two steps only.
- Selecting the Zoom-out option decreases the map zoom view by two steps only.

Select the Zoom-in or Zoom-out options as required to maximize/minimize the view of a particular location on the map window.

16.10


Changing Views of the Map


The map displays in the following views.

Map View

Map view mode displays the road map view. Map view is the default map type.

Figure 228: Map Mode

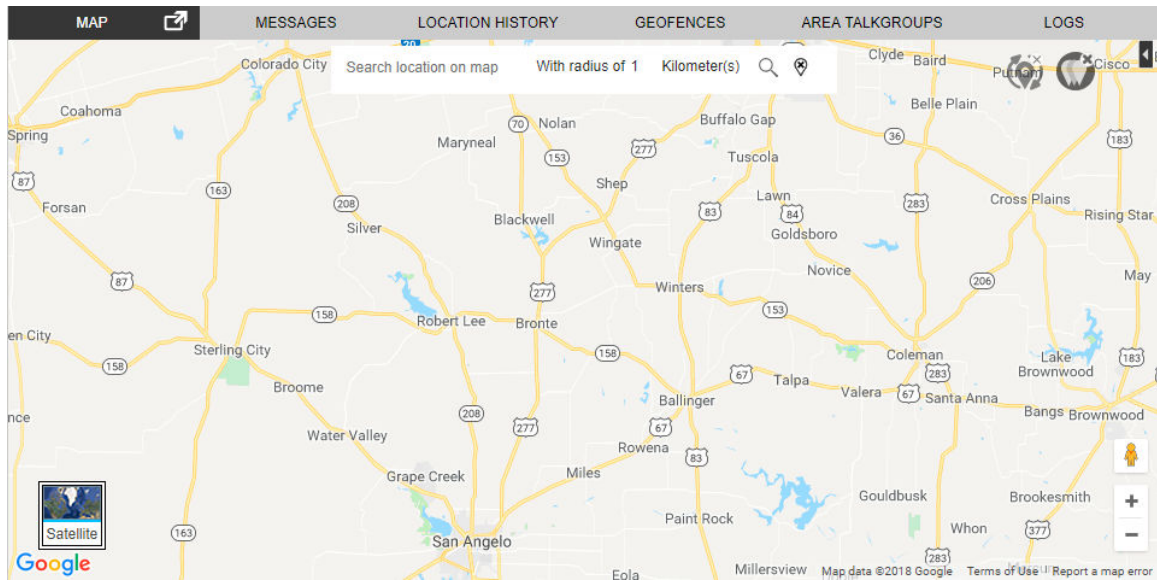



To change the Map mode, click the  icon.

Satellite view

The satellite view mode displays the map in satellite image view. The typical satellite views screen shown here.

Figure 229: Satellite Mode

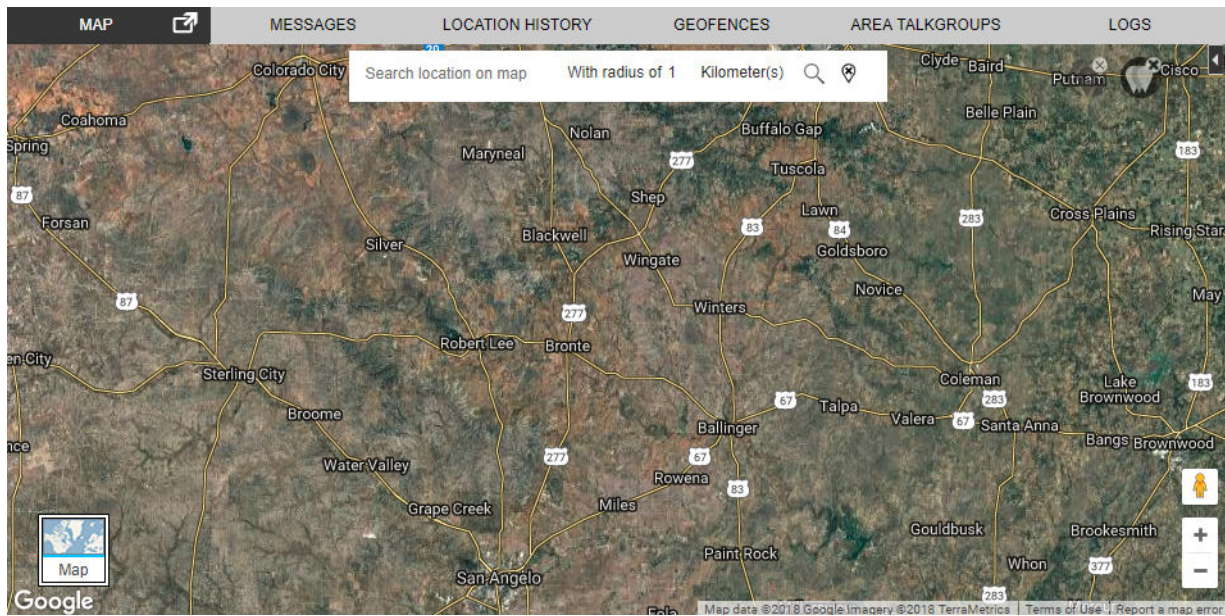



To switch to Satellite view, click the  icon.

Terrain View

The terrain view allows you to see the elevation of geographic features such as mountains and canyons. Mouse over on the map menu to select Terrain view to display a Terrain View Map window as shown here:

Figure 230: Terrain View Map Window

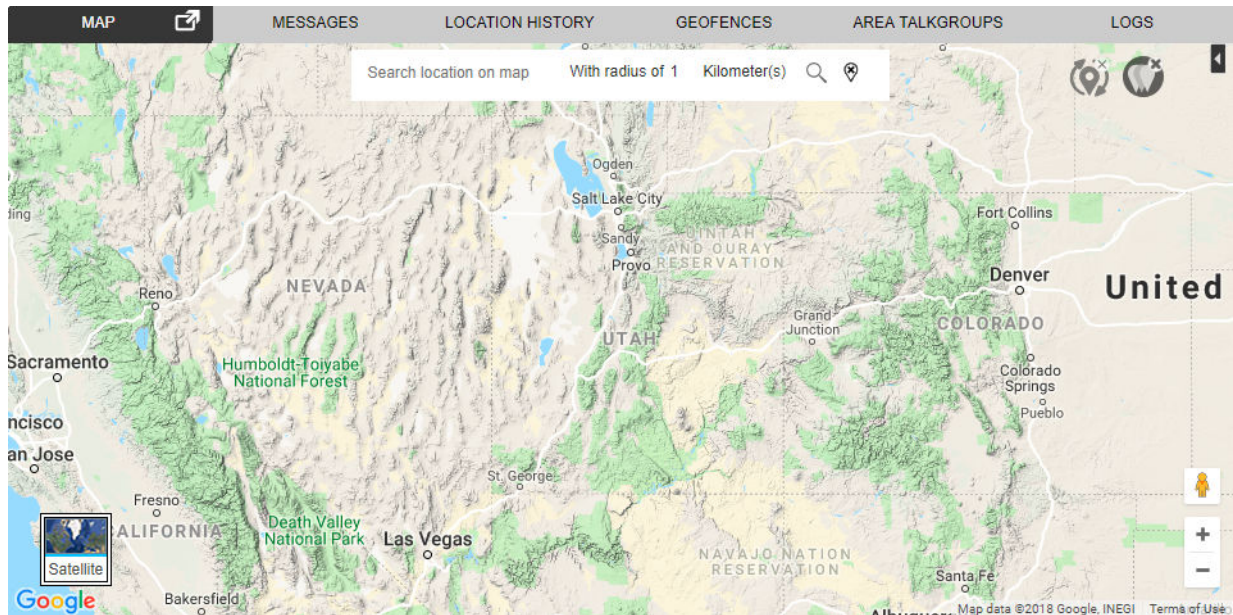

 **NOTICE:** If Terrain view is enabled and a switch is made to Satellite mode, then the Terrain view changes to hybrid view in Satellite mode.

Traffic View





In traffic view, an indicator glows green, yellow, or red based on the current traffic along with the region of the fleet member on the map as shown here:

Figure 231: Traffic Color Code




This color code signifies the traffic density at selected location as explained here:

Table 6: Traffic Color Code

Color code	Description
	Extremely slow or stopped traffic.
	Traffic is moving at less than 25 miles per hour.
	Traffic is moving faster, from 25 miles to 50 miles per hour.
	Traffic is moving along at 50 miles per hour or more.

Mouse over on the map menu to select the Traffic view as shown here.

Figure 232: Traffic View Map Window

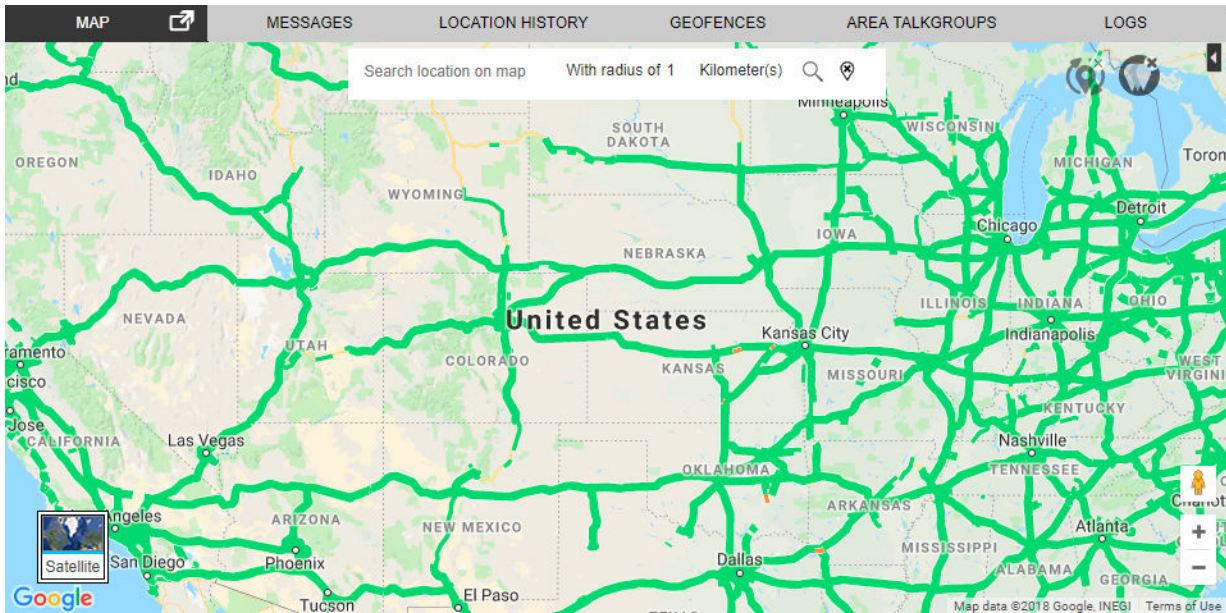


45 Degree View

The Google Maps API supports special 45° imagery for certain locations. This high-resolution imagery provides perspective views towards each of the cardinal directions (North, South, East, and West). These images are available at higher zoom levels for supported map types.

The existing SATELLITE and HYBRID map types support 45° perspective imagery at high zoom levels (where available). If you zoom into a location for which such imagery exists, this map types automatically alter their views.

Google adds 45° Imagery for new cities on an ongoing basis. The supported cities are available at “45° imagery on Google Maps.” Upon selecting one of these cities as a location, the 45-degree view is enabled automatically at a higher zoom level.

Figure 233: 45 Degree Map-location

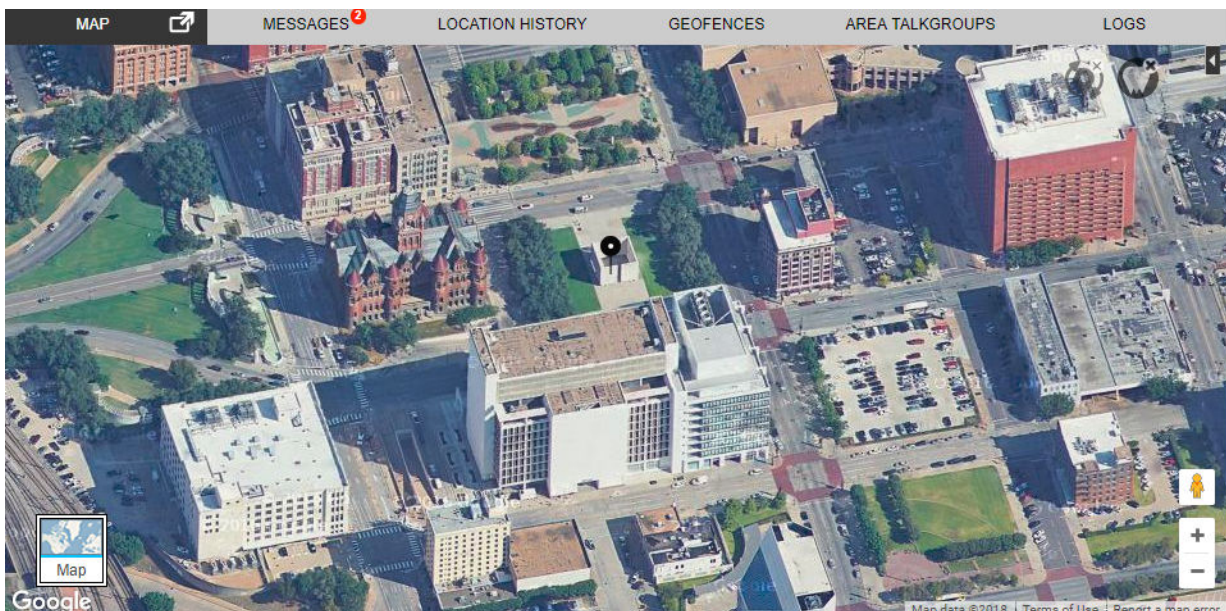

Street View


The Street View icon turns to an orange color in supported cities. To view the Street View mode, click and hold the  icon and drop it to the desired location.


Figure 234: Street View Map Window



Hybrid View

The hybrid view combines the satellite and map views. When the hybrid view is enabled, the street names are overlaid on a satellite view. The hybrid view is enabled by default in the satellite mode. To enable/disable this view, switch to Satellite mode and then mouse over on the map menu to select Hybrid view, as shown here:

Figure 235: Hybrid View Map Window

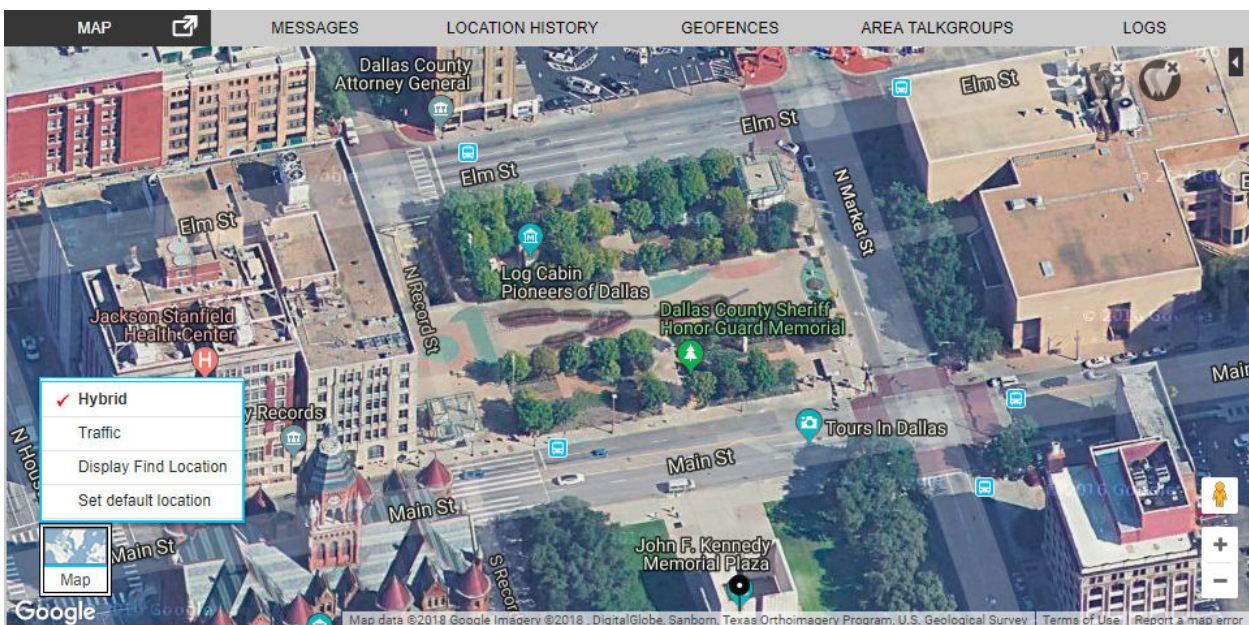


NOTICE: The Hybrid view is disabled in map mode.

Set Default Location

Set default location in the map allows you to define a specific location which is shown when you sign in to Dispatch for the first time. You can also modify your default location any time from the map tab. To modify the default location, select the **Set default location** from the map icon. Search the desired location from the search or move the map to drop the location pin. Click **Yes** to set the default location or **No** to cancel the action.

Figure 236: Set Default Location

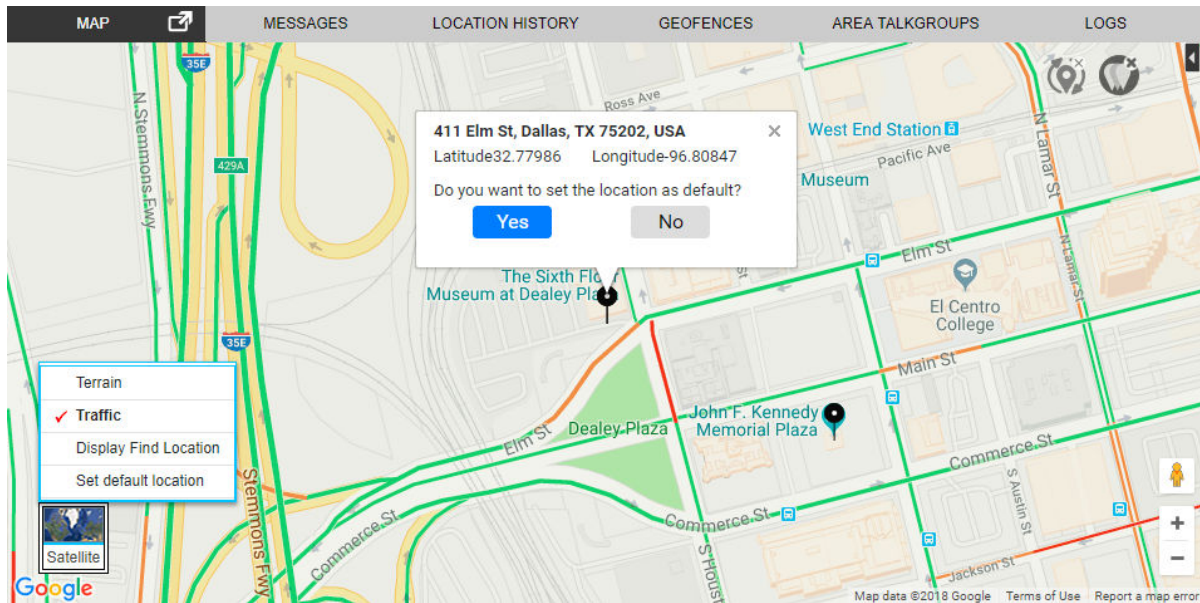

16.11

Overlapped Map Markers

When two or more map markers are overlapped on the map, the Overlapping Marker Map Cluster icon displays for that location. Clicking **Overlapping Marker Map** icon expands the area where all the markers are overlapped which in turn clearly shows all the locations of the marker. Figures here show the collapsed and expanded view of the spiderify.

Figure 237: Collapsed - Spiderify


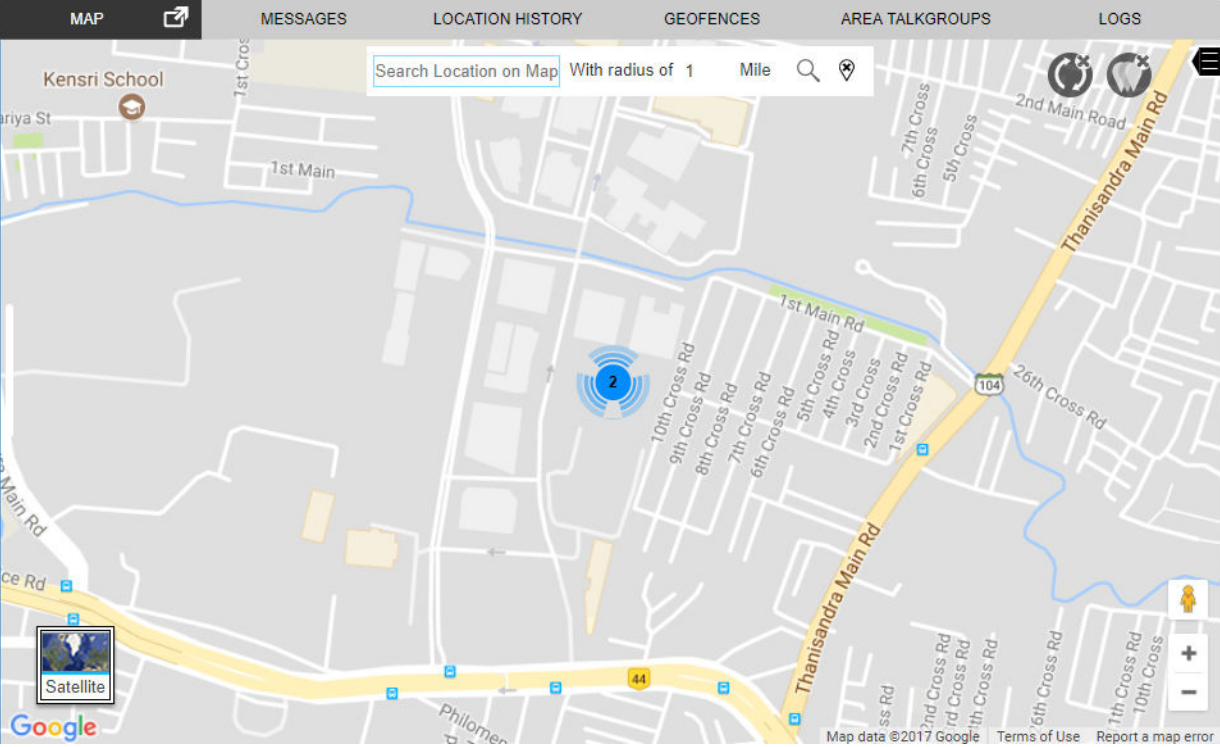


Figure 238: Expanded - Spiderify

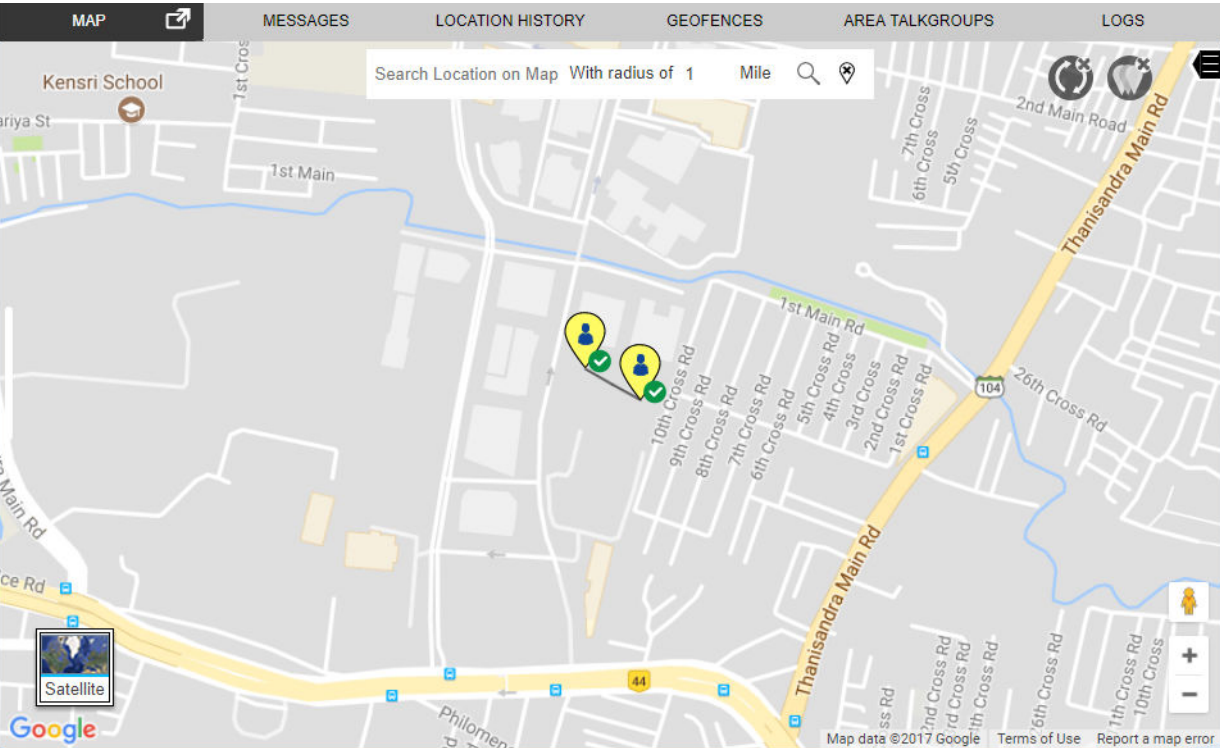


Chapter 17

Location History

Location History feature helps you to track the path which your fleet member has traversed on the map for a specific duration. You can select the fleet member and the duration for which you want to track the path. The path traversed is shown on the map with Start and End icon for each of the selected fleet member with a color associated with the selected member.

If the fleet member chooses to take route other than the route found by the map service provider, then the path traversed is shown as dotted line. For example, If the fleet member travels from Houston to Dallas by road and Dallas to Chicago by air then the path traversed on the map is shown as roadways from Houston to Dallas and dotted line from Dallas to Chicago. This condition is only applicable if you choose the method of display location history as Google maps in the Location Settings.

Figure 239: Location History Tab

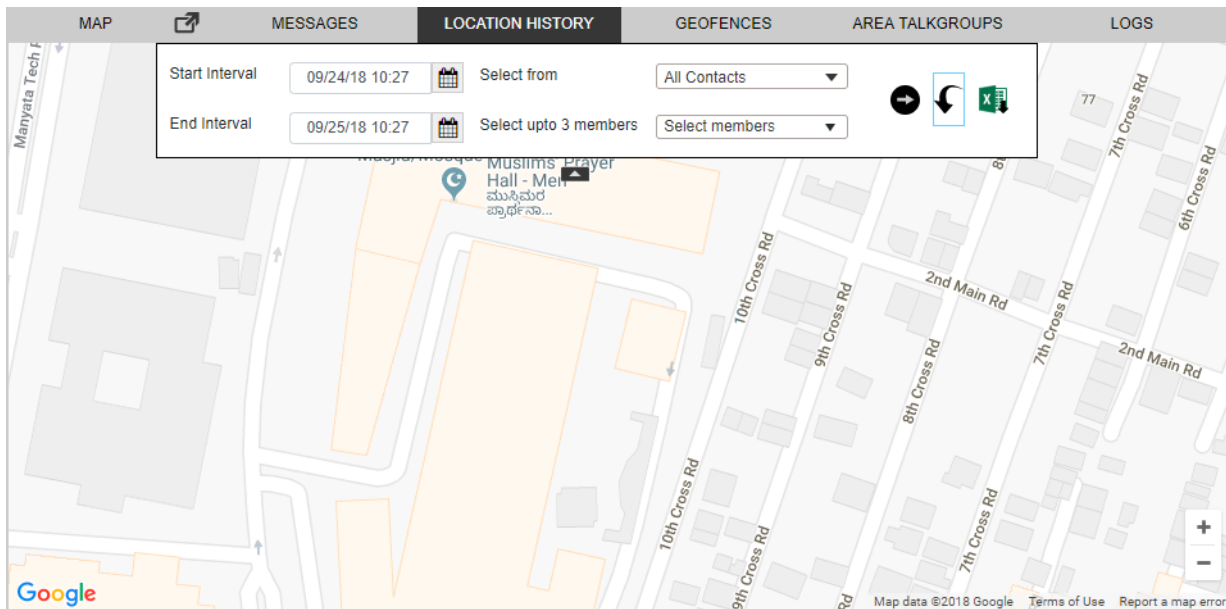

17.1


Tracking the path of a fleet member on the map

When and where to use: To track the path of a fleet member on the map, follow these steps:

Procedure:

- 1 Click the **Location History** tab.
- 2 Select the Contact or Talkgroup in the Select From drop-down.
- 3 Select the name of the contact or talkgroup from the Select up to three members drop-down.
- 4 Select the duration for which you want to track the path of the member from the Start Interval and End Interval option.
- 5 Click the **Go** icon to track the path traveled by the fleet member.
 - Click the **Collapse** icon to hide the search slider.
 - Click the **Expand** icon to view the search slider.

Figure 240: Track Location History

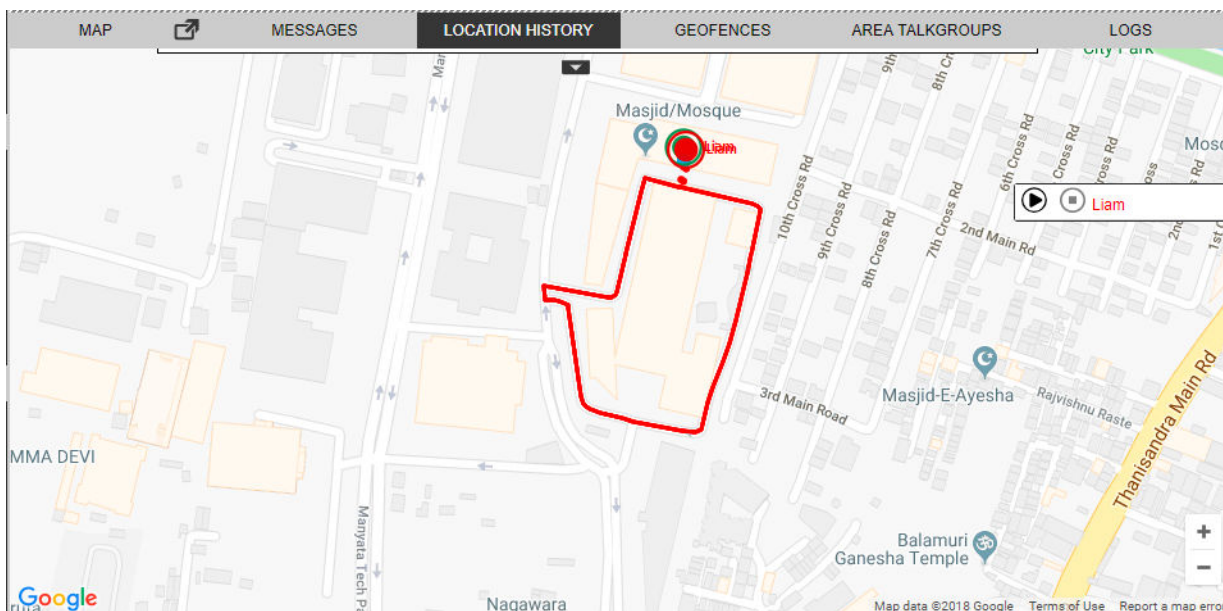

NOTICE: The location history of maximum three fleet members can be shown at a time on the map. You can track the location history of a fleet member for maximum duration of 24 hours.


At a given time, you can play location history of only one fleet member.

On the Location History tab, you can perform the following activities:

- To reset the selection on Location History, click the **Reset** icon.
- To export the path traversed by the fleet member in CSV format, click the **Export** icon.


You can also play the path traversed of the fleet member by clicking **Play** icon next to the fleet member on the storyboard. You can pause and play the traversed path by clicking the **Pause** and **Play** icon. You can also replay from any location points highlighted on the traversed path by double-clicking the highlighted **Location point**.

Figure 241: Playing Location History

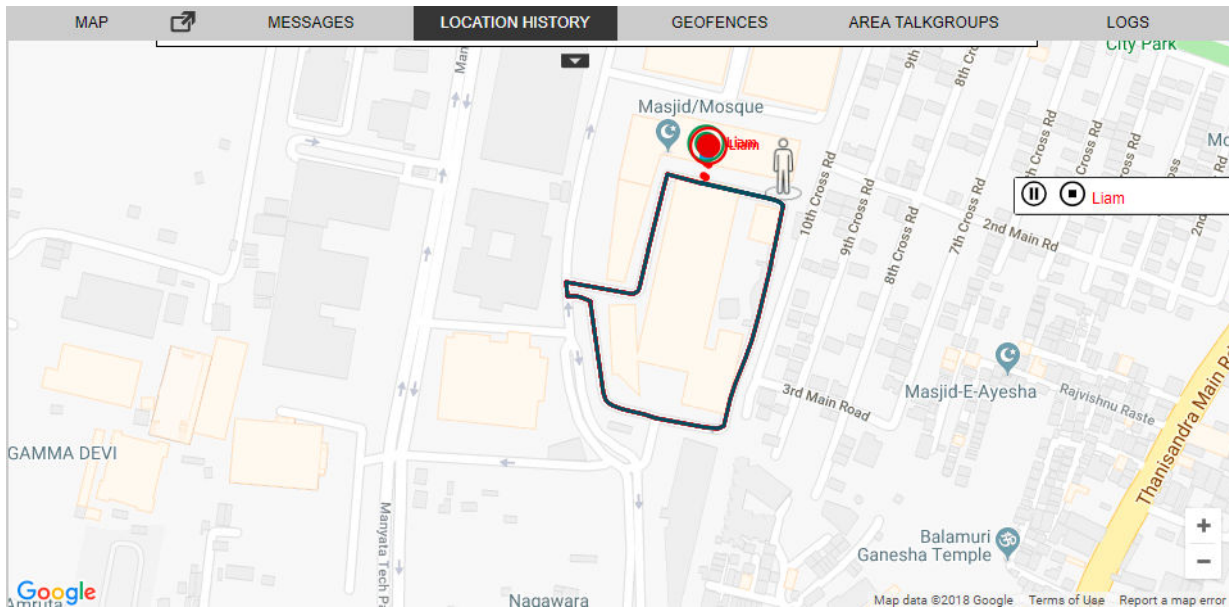

Mouse hover on the highlighted Location Point shows Name, Phone Number, Near Location (Get Location), Arrival Time, Departure Time, and Duration spent at this location of the Fleet Member.

Figure 242: Mouse Hover on Location History of Fleet Member

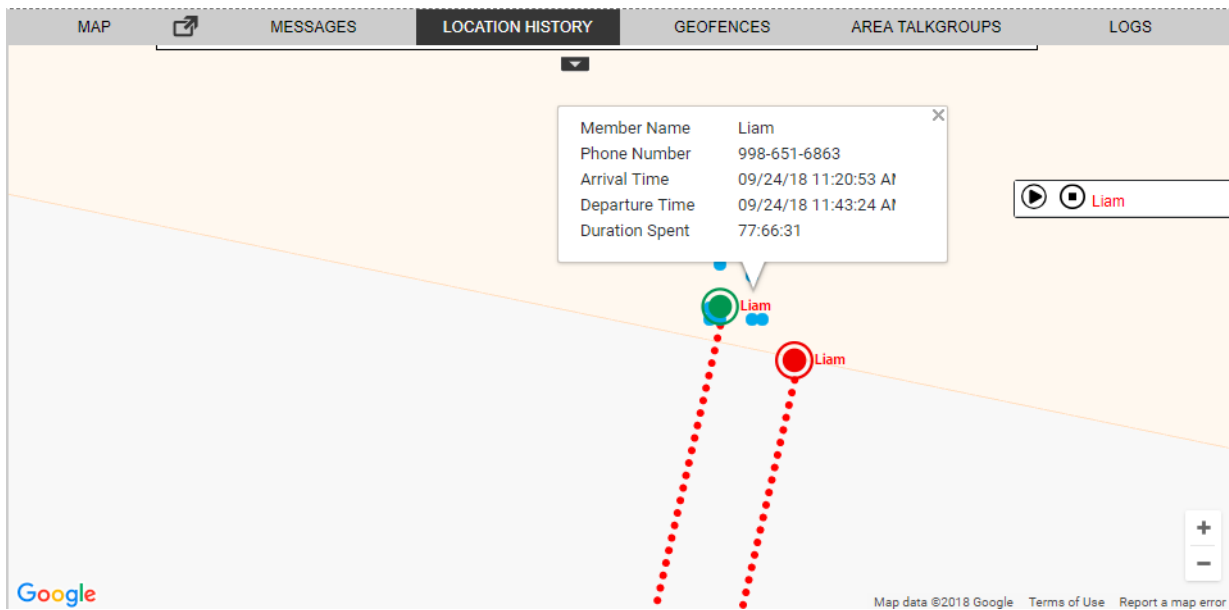

Chapter 18

Geofence


In addition to location service, you are also allowed to define a virtual boundary, popularly known as Geofence, to monitor location activity for all talkgroup members. Geofence is circular in shape, which is set using a distance from the fence center. Geofence is of static fence type. The static type of a fence is a fence with any static location on the map as fence center. Once you define and enable the fence, you can see the fence overlaid on the map with the talkgroup member's location. When any talkgroup member crosses the fence, then Dispatch sends a fence cross notification to that talkgroup member as well as you for the location activity. When you select any talkgroup from the contacts and talkgroups window and select geofence option, a fence enables for that talkgroup.

The fence period, fence distance and location update interval depend on the values set in the map settings. For more information, refer to [Location on page 254](#) section of this document. You can also define the fence period, location update interval, notify me, and notify members from the Create Fence window while creating the fence for the talkgroup.

You can enter the address in the 'Location Address' search box for the fence location around which the fence needs to be applied.

This section is organized as follows:

Figure 243: Geofence Tab

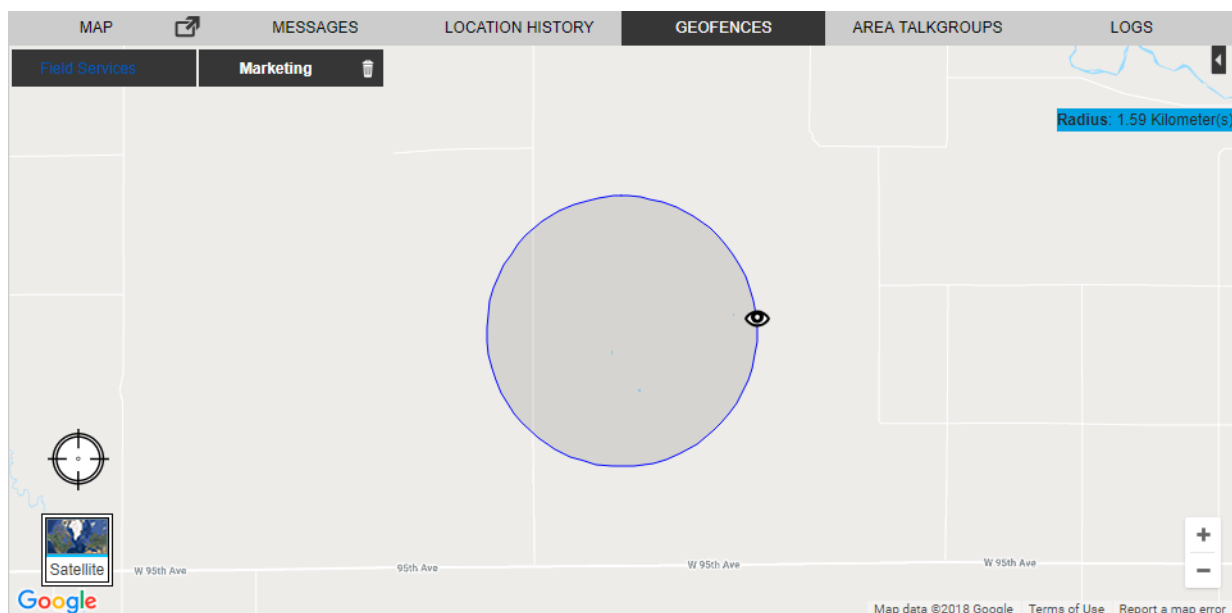

18.1


Creating Geofence for a Talkgroup

When and where to use: To create geofence for a talkgroup, follow these steps:

Procedure:


- 1 Select the talkgroup from the Talkgroups or Favorites tab.
- 2 Right-click on the talkgroup and click the **Add Geofence** icon. A Geofence tab opens below the monitored talkgroup activity window.

Figure 244: Create Geofence- Contacts and Talkgroups Window

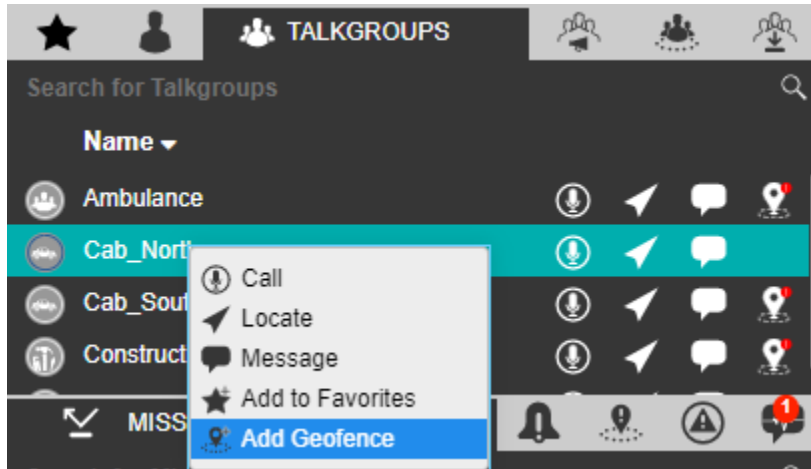

- 3 Move the map or search for the location from the location address and locate the location pin.
- 4 Select the circular shape from the fence shape
Or
Select the fence coordinates saved in the favorites.
- 5 If required, drag the circle to re-size the fence.

Figure 245: Confirm Fence- Geofence

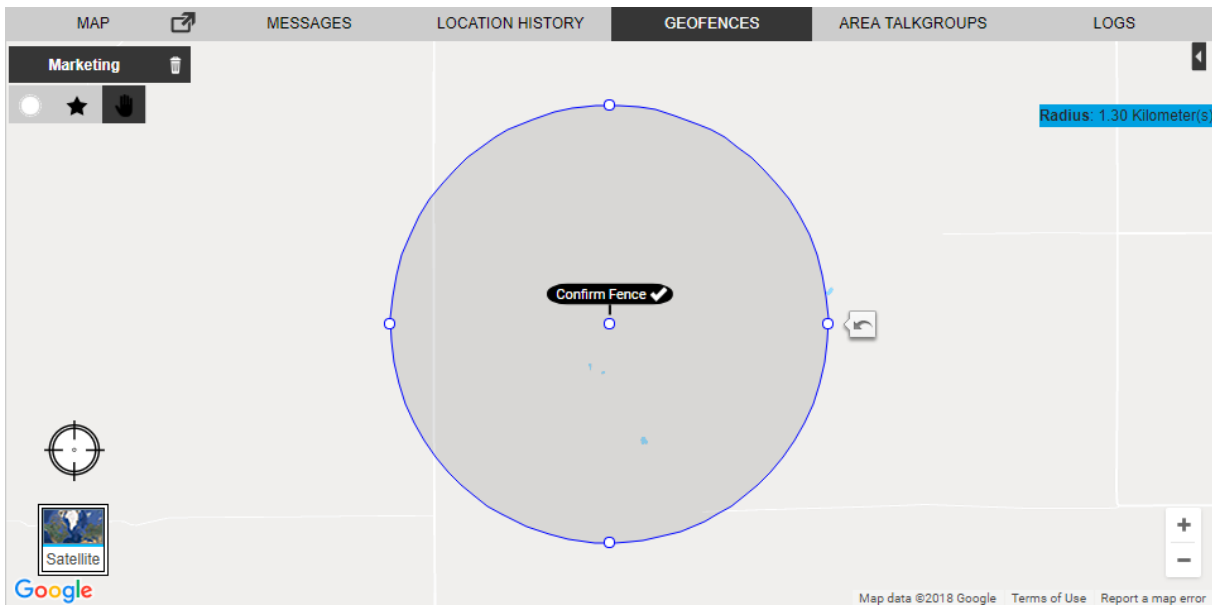

- 6 Click the **Confirm Fence** icon. A Create a Fence dialog box opens.

Figure 246: Create a fence Dialog Box

7 Configure the details


- Name- Enter the name of the fence.
- Location Update Interval- If required, modify the location update interval for the fence.
- Fence Period- If required, modify the duration of the fence for the talkgroup.
- Notify Me- Clear the check box, if you do not want to receive the cross-fence notification.
- Notify Members- Clear the check box, if you do not want the fleet members to receive the cross-fence notification.
- Add Fence to Favorites- Select the check box if you want to add the fence to the Favorites for frequent usage.



NOTICE: The setting in the Notifications settings defines whether the fence cross notification is to be sent to member inside the fence, outside the fence or to the both. For more information, refer to Notifications section of this document.

- Click **Save** to create the fence.
 - Click **Cancel** to cancel the action.
- 8** A **Geofence** icon displays on that talkgroup row in the Contacts and Talkgroups window.

Figure 247: Geofence icon in Contacts and talkgroups Window

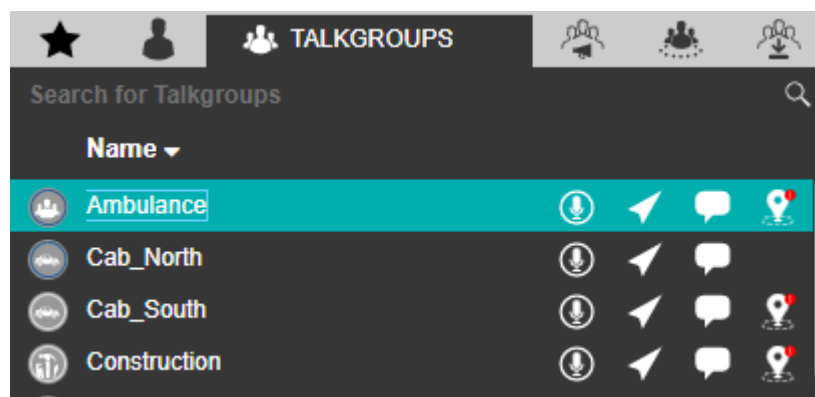

An error message “Talkgroup Name” has expired. Click manage fence to renew or delete the Fence?” displays if the fence to the talkgroup is expired.

18.2

Add Fence coordinates to the Favorites

You can save the fence coordinates by adding the fence to the Favorites for frequent usage. You can add the fence coordinates to Favorites from Create a fence or Fence information window. To add the fence to the Favorites, do the following:

- Click the **Eye** icon on the fence and select the **Favorite** icon from the fence information window.
- In the Create a fence window, select the check box next to the Add Fence to Favorites.

Next time if you want to define the same fence coordinates for any talkgroup, and then you can choose the coordinates saved in the fence Favorites.

To define the same fence, right-click on the talkgroup in the Contacts and Talkgroups window and select the **Favorite** icon in the geofence window. Fence added to the Favorites shows. Select the fence and create the fence.

18.3


Removing Fence coordinates from the Favorites

When and where to use: To remove the fence coordinates from the favorites, follow these steps:

Procedure:


- 1 Right-click one of the talkgroups from the Contacts and Talkgroups window and select **Add geofence**.
- 2 A block is shown in the Geofence tab.
- 3 Select the **Favorites** icon. The fence coordinates added to the Favorites is shown.
- 4 Click the **Delete** icon next to the fence name.

Figure 248: Remove Fence from the Favorites

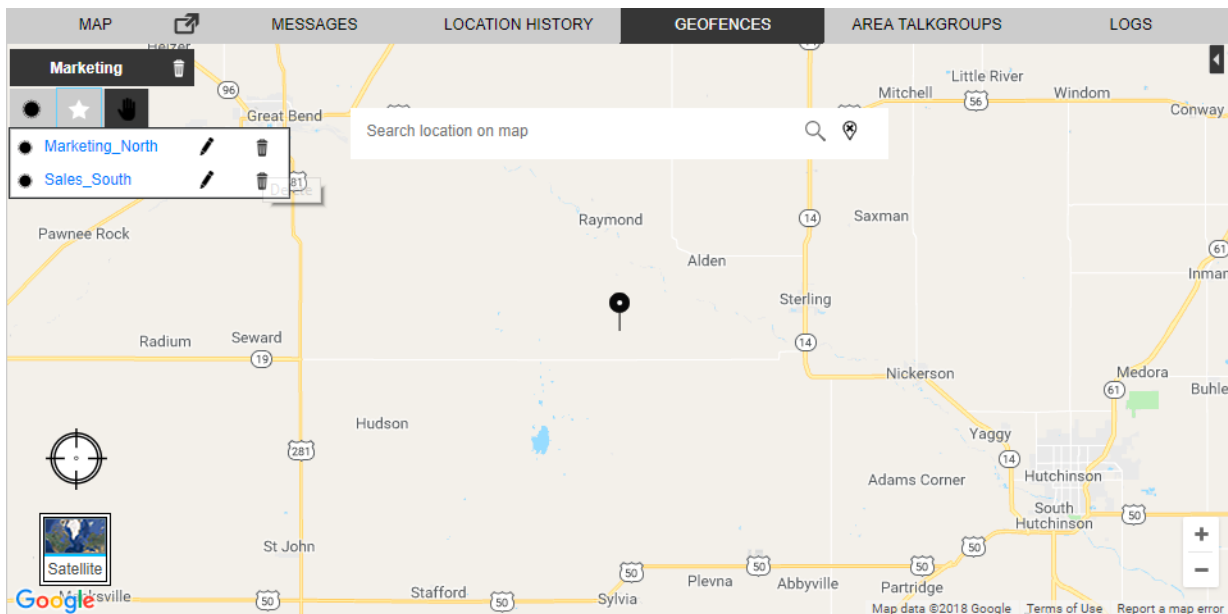

Clicking the **Eye** icon on the map displays the member fence information window.

Figure 249: Fence Information Window

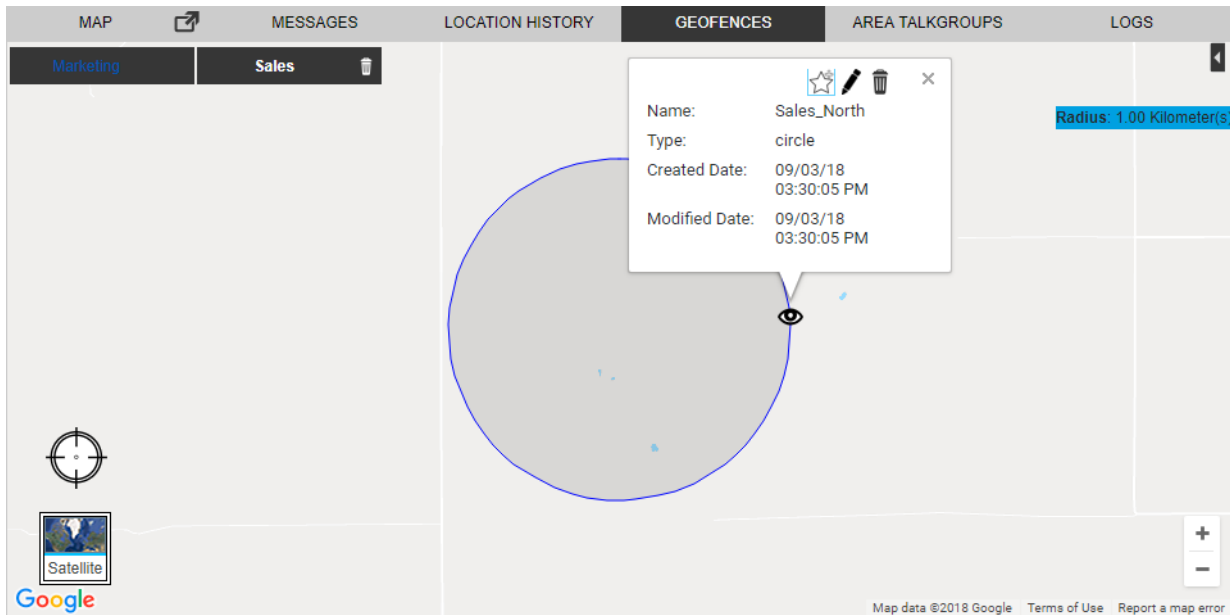

The information window shows type of fence, name, created date, and modified date. You can delete, modify, or add the fence created to the Favorites from the information window.

18.4 Editing fence

You can edit the name of the fence from by clicking the Favorites icon in the Geofence tab.

When and where to use: To edit all other parameters, follow these steps:

Procedure:

- 1 Click the **Eye** icon on the fence. An information window opens.

Figure 250: Edit Fence Information

Edit Fence:

Name*	<input type="text" value="Sales_North"/>
Type:	CIRCLE
Location Update Interval (Seconds) <small>(Min: 60 - Max: 3600)</small>	<input type="text" value="300"/>
Fence Period(Minutes) (Min: 60 - Max: 10080)	<input type="text" value="480"/>
Notify Me	<input checked="" type="checkbox"/>
Notify Members	<input type="checkbox"/>

- 2 On the information window, click the **Edit** icon.
- 3 An Edit Fence window displays. Modify the details.
 - Click **Update** to save the changes.
 - Click **Cancel** to cancel the action.

18.5

Deleting fence


You can delete a fence which you had created. You can delete the fence either by or A confirmation message display “Are you sure you want to delete?”

When and where to use: To delete a fence, follow these steps:

Procedure:

- 1 Click one of the following:
 - **Delete** icon on the fence information window.
 - **Close** icon next to talkgroup name in the Geofence tab.
- 2 A delete confirmation window displays.
 - Click **Yes** to delete.
 - Click **No** to cancel the action.

Figure 251: Fence Expired Error Message

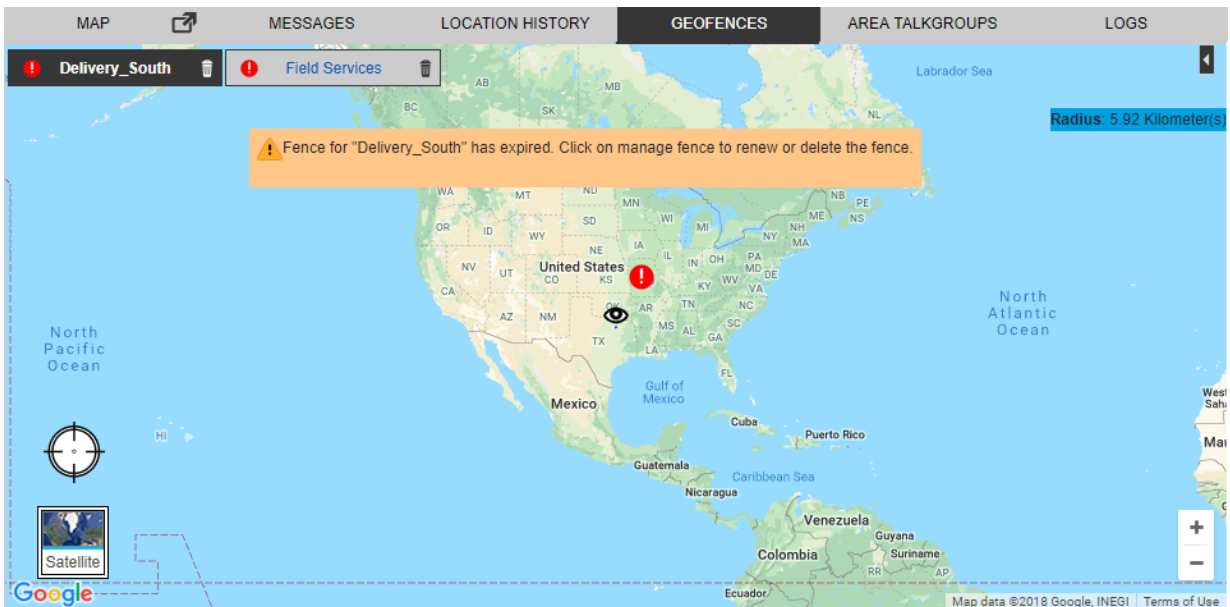

18.6

Geofence Event View

The Geofence event view for a talkgroup provides information of the fleet member activities associated with the fence. You can sort by Name, Event, Distance from the fence and time by clicking the column header.

The geofence event view window provides the following information:

- Name- Displays the name of the fleet member.
- Event- Inside or Outside the fence.
- Distance- The distance of the fleet member from the associated fence.
- Time- The date and time of the event occurred.

Figure 252: Geofence Event Window

Name	Event	Distance	Time
Andy Smith	[Icon]	0.81km	09/03/18 05:18:17 PM
Andy Smith	[Icon]	4.24km	09/03/18 05:18:17 PM

Chapter 19

Video Streaming

Video streaming allows you to initiate or receive video stream to or from the fleet members who can do of video streaming. The Dispatch supports two types of video streaming: Video Push and Video Pull.

- **Video Push**
The video stream that you receive from the fleet member is called as Video Push. The video stream can be initiated as one-to-one or a talkgroup.
- **Video Pull**
The video stream in which you are authorized to initiate to a fleet member is called as Video Pull. The video pull can be of two types:
 - **Confirmed Video Pull**
The video stream starts only after the confirmation from the recipient for whom you are authorized is a confirmed video pull.
 - **Unconfirmed Video Pull**
The video stream starts on the device of the recipient automatically without their acceptance for whom you are authorized is an unconfirmed video pull.

Once video streaming starts, the video is shown with a separate block in your Dispatch browser tab. You can drag the block anywhere within the Dispatch browser tab as per your comfort.



NOTICE: Dispatch does not support video streaming feature in Internet Explorer (IE). Video streaming works only when you sign in to the Dispatch in Chrome browser.

19.1


Initiate Video Call (Video Stream Pull)

When and where to use: To request a video session to a fleet member, follow these steps:

Procedure:


- 1 Click the stream video icon from one of the following sections:
 - Click the **Stream Video** icon next to the contact from the Contacts and Talkgroups or Info window of a contact on the Map.
 - Select and right-click on the contact or alert from the Contacts and Talkgroups or Alerts window respectively and select **Open Video Stream**.
 - From the Message tab, click the **Stream Video** icon on the fleet member message block.

Figure 253: Initiate Video Streaming

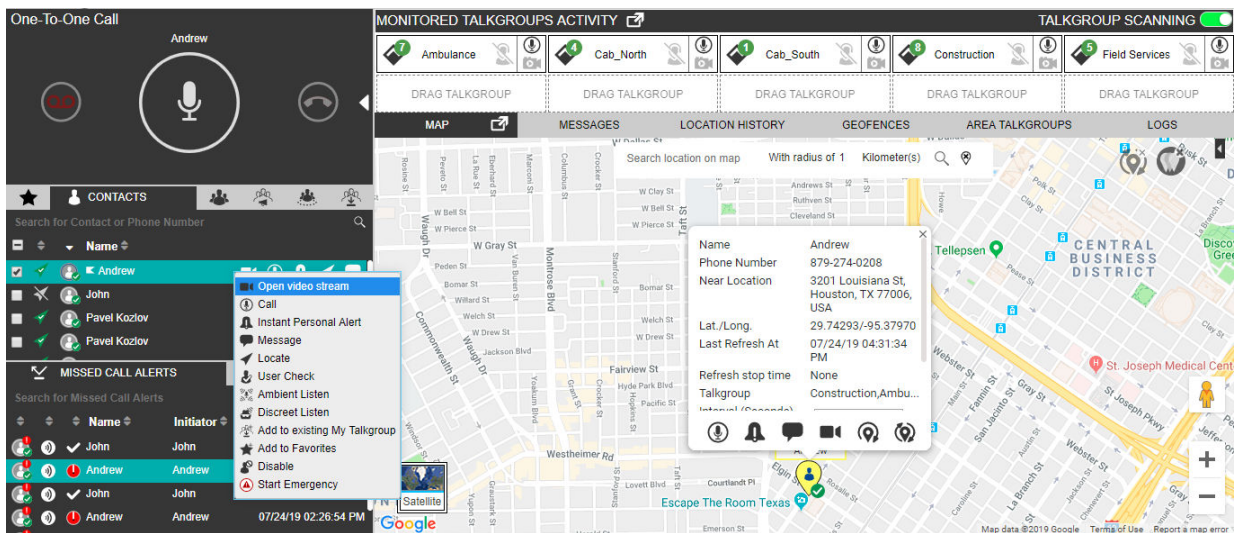


2 A video streaming initiate confirmation message displays.

Figure 254: Video Stream Confirmation Message

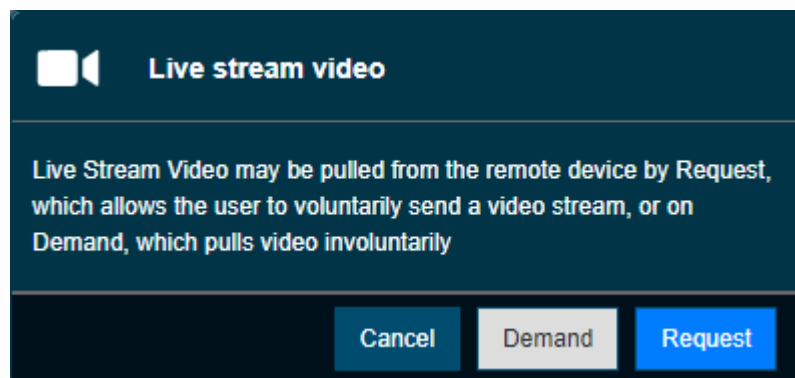


- To start the video stream, click **Demand**. A video streaming block pops-up and video stream starts.
- To send a request to stream the video, click **Request**.
- To cancel the action, click **Cancel**.

 **NOTICE:** The Demand button is disabled if you are not authorized for the automatic or unconfirmed video pull.

3 A toast notification of the request shows.


Figure 255: Video Stream Request Toast Notification

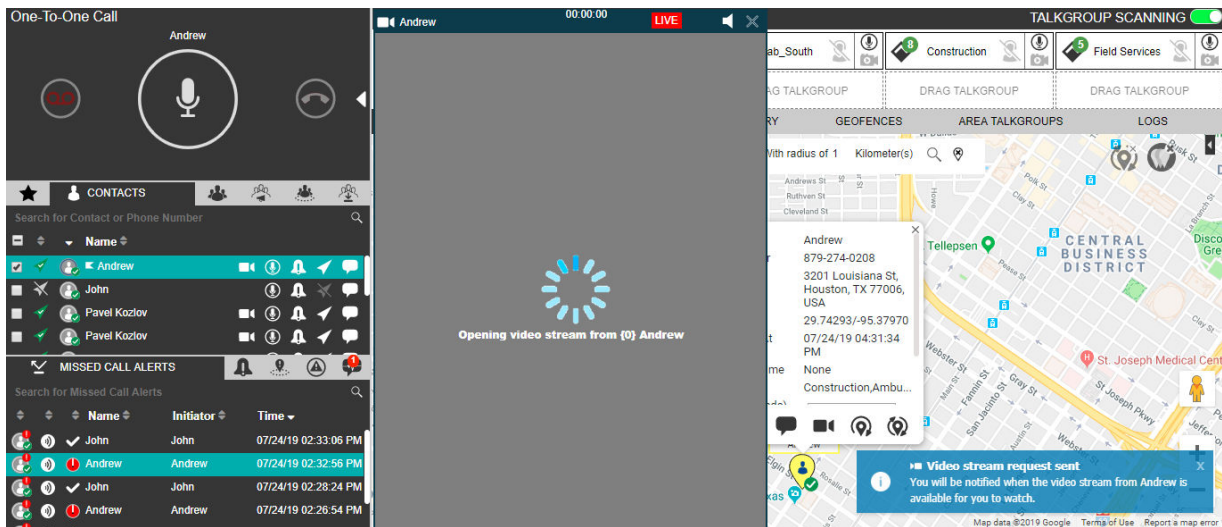

- 4 Once the fleet member accepts the video pull request, a video streaming block pops-up, and video stream starts.

Once the video streaming starts, you can drag the block anywhere on the Dispatch browser.

Figure 256: Video Streaming

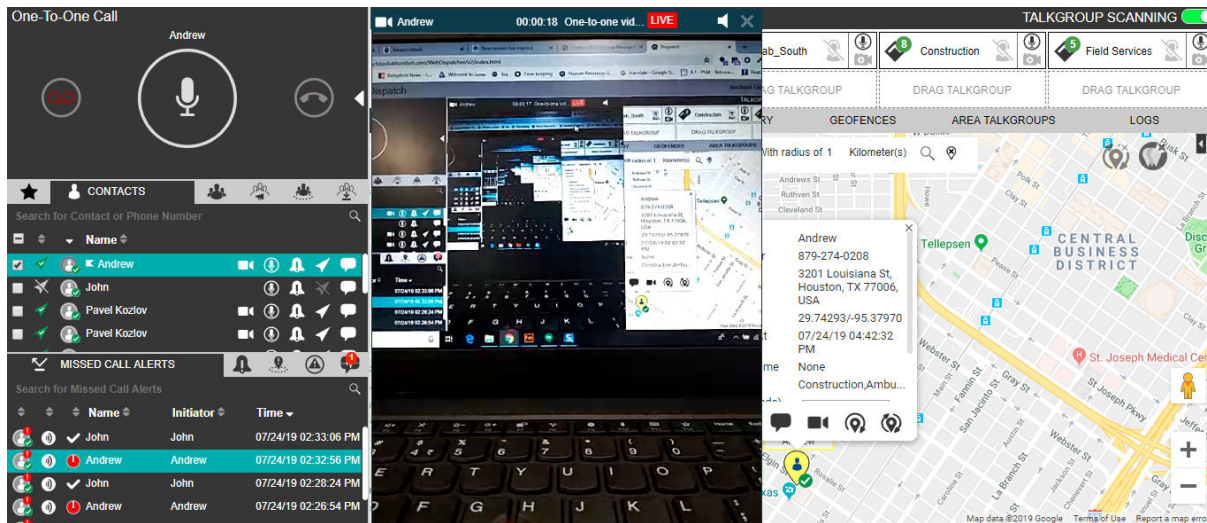

To end the video stream, click the **Close** icon in the video streaming block. You can mute and un-mute the audio by clicking the **Speaker** icon in the video streaming block.

19.2

Received Video Call (Video Stream Push)

When you receive an incoming video call (one-to-one or talkgroup call by a member), the call shows either in Monitored talkgroup Activity window (if talkgroup is scanned) or with a toast message (in case of one-to-one or talkgroup). Depending on the settings, you can answer the call in two ways:

- **Polite Answer**
You can choose either to accept or reject the received video session request.
- **Auto Answer**

The incoming video session request is automatically accepted and played. No selection is available for you to choose.

19.2.1


Talkgroup (when not scanned) or One-to-one video call

When and where to use: To join the received video call, follow these steps:

Procedure:

- 1 When you receive a talkgroup (when not scanned) or one-to-on video call, a streaming request toast notification displays.

Figure 257: Received Video Call Streaming Request

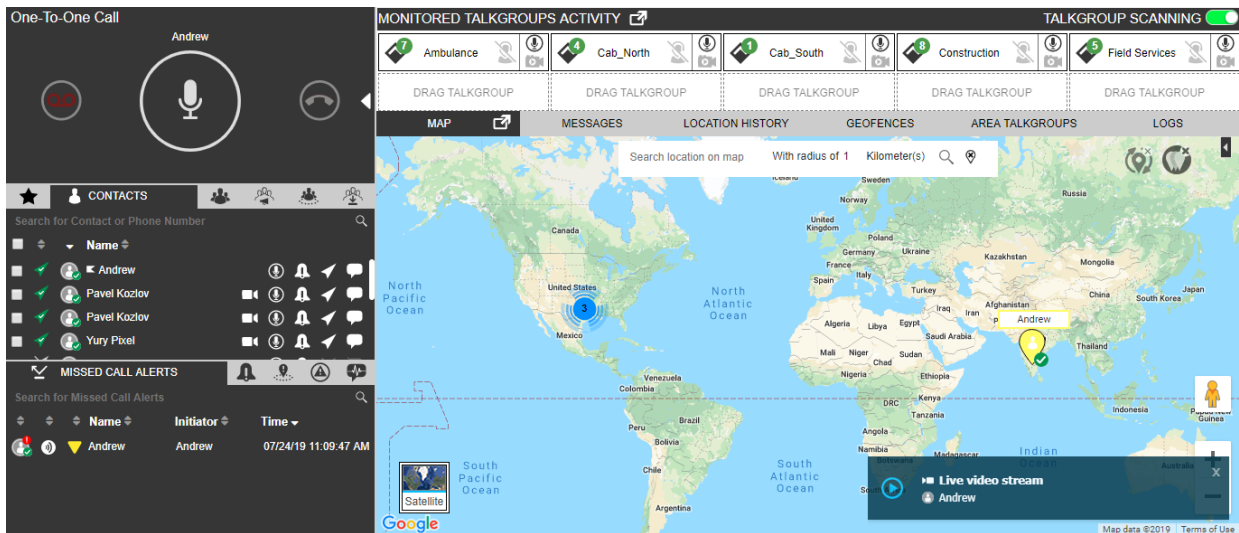

- 2 Click on the streaming request toast notification. A video streaming block pops-up and video stream starts with a toast notification indicating that the stream started successfully. To reject the request, click the **Close** icon. A missed video call alert shows under the Alert tab.

19.2.2


Talkgroup video call (when scanned in Monitored Talkgroup tab)

When and where to use: To a received talkgroup video call when scanned under the Monitored Talkgroup tab, follow these steps:


Procedure:

- 1 When you receive a talkgroup video call, an indication of the call shows on that scanned talkgroup along with the streaming request toast notification.

Figure 258: Received Talkgroup Video Call- Monitored Talkgroup

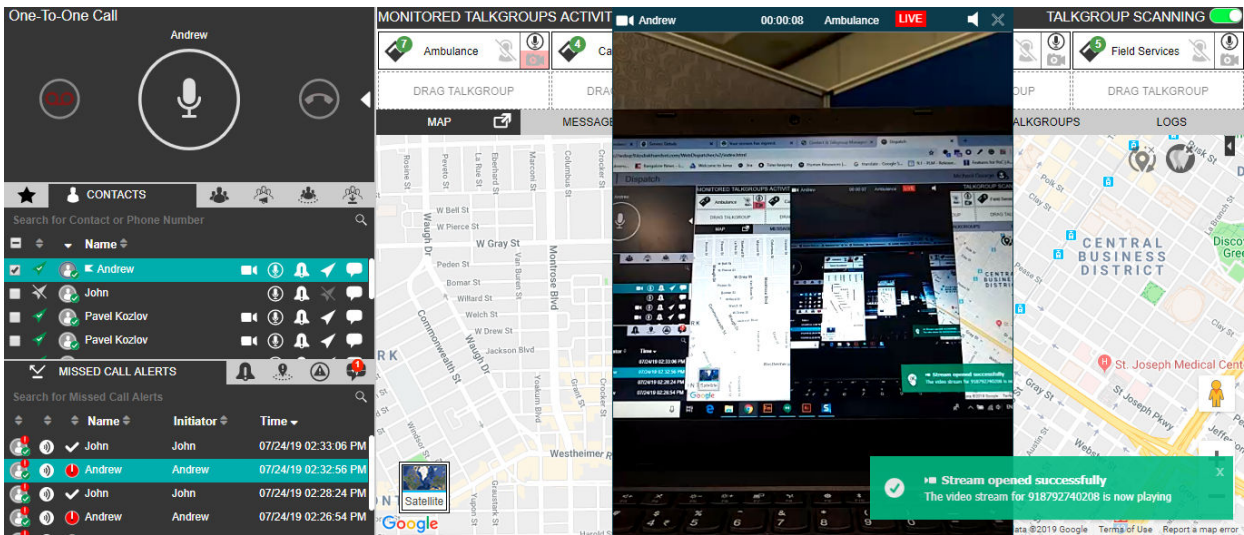

- 2 To join the call, click the **Video Stream** icon on the scanned talkgroup block or **Toast notification**.
- 3 A video streaming block pops-up and video stream starts with a toast notification indicating that the stream started successfully.
- 4 To reject the streaming request, click the **Close** icon on the toast notification. A missed video call alert shows under the Alert tab.


 **NOTICE:** If the talkgroup on which the video stream is placed is kept for monitoring under the Monitored Talkgroups Activity window, then the call lands here simultaneously along with the incoming toast notification. You can join the call later by clicking the **Video Stream** icon even after clicking Ignore until that call ends.

Once the video streaming starts, you can drag the block anywhere on the Dispatch browser. You can mute and un-mute the audio by clicking the **Speaker** icon in the video streaming block.

Clicking the **Close** icon in the streaming request toast notification ends the incoming streaming request and a missed video call alert shows under Alerts tab.

If fleet member who has initiated the video call pauses the stream then a pop-up block displays.

Figure 259: Video Streaming Paused

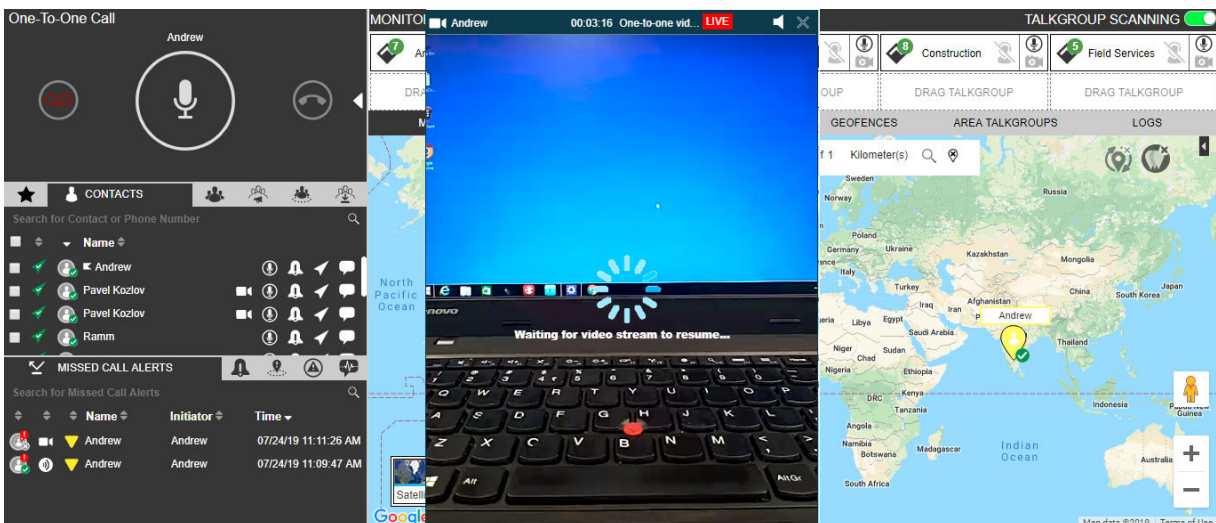

The fleet member can resume the streaming anytime and continue the video call streaming back again.



NOTICE: If you are already in an ongoing video stream and you receive a video stream request, then the Dispatch rejects the new request. The new video stream request shows in the Missed Call Alerts tab under the Alerts window.

Chapter 20

Area Talkgroup

You can create talkgroups by selecting the 9.0 clients, which are part of Command or SafeGuard package. The area talkgroup capable members show in the area talkgroup slider under the Area Talkgroups tab. You can create a boundary and select the fleet members from the area talkgroup slider to create an area talkgroup. Whenever fleet members enter or leave the defined talkgroup area, they either become part of the area talkgroup or removed from the area talkgroup respectively. Area talkgroups are the talkgroups that you create based on the geographical area and the dynamic members. A dynamic member is a member whose active membership in the talkgroup depends on the location of the member inside or outside the area talkgroup. You can designate certain members to be static. The static member is always been an active member of the talkgroup regardless of their location.

The list of area talkgroups that you create and manage show under

- Area Talkgroup tab under Contacts and Talkgroups tab
- Area Talkgroup slider

The list of area talkgroups that you do not create and manage, but you are one of the members of that area talkgroup show under

- Area Talkgroup tab under the Contacts and Talkgroups tab.


You can add or remove the fleet members and delete the area talkgroup anytime from the Dispatch. If you are not an owner of the area talkgroup then you cannot locate the area talkgroup members. You can start a PTT call, send message, and monitor the area talkgroups.

Area Talkgroups are configured system-wide by default. The maximum number of area talkgroups allowed per group owner is 1-50 (default=10).



NOTICE: The name of the area talkgroup provided by you should be unique across the system.

Figure 260: Area Talkgroup Tab

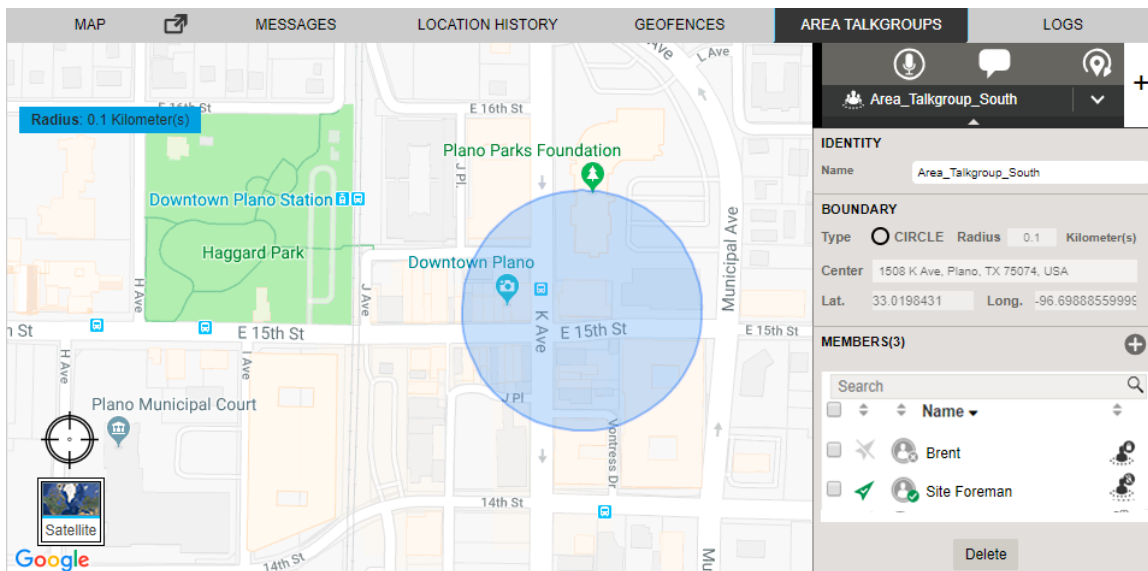

The area talkgroup slider shows the following details.

- Identity- Displays the name of the area talkgroup.
- Boundary- Displays the type of boundary, radius in kilometers, center of the map, latitude, and longitude. You cannot edit the boundary once save.
- Members- Displays the members in the area talkgroup.



NOTICE: The central admin does not manage area talkgroups.

20.1

Creating Area Talkgroup


The dispatcher can create a talkgroup with fleet members on the map.

When and where to use: To create an Area Talkgroup, follow these steps:

Procedure:


- 1 Select the **Area Talkgroup** tab and click the **Create Area Talkgroup** icon.
- 2 A circle with a pre-defined radius displays on the map.

Figure 261: Search Location- Create Area Talkgroup

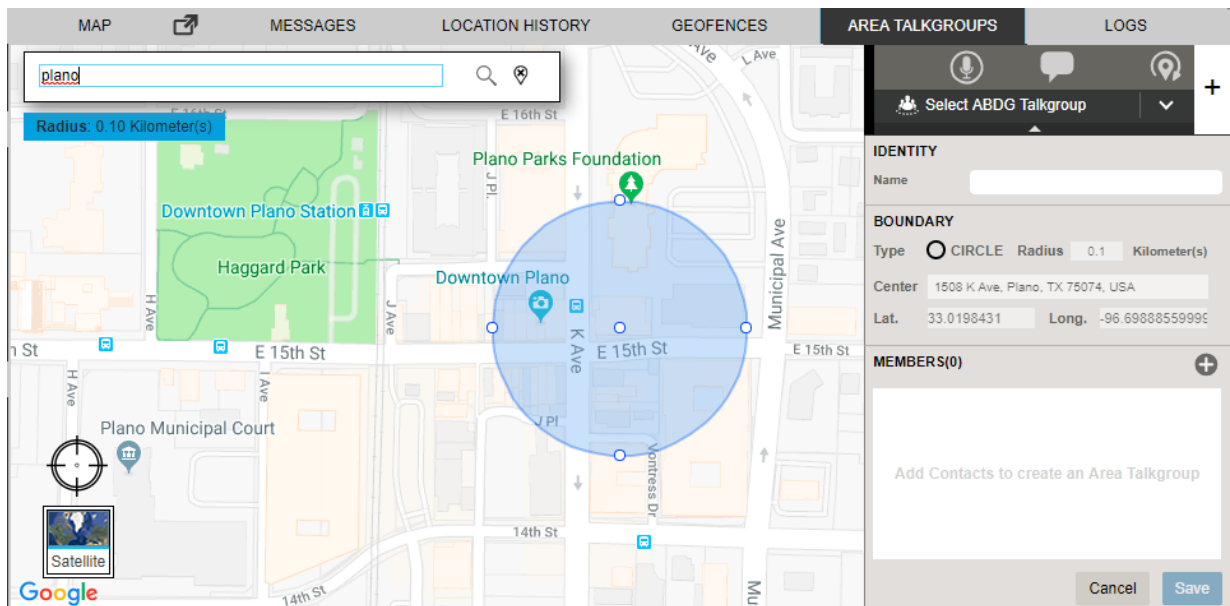


- 3 You can search the location for the area talkgroup by entering the location in the search box or move the map to select the location.
- 4 Drag the circle to change the radius of the area talkgroup, if needed.

Figure 262: Change Radius- Area Talkgroup

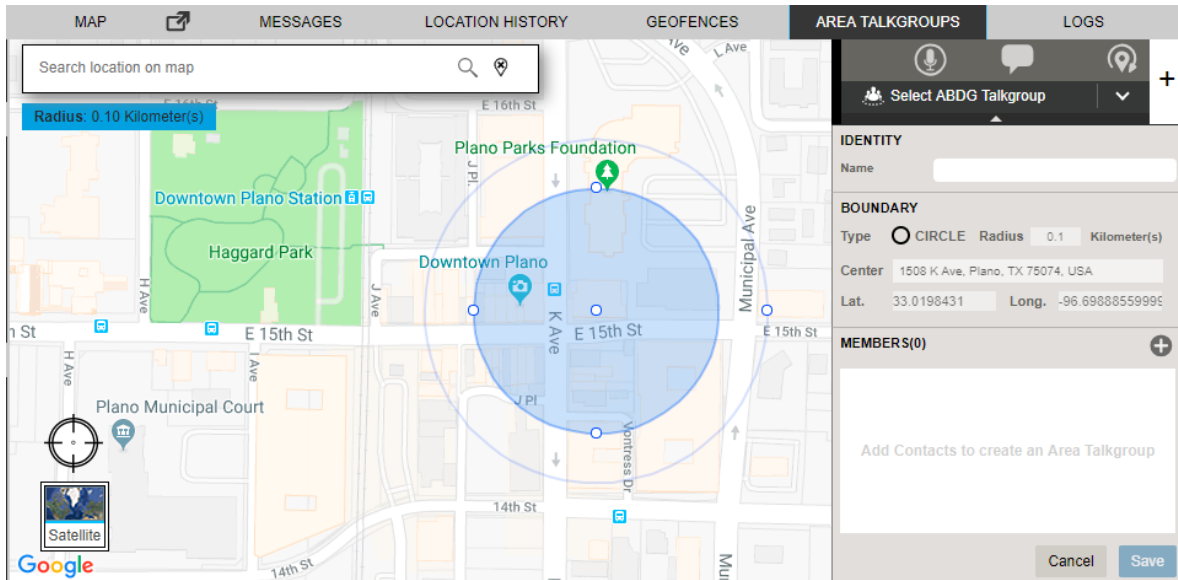


- 5 Enter the area talkgroup name in the Identity field.
- 6 Click the **Add Members** icon from the area talkgroup slider.

Figure 263: Enter Details and Add Members- Area Talkgroup

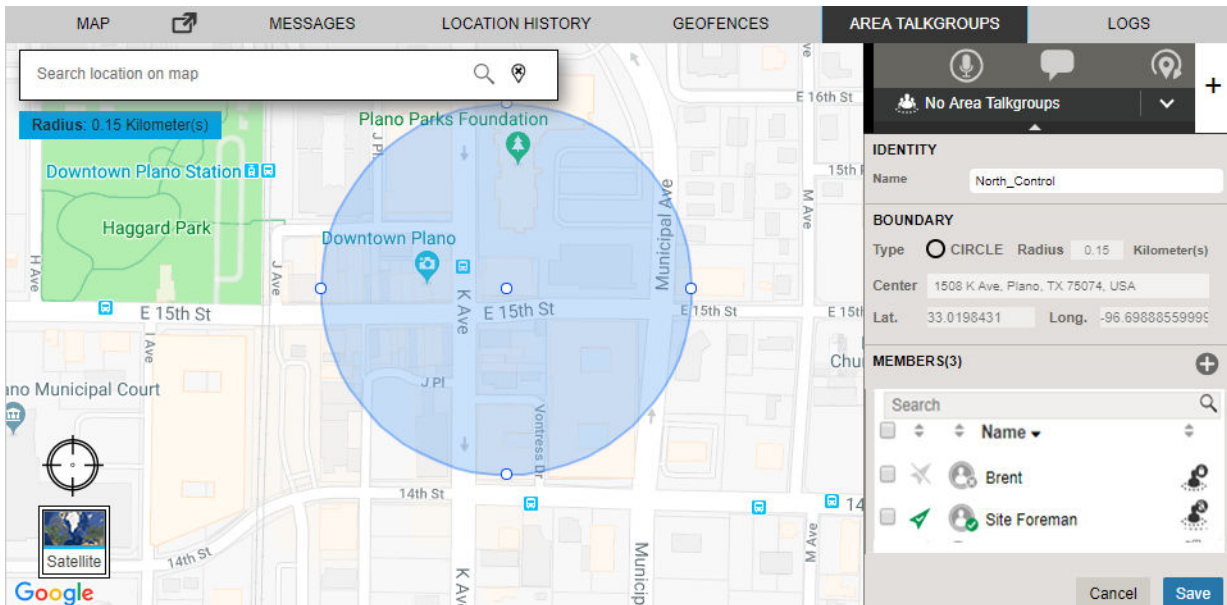

- Select the check boxes next to the contacts and click **OK** to continue.
- Click **Cancel** to cancel the action.

 **NOTICE:** Select at least one dynamic member to create an Area Talkgroup.

- 7 If you click **Cancel**, a Modification Not Saved confirmation message displays.

Figure 264: Modifications Not Saves Confirmation Pop-up



- Click **Yes** to confirm the cancel.
 - Click **No** to continue the modifications.
- 8 You can select the contacts, right-click, and choose to delete the contacts before saving.
- Click **Save** to create the area talkgroup. The area talkgroup shows under the area talkgroup list and in the Area Talkgroup under the Contacts and Talkgroups tab.
 - Click **Cancel** to cancel the create action.



NOTICE: Before you save, you can choose to assign, remove supervisor role, or delete the member from the area talkgroup.

20.1.1

Call, Send Message or Locate or Refresh the location of an Area Talkgroup


You can call, send a message, or locate area talkgroup members. To sort area talkgroups alphabetically or in reverse alphabetical order, click the column headers. By default, the talkgroups are sorted by name in ascending order.

When and where to use: To call, send a message, or locate an Area Talkgroup, follow these steps:

Procedure:


- 1 To view the talkgroups, select the **Area Talkgroups** tab in Contacts and Talkgroups window.
- 2 To display all the members of the area talkgroup, double-click the talkgroup.

Figure 265: View Members of the Area Talkgroup

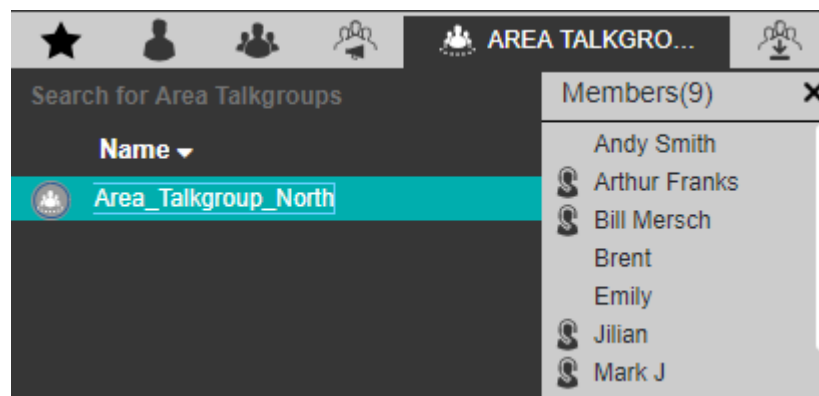

- 3 Click the **Close** icon or press the **Esc** key on your keyboard to close the Members list.
- 4 To select the area talkgroup, click the talkgroup:

Figure 266: Selecting a Talkgroup from Area Talkgroup

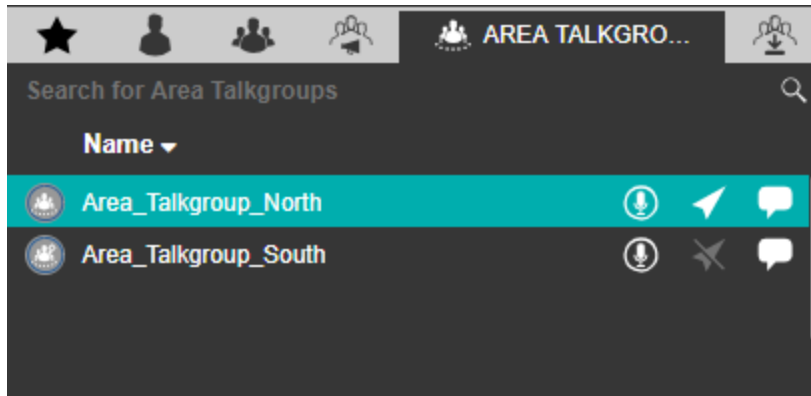

From the Area Talkgroup tab, select the area talkgroup and do the following:

- To call, click the **Call** icon.
- To send a message to area talkgroup members, click the **Message** icon.
- To locate the area talkgroup members, click the **Locate** icon.

From the Area Talkgroup slider, select the area talkgroup from the drop-down and do the following:

- To call, click the **Call** icon.
- To send a message to area talkgroup members, click the **Message** icon.
- To refresh the location of the area talkgroup members, click the **Refresh Location** icon.

20.2

Adding members to Area Talkgroup


You can add members to an area talkgroup.

When and where to use: To add members to the Area Talkgroup, follow these steps:

Procedure:


- 1 From the Area Talkgroup slider, select the talkgroup from the area talkgroup list.

Figure 267: Area Talkgroup Slider

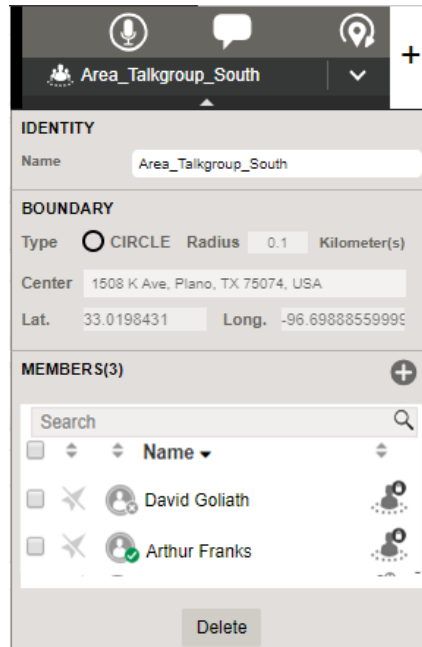

- 2 Click the **Add Members** icon. An add members window displays.

Figure 268: Add Members - Area Talkgroup Slider

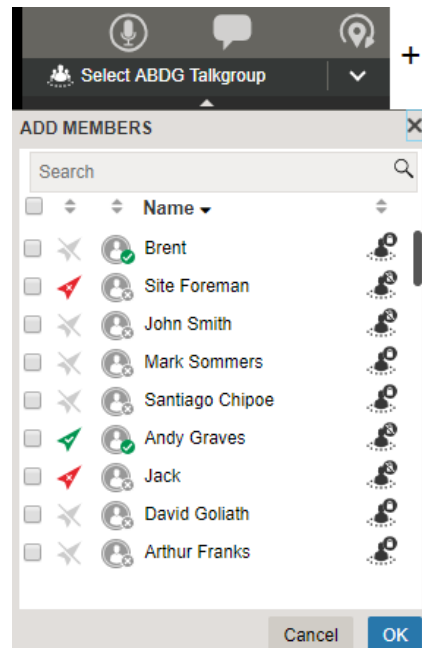

- 3 Select the members.
 - Click **OK** to add.
 - Click **Cancel** to cancel the action.
- 4 A save screen displays.
 - Click **Save** to add the members to the area talkgroup.
 - Click **Cancel** to cancel the action.

20.3


Deleting Members of Area Talkgroup

When and where to use: To delete members from Area Talkgroup, follow these steps:

Procedure:

- 1 From the Area Talkgroup slider, select the area talkgroup.
- 2 On the members list, select the members you want to delete.

Figure 269: Delete member from Area Talkgroup

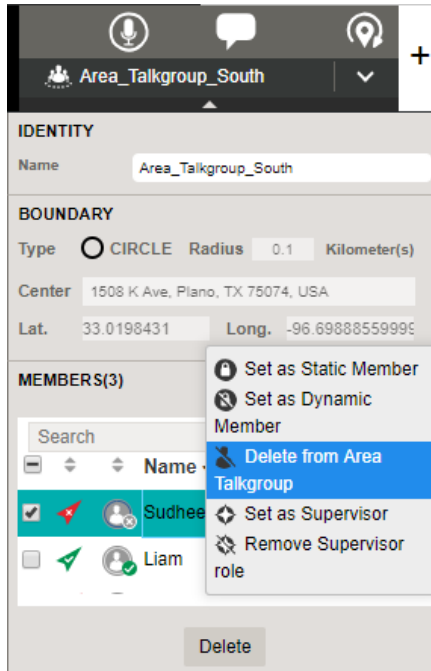

- 3 Right click and select **Delete from Area Talkgroup**.
 - Click **Save** to confirm.
 - Click **Cancel** to cancel the action.

20.3.1


Deleting Area Talkgroups

When and where to use: To delete Area Talkgroups, follow these steps:

Procedure:


- 1 From the Area Talkgroup slider, select the area talkgroup.
- 2 Click the **Delete** button. A Delete Confirmation box displays.

Figure 270: Area Talkgroup Slider

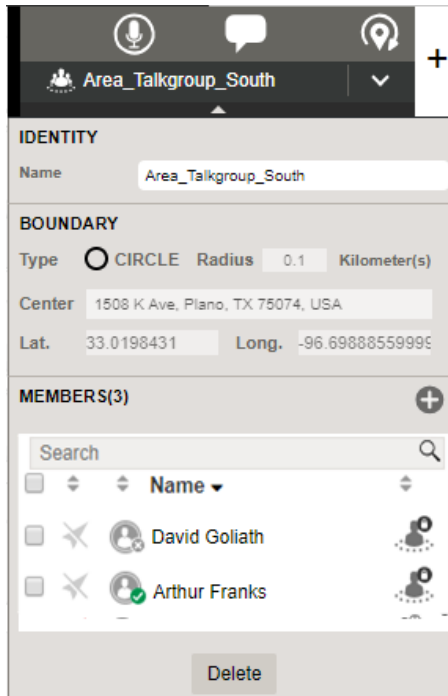

- Click **Delete** to delete the area talkgroup.
- Click **Cancel** to cancel the action.

Figure 271: Delete Area Talkgroup Confirmation Box

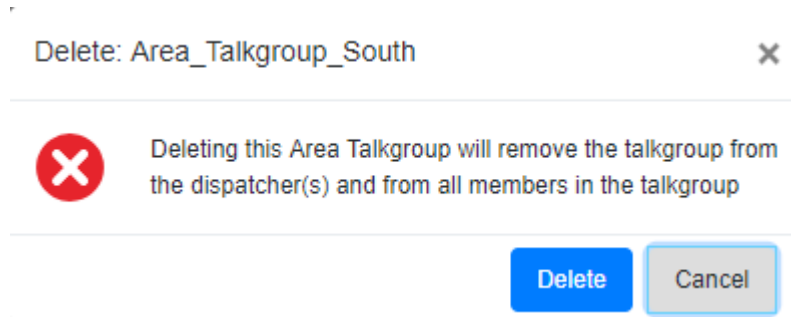



20.4

Actions on Area Talkgroup Members

You can assign or remove supervisor role permission of members, decide which members to be static or dynamic, and can remove member from the area talkgroup by right-clicking on the selected members from the area talkgroup slider window.

To do so, select the members, right-click, and choose one of the following:

- **Set as Static Member**
When you set the member as static then they are always a part of the area talkgroup and a **Static** icon show on the area talkgroup member:
- **Set as Dynamic Member**
When you set the member as dynamic then their availability in the area talkgroup depends on their movement and a **Dynamic** icon show on the area talkgroup member:

- **Delete from Area Talkgroup**
Choose the member from the list. Click **Delete** and confirm to delete the member from the area talkgroup.
- **Set as Supervisor**
When you select the member as supervisor then they have supervisory rights in the area talkgroup and a **Supervisor** icon show on the type of the member .
- **Remove Supervisor Role**
Select to remove the supervisory role of the member. A **Supervisor Disabled** icon show on the type of the member .

20.5

Dynamic Active and Inactive Area Talkgroup member

The Members with the Dynamic Active icon in the Area Talkgroup slider shows that they are inside the talkgroup area. A Dynamic Inactive icon in the Area Talkgroup slider shows that they are outside the talkgroup area.

Chapter 21

User Monitoring

User monitoring allows you to collect information related to the fleet member who is not responding to the calls, IPAs, or messages. After evaluating and accessing, you can view the actual reasons and can take necessary actions.

21.1

User Check


User check allows you to view the details of the fleet member and their device.

When and where to use: To activate the user check for a fleet member, follow these steps:

Procedure:


- 1 From the Contacts and Talkgroups window, select the fleet member for whom you want to do the user check.

Figure 272: Activate User Check- Contacts and Talkgroups Window

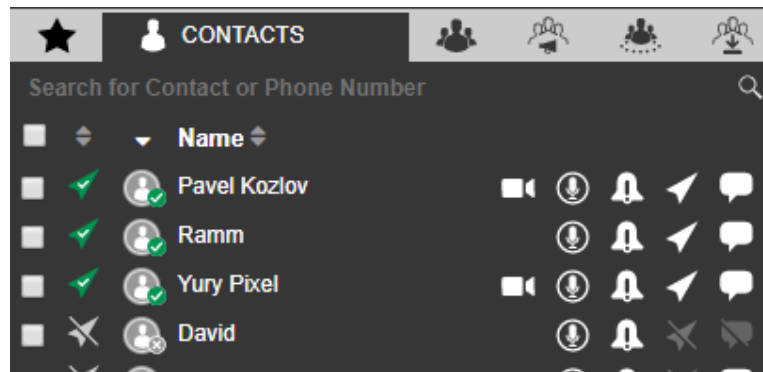

- 2 Right-click and select **User Check**. A User Check information window displays.

Figure 273: User Check Information window

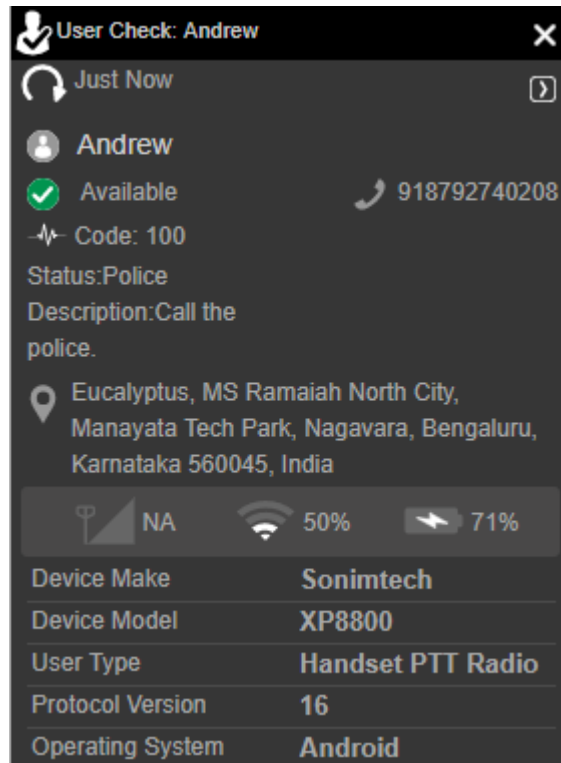

Once you select user check for a fleet member, the following information is shown:

- name of the fleet member
- Presence status
- Phone number
- Status message details
- Location of the fleet member
- Signal strength of Wi-Fi or LTE on the device of the member
- Battery status
- Emergency state
- Last update time
- Device Make and Model
- User Type
- Protocol Version
- Operating System

Click **Refresh** icon to refresh the information that shows in the User Check window. You can click **More** icon in the User Check window and select to perform Ambient Listen or Discreet Listen for that fleet member. A cancel emergency indication is shown if an emergency has been initiated for the selected user.

21.2

Ambient Listen


The duration of the ambient listening depends on the server configuration (Minimum: 1 min or 60 secs, Maximum: 1440 min or 86400 sec, Default: 60 min or 3600 secs). The ambient listening is interrupted if you receive an emergency call or the fleet member (target user) makes or receives a PTT call on their device. Once the emergency or call on the device of the fleet member device ends then, the ambient listening is reconnected automatically until the maximum duration of ambient listening call is expired or you choose to end the call. The ambient listening is recorded and when ends, the recording is created and automatically stored in the call history. You can click the **More** icon in the User Check window and select to do the Ambient Listen from the User Check window or can do the ambient listen as mention. Ambient listening allows you to activate the device mic of the fleet member remotely to listen to the surroundings without knowing them and take necessary actions like remote emergency and enable or disable device of the member.

When and where to use: To do ambient listen to a contact, follow these steps:

Procedure:


- 1 From the Contacts and Talkgroups window, select the fleet member for whom ambient listen need be done.

Figure 274: Ambient Listen

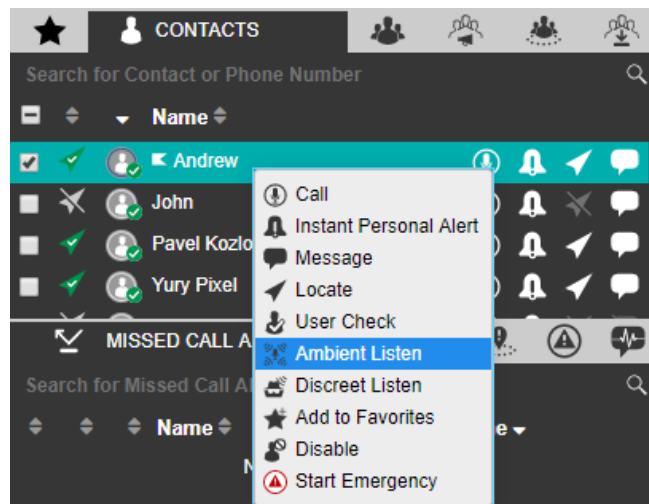

- 2 Right-click and select **Ambient Listen**. A Begin Ambient Listening confirmation pop-up displays.


Figure 275: Ambient Listening Confirmation Pop-up

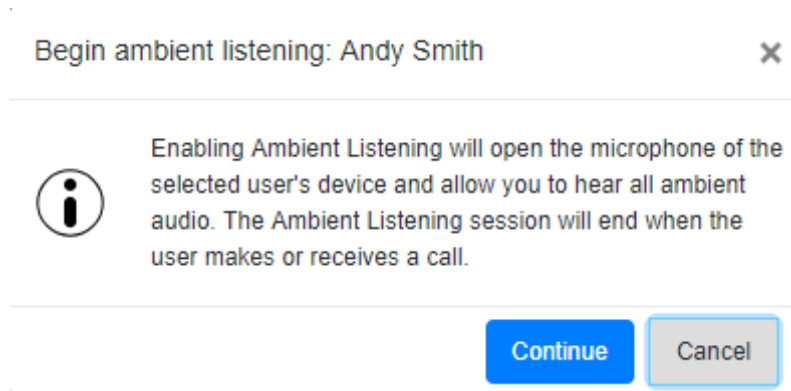


- Click **Continue** to start the Ambient listen.

- Click **Cancel** to cancel the action.

Figure 276: Ambient Listen- Call Activity Window

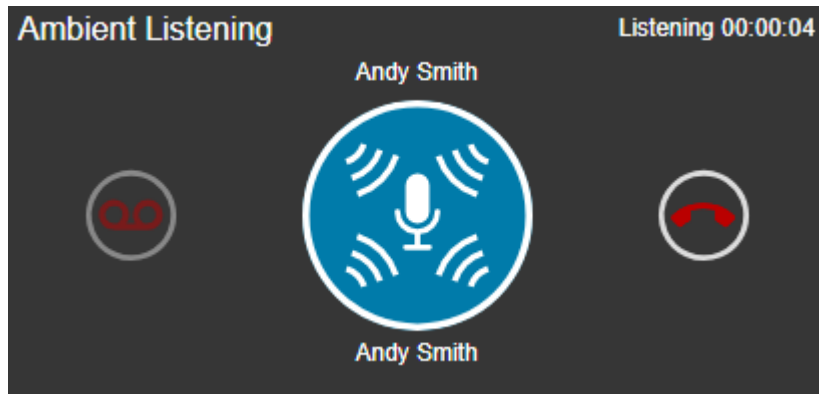

 **NOTICE:** The ambient listening only activates if the fleet member is not participating in any PTT call.

- 3 To stop the Ambient Listen, click the **End** icon in the Call Activity window.

21.3

Discreet Listen


Discreet listening allows you to listen to any call to and from the member that you select without knowing them. You can listen to the conversations on device of the fleet member. The discreet listening records and when ends, the recording is created and automatically stored in the call history under Call Logs. You can click the **More** icon in the User Check window and select to do the Discreet Listen or can do the discreet listen as mention.

When and where to use: To do discreet listen to a contact, follow these steps:

Procedure:


- 1 From the Contacts and Talkgroups window, select the fleet member for whom discreet listen need be done.

Figure 277: Discreet Listen

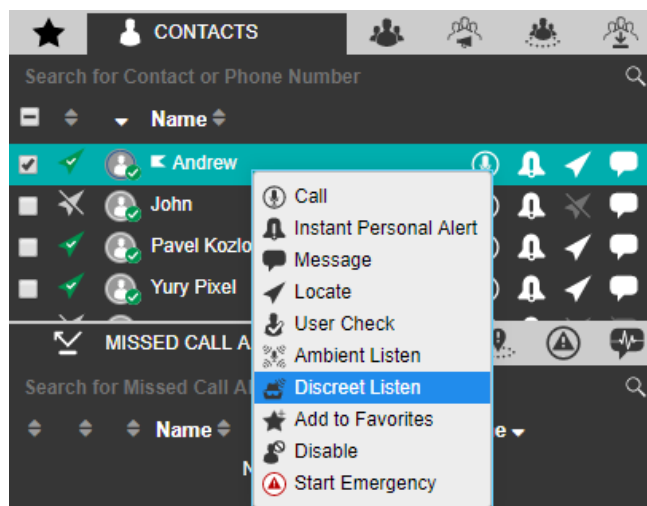

- 2 Right-click and select **Discreet Listen**. A Begin Discreet Listening confirmation pop-up displays.

Figure 278: Discreet Listen Confirmation Pop-up

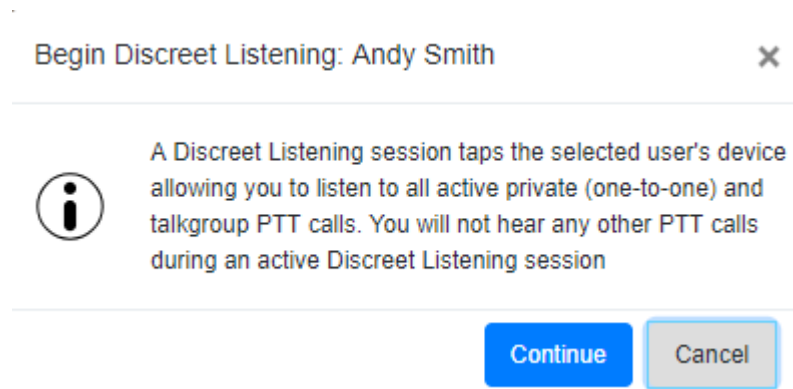


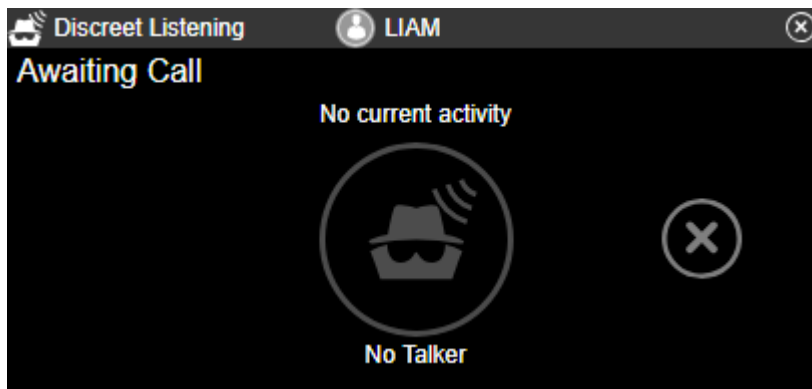
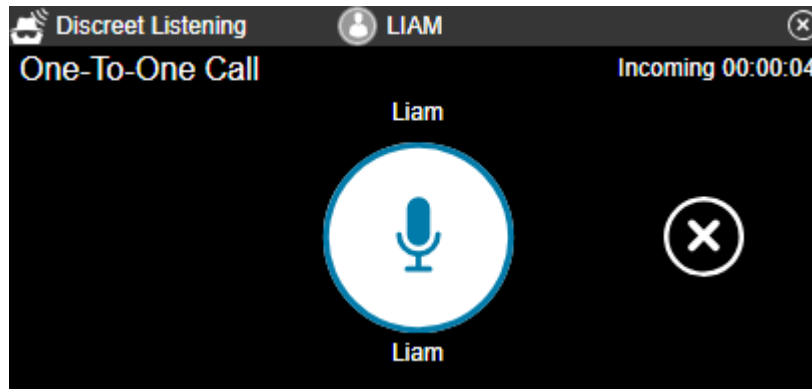
- 3 The PTT icon in the Call Activity window changes to Discreet listen.
- 4 To exit from the ongoing discreet call, click the **Exit** icon in the Call Activity window.
 **NOTICE:** When you exit the ongoing discreet call, the ongoing discreet session in progress does not end. The call activity window returns to awaiting call of discreet listen, but you cannot rejoin the same call. To rejoin the same call, end the ongoing discreet listening session and start a new session.
- 5 To end the discreet listen, click the **Cancel** icon in the Call Activity window.

Figure 279: Discreet Listen- Call Activity Window



If there is any call on the device of the fleet member, then the call timer in the Call activity window starts and conversations are recorded and stored in the Call Logs under the Logs tab. The call timer is not shown if there is no call or the call ends on the device of the fleet member.

Figure 280: Ongoing call- Discreet Listen



21.4

Remote Disable or Enable Fleet Member


You can disable or enable the device of the fleet member remotely. Once disabled, you cannot make PTT calls and send message to that fleet member. The fleet member shows as disabled in the Dispatch. If needed, you can enable the fleet member later.

When and where to use: To disable the device of the fleet member remotely, follow these steps:

Procedure:


- 1 From the Contacts and Talkgroups window, select the fleet member whose device need be disabled.

Figure 281: Disable Fleet member Device

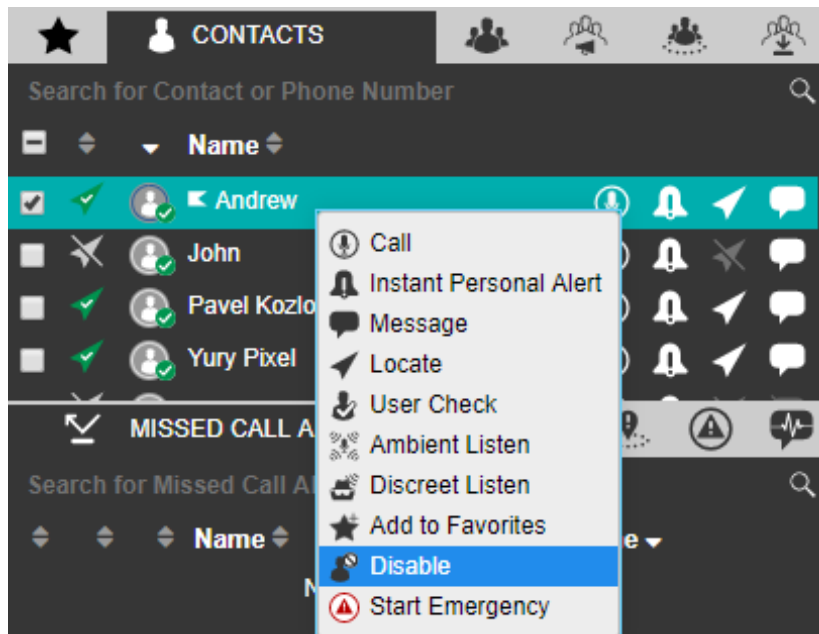

- 2 Right-click and select **Disable**. A Disable User confirmation pop-up displays.

Figure 282: Disable Fleet Member Device Confirmation Pop-up

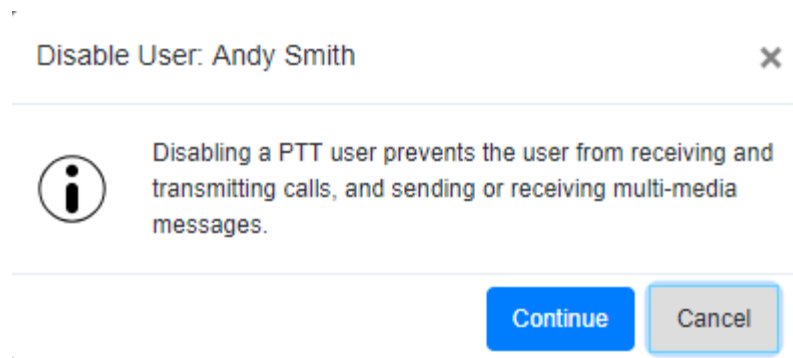

- Click **Continue** to Disable.
- Click **Cancel** to cancel the action.

Chapter 22

Real-Time Presence

Real-Time Presence allows you to quickly know whether the fleet member is Online, busy (Do Not Disturb), or offline. Only fleet members with presence set to Online receive PTT calls. The Presence Indicator displays next to the name of each of your contacts.


Likewise, you can change your availability on Dispatch to Do Not Disturb and Online.

22.1

Presence of the PTT Contact or Fleet Member

You can see the presence of a contact in the contacts list indicated by an icon next to name of the contact. The following screen shot shows an example:

Figure 283: Contact Presence

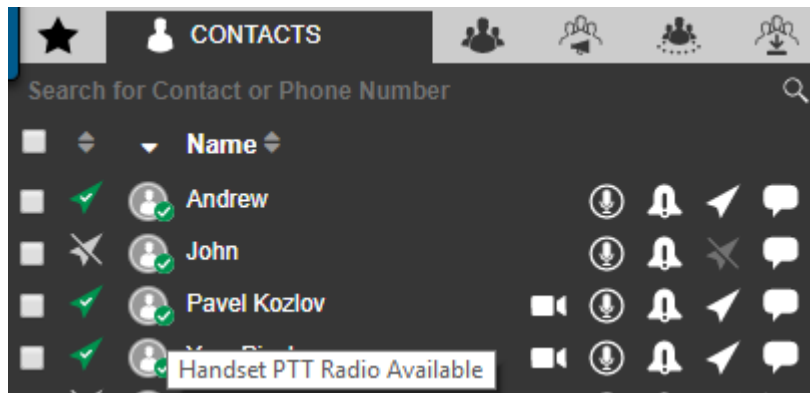

Online

The PTT contact is logged in to the PTT application and ready to receive PTT calls and Instant Personal Alerts. It is shown with the green presence icon.

Do Not Disturb (DND)

The PTT contact is logged in to the PTT application but does not want to be disturbed with incoming PTT calls. It is shown with the red presence icon.

If you try to call a contact with the DND status, a voice message fall back occurs. An error message displays if you hold the PTT button less than the configured duration.

Figure 284: Voice Message Fall Back Error Message



You can still send an Instant Personal Alert to a DND contact.

Offline

The PTT contact is signed out from the PTT application and cannot receive PTT calls and alerts. It is shown with a gray presence icon.



NOTICE: If the missed calls and messages received from the phone number which is not present in your contact list then the presence status of this phone number is shown as offline.


You can see the client type along with the previously mentioned presence status when you mouse hover on the icon next to name of the contact name.

22.2

Your Presence

Your own presence is indicated on the Dispatch screen as shown.

 Figure 285: Self-presence

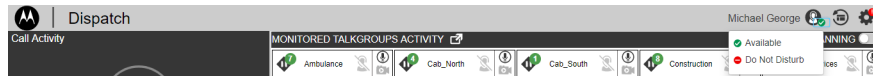

Online


You are signed in to the Dispatch and are ready to receive calls, Instant Personal Alerts (IPA), and Missed Call alerts. It is shown with a green presence icon.

Do Not Disturb (DND)

You are signed in to the Dispatch, but do not want to be disturbed with incoming PTT calls. It is shown with a red presence icon.

You can initiate PTT calls and receive IPAs from fleet members, but you are allowed to send IPAs to fleet members. If you try to send IPA while in a DND state, you see the following message:

Figure 286: Outgoing IPA Error when in DND State

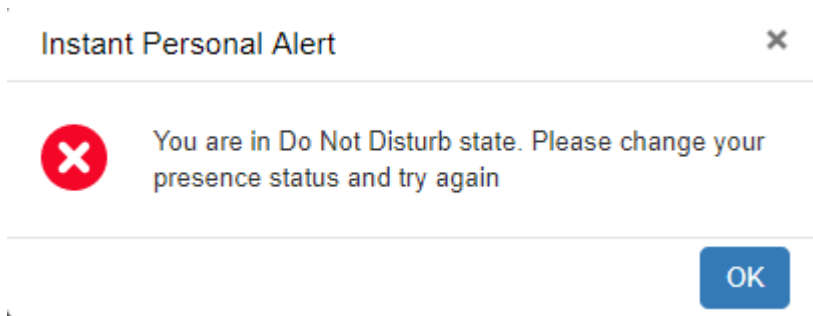

If your presence is set to Do Not Disturb, then you do not receive a one-to-one call since the client cannot call to you. However, you can still receive IPAs and missed call alerts. You can make outgoing calls, rejoin calls, send, and receive secured message while your presence is set to DND, but you cannot send IPAs.

Chapter 23

Using Accessories

The Dispatch supports following audio devices and floor control devices.

1 Input Devices

- a External Microphone (1/8" jack)
- b Headset with PTT (USB)
- c Internal Microphone (supported by system hardware)

2 Output Devices


- a External Speakers (USB, 1/8" jack)
- b Headset with PTT (USB)
- c Internal Speakers (supported by system hardware)

23.1

Notification Message on Connection

The notification message on an accessory connection or removal displays as shown.

 Figure 287: Audio Device notifications

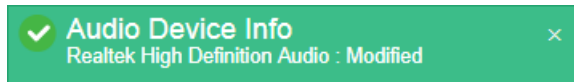

The default device is set based on the order you plug in. You can change the audio input or output device from the Devices section of the Settings tab. If there is a change in device, a notification message appears indicating that the preferred device is not present, and the available device is used as a default device.



NOTICE: If you do not see the notification, enable or disable the accessory setting from your PC— Control Panel—hardware and Sound—Recording tab. Changes made to default audio Input / Output devices during a call take effect after the current call ends.

23.2

Accessory Connection and Disconnection Notifications on a Different Operating System

Table 7: Accessory Connection/Disconnection Notification

Operating System	Accessory device	While Plugged-in	While Not Plugged-in
Windows 8.1 Desktop	Speaker with 1/8" jack	Notification Displays	Notification Displays
	External Microphone 1/8" jack	Notification Displays	Notification Displays
	USB Audio	Notification Displays	Notification Displays
	PTT floor control Device (USB)	Notification Displays	Notification Displays

Operating System	Accessory device	While Plugged-in	While Not Plugged-in
Windows 8.1 Laptop	Speaker with 1/8" jack	No Notification	No Notification
	External Microphone 1/8" jack	No Notification	No Notification
	USB Audio	Notification Displays	Notification Displays
	PTT floor control Device (USB)	Notification Displays	Notification Displays

23.3

Accessory Specifications

Table 8: Accessory Specification

Item	Part Number	Description
Headset	HW251N	Supra Plus Monaural Wide-band NC
PTT Adapter with Headset Jack	SHS2355-01	USB Push to Talk to H-Series, monaural
Foot pedal/switch	FSSP2646-01	USB PTT Foot switch
Foot Pedal USB	FTT-300	USB PTT Foot switch
Desktop Microphone Assembly	SSP 2753-01	USB Desktop PTT Microphone
Desktop Microphone Assembly	IPT-M180	Wide base Table Microphone
Desktop Microphone Assembly	IST 10722	Buddy Headset Mic (If you configure only as a joystick event device)
Desktop Microphone Assembly	IST 10765	Buddy Desktop Mic (If you configure only as a joystick event device)
Slim™ Microphone/Speaker Station	None	USB Desktop PTT Microphone/Speaker



NOTICE: The Headset HW251N is part of a family of Corded Headsets. Others include the H41N (Over Ear-Single Ear), H81N (Over Ear-Single Ear), H141N (Over Head or Ear- Single Ear), HW261N (Over Head- Dual Ear), HW291N (Over Head or Ear-Single Ear), HW301N (Over Head- Dual Ear). Any of these headsets work with the above PTT Adapter with Headset Jack.

23.4

Using a Desktop Microphone with PTT Button

The Dispatch supports a Desktop microphone or Buddy Desktop Mic with PTT button.

When and where to use: The following are the steps to make a PTT call while using this device.

Procedure:

- 1 Select the Contacts or Talkgroups or Broadcast Groups from the Contacts and Talkgroups window.
- 2 Click the **PTT** call button in the Dispatch.
- 3 To control the floor, push the PTT button on the accessory. When you connect, these devices display under Settings > Devices in the PTT Floor Control field.

Figure 288: Plantronics SSP 2753-01 Desktop PTT Microphone



Figure 289: Buddy Desktop Mic IST 10765 PTT Microphone



The Slim™ Microphone/Speaker Station provides an illuminated PTT button that shows the active transmission and an in-built speaker to listen to the voice.

Figure 290: Slim Microphone/Speaker Station



23.5

Using a Headset

You can use a Plantronics headset or Buddy Desktop Mic through a Plantronics push to talk adapter plugged into your laptop or desktop to initiate PTT calls, floor control, and audio input or output.

Prerequisites:



NOTICE: To control floor operations and call initiation process, select the “Headset for PTT” in at least one of the audio inputs or audio output preference under Devices tab under settings. If you change any preferences of Audio (Input or Output) during an ongoing call, those preference changes are applicable from the next call.

When and where to use: To initiate a call from a Plantronics PTT headset or Buddy Desktop Mic, follow these steps.

Procedure:

- 1 Select the Contacts or Talkgroups or Broadcast Groups from the Contacts and Talkgroups window.
- 2 To initiate a PTT call or for floor control, push the button on the Plantronics PTT Headset or Buddy Desktop Mic accessory or adapter. These devices, when connected are displayed. When you connect, these devices display under Settings > Devices in the PTT Floor Control field.



NOTICE: To call or to control the floor operation from this device, select “Headset with PTT” from either the audio input or audio output drop-down list when connected.

Figure 291: Plantronics Headset for Dispatch



Figure 292: Plantronics Adapters for PTT Headset used in Dispatch

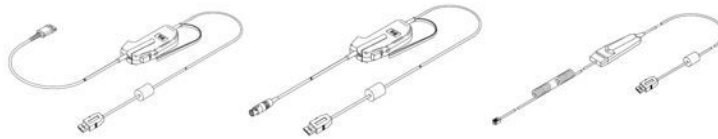


Figure 293: Buddy Desktop Headset Mic IST 10722 for Dispatch



23.6

Using a Wide-base Table Microphone

The Dispatch supports the wide-base table microphone, only as an audio input device for PTT application. You can use the table microphone accessory with other floor control accessories like the PTT headset or Footswitch.

When and where to use: When calling connecting this accessory for audio input purpose, follow these steps:

Procedure:

- 1 Select the Contacts or Talkgroups or Broadcast Groups from the Contacts and Talkgroup window.
- 2 Click the **PTT** call button in the Dispatch.
- 3 Push the PTT switch on other accessories like Foot switch or PTT headset that you connect for floor control to initiate a PTT call to control the floor operation. When you connect, these devices can be viewed under Settings > Devices in the PTT Floor Control field.

The IPT-M180 model microphone connects to the standard microphone input jack on a standard PC sound card and you can configure it as a standard microphone.

Figure 294: IPT-M180Wide base Table Microphone



NOTICE: While connecting an external microphone on your laptop, disable the built-in microphone of the laptop from Control Panel—Hardware and Sound—Sound—Change System Sound—Recording, and enable the external microphone.

23.7

Using a Foot switch

The Dispatch supports Foot Pedal for PTT floor control.

When and where to use: When calling with this accessory connected, follow these steps.

Procedure:

- 1 Select the Contacts or Talkgroups or Broadcast Groups from the Contacts and Talkgroups window.
- 2 Click the **PTT** call button in the Dispatch.
- 3 To initiate a PTT call to floor control operation, push the PTT Foot Pedal on the accessory. When you connect, these devices display under Settings > Devices in the PTT Floor Control field.

Figure 295: Plantronics USB PTT Foot switch for Dispatch



Figure 296: Foot Pedal FTT-300 USB



The Dispatch dynamically recognizes these devices when you connect or remove from the system hardware. A message displays as shown.

Figure 297: Foot Pedal Device Connected and Removed Information



If you unplug an accessory during a call, the behavior is as described here.

- 4 Audio Devices: During a call, if you disconnect the preferred or selected devices, then the audio do not transmit until the current call terminates.
- 5 PTT Devices (Headset with PTT + Foot pedal + table microphone with PTT button): During a call, if you acquire the floor and disconnect the device, then the floor releases. You can acquire the floor later with another PTT accessory or by using a mouse.



NOTICE: If the accessories connected to the Dispatch are idle for some time, the application considers the accessories to be disconnected. To troubleshoot this problem, refer to [User Interface Issues on page 258](#) chapter.

Chapter 24

Logs

Dispatch provides the logs information about dispatcher recent activity including alerts, PTT calls, audit logs, geofence logs, and audio recordings of recorded calls and location information reports.

24.1

Alert Logs

Alert logs provide detailed information about all alerts. To view Alert Logs, click the **Logs** tab and then click the **Alert Logs** sub-tab within it.

Figure 298: Alert Logs

The screenshot shows the 'Alert Logs' interface. At the top, there are navigation tabs: MAP, MESSAGES, LOCATION HISTORY, GEOFENCES, AREA TALKGROUPS, and LOGS. Under the LOGS tab, there are sub-tabs: ALERT LOGS (selected), CALL LOGS, VIDEO LOGS, GEOFENCE LOGS, AUDIT LOGS, and LOCATION REPORTS. Below the sub-tabs, there are filter fields: From Date (07/18/2019), To Date (07/25/2019), Name, Member, Direction (Both), Type (Any), and Status. There are also search, refresh, and export icons. The main table displays a list of alert logs with columns for Name, Phone Number, Time, and Status. The first four rows show alerts from 'Andrew' with phone number 879-274-0208, all with a status of 'Not Applicable'. The fifth row, highlighted in teal, shows an alert from 'Cab_South' with phone number 879-274-0208, time 07/24/19 04:05:36 PM, and status '100 Police'. Below the table, there is a detailed view for the selected alert: Status: 100Police, Description: Call the police, and Near Location: 12.99999141693177. At the bottom, it says 'showing 1 to 12 of 12'.

Name	Phone Number	Time	Status
Andrew	879-274-0208	07/25/19 10:27:11 AM	Not Applicable
Andrew	879-274-0208	07/25/19 10:27:10 AM	Not Applicable
Andrew	879-274-0208	07/25/19 10:26:31 AM	Not Applicable
Andrew	879-274-0208	07/25/19 10:26:31 AM	Not Applicable
Cab_South	879-274-0208	07/24/19 04:05:36 PM	100 Police

You can filter the alert logs on the following fields.

- **Direction**
Outgoing or incoming alert.
- **Type**
Instant Personal Alert, one-to-one missed call, quick group missed call, talkgroup missed call, broadcast missed call, my talkgroup missed call, area talkgroup missed call, emergency one-to-one alert, emergency talkgroup alert, status alerts, one-to-one missed video stream, and talkgroup missed video stream.
- **Name**
Filter by the name of the fleet member.
- **Member**
Filter by phone number or name of the initiator of the alert.
- **From Date**
Allows filtering from a specific date.
- **To Date**
Allows filtering to a specific date. You can filter on a maximum of 30 days of data.

You can click the **Expand** icon next to the status alert to view the details of the status alert. The details include status, description of the status message and near location of that member.

To view entries in logs the user sets up the filter and click the **Search** icon. You can use the previous and next buttons to navigate through the pages.

Click one of the following icons:

- **Search** icon to find the log information after applying your filters.
- **Reset** icon to filter and re-enter the search information again.
- **Export** icon to export the alert logs to the excel file format.



NOTICE: Alert logs are local to your Dispatch only. The Next and Previous buttons are highlighted only when there are more than 50 entries in the Alert log window. Dispatch automatically refreshes the logs to include the recent activity whenever there is a new alert.

24.2

Call Logs

Call logs provide call history including recordings. To view the Call Logs, click the **Logs** tab and then click the Call Logs sub-tab within it.

Figure 299: Call Logs

Name	Member	Initiator Or Target User	Duration	Time
Andrew	370-692-4013	999050000102	00:00:23	07/19/19 03:40:17 PM
Construction	370-692-4013	370-692-4013	00:00:10	07/19/19 03:37:55 PM
Cab_West	370-692-4013	370-692-4013	00:00:06	07/19/19 03:37:37 PM
Cab_South	370-692-4013	370-692-4013	00:00:10	07/19/19 03:37:15 PM
Cab_East	370-692-4013	370-692-4013	00:00:08	07/19/19 03:36:43 PM

You can filter the Call logs using the following fields:

- **Direction**
Outgoing or incoming call.
- **Type**
One-to-one call, quick group call, talkgroup call, broadcast call, my talkgroup call, area talkgroup call, or listening.
- **Name**
Filter by name of the talkgroup.
- **From Date**
Allows filtering from a specific date.
- **To Date**

Allows filtering to a specific date. You can filter on a maximum of 30 days of data. To view entries in the call logs the user sets up the filter and click the **Search** icon.

- **Member**
Filter by phone number or name of the initiator of the call.
- **Initiator or Target User**
Filter by the initiator of the call or target user for whom the emergency has been initiated.
- **Category**
Allows filtering by ambient listening, discreet listening, emergency call, or normal call.

Click one of the following icons:

- **Search** icon to search for the log information.
- **Reset** icon and re-enter the search information again.
- **Export** icon to export the call logs to the excel file format.
- **Export All** icon to export all the call recordings.

Refer to [Playing Back the recorded calls on page 151](#) for details on how to play a recorded call.

You are shown with 50 records at a time. You can use the previous and next buttons to navigate through the pages. The initiator column shows the name or phone number of the member who initiated the call. For broadcast call logs, you can see a detailed delivery report by hovering the mouse on the Broadcast icon.

Figure 300: Broadcast Call Delivery Report



NOTICE: Call logs are local to your Dispatch only. The Next and Previous buttons are highlighted only when there are more than 50 entries in the Call log window. Dispatch automatically refreshes the call logs to include the recent activities whenever there is an activity update.

24.3

Video Logs

Video logs contains incoming (video push) and outgoing (video pull) video call history. To view the Video Logs, click the **Logs** tab and then click the **Video Logs** sub-tab within it.

Figure 301: Video Logs

The screenshot shows the 'VIDEO LOGS' tab selected. It includes filter fields for 'From Date' (06/15/2018), 'To Date' (06/27/2018), 'Name', 'Member', 'Session Method' (Both), and 'Type' (Any). There are also icons for search, reset, export to Excel, and print. Below the filters is a table of sessions with columns: Name, Initiator, Member, Target User, Duration, and Time. The table lists several sessions, including one for 'Group4' initiated by 'Mohan K'. Below the table is a detailed view for 'Group5' with fields for System ID, Email ID, and Near Location. At the bottom, there is a 'Sessions #' table with columns for Sessions #, Broadcaster, Start Time, End Time, and Duration.

Sessions #	Broadcaster	Start Time	End Time	Duration
1	Lance S	06/22/18 06:15:00 PM	06/22/18 06:16:00 PM	00:01:00
2	Simon	06/22/18 06:16:01 PM	06/22/18 06:17:00 PM	00:00:59
3	Mike	06/22/18 06:17:03 PM	06/22/18 06:19:00 PM	00:01:57

You can filter the video logs using the following fields:

- **From date**
Outgoing or incoming video call.
- **To Date**
Allows filtering to a specific date. You can filter on a maximum of 30 days of data. To view entries in video logs the user sets up the filter and click the **Search** icon.
- **Name**
Filter by the name of the member or talkgroup.
- **Member**
Filter by phone number or initiator name of the call.
- **Session Method**
Filter by video push or video pull or both.
- **Target User**
Filter by the initiator of the call or target user for whom the video streaming has been initiated.
- **Type**
Filter by one-to-one call, talkgroup call, or listening.

To view entries in logs the user sets up the filter and click the **Search** icon. You can use the previous and next buttons to navigate through the pages.

Click one of the following icons:

- **Search** icon to find the log information after applying your filters.
- **Reset** the filter to re-enter the search information again.
- **Export** icon to export the alert logs to the excel file format.
- **Export All** icon to export all the call recordings.

Click the **Expand** icon next to the log to view the details of that video call. The details shown are System ID, Email ID and Near Location of the talkgroup member.

24.4

Audit Logs

Audit logs contains various administration, operation, and network events that have occurs on Dispatch.

- **Administration Log**
The administration logs mainly contain the triggers or events received from the CAT. Few examples for the administration log events are the addition, deletion, or renaming of contact or talkgroup, addition, or deletion or renaming of a member in a talkgroup.
- **Network Log**
Network logs contain all network events that occur in your Dispatch. Few examples for the network log events are network down or up, map service down or up.
- **Operation log**
Operation logs contain the events other than call and alert activity from the user. Few examples for the operation log events are dispatcher presence status change, sign in success, details of the emergency declaration and failure.

Figure 302: Audit Logs

The screenshot shows the 'AUDIT LOGS' section of a software interface. At the top, there are navigation tabs: MAP, MESSAGES, LOCATION HISTORY, GEOFENCES, AREA TALKGROUPS, and LOGS. Under 'LOGS', there are sub-tabs: ALERT LOGS, CALL LOGS, VIDEO LOGS, GEOFENCE LOGS, AUDIT LOGS (selected), and LOCATION REPORTS. Below the tabs are filter fields: 'From Date' (07/18/2019), 'To Date' (07/25/2019), 'Type' (Any), and 'Description'. There are also search, refresh, and export icons. The main area displays a table of log entries:

Description	Timestamp
Sign in Success	07/25/19 10:21:16 AM
Network Up	07/24/19 04:46:09 PM
Network Down	07/24/19 04:46:05 PM
Network Down	07/24/19 04:45:37 PM
Network Up	07/24/19 01:48:14 PM
Network Up	07/24/19 01:48:12 PM
Network Down	07/24/19 01:47:06 PM
Network Down	07/24/19 01:47:04 PM
Emergency for the member Andrew terminating on Ambulance is ended by Andrew	07/24/19 12:32:41 PM

At the bottom, it says 'showing 1 to 25 of 63' and 'Page 1 of 3'.

You can filter the audit logs using the following fields:

- **Type**
Administration, Operation, or Network.
- **Description**
Filter by the description of the log.
- **From Date**
Allows filtering from a specific date.
- **To Date**
Allows filtering to a specific date. You can filter on a maximum of 30 days of data. To view entries in the call logs the user sets up the filter and click the **Search** icon.

Click one of the following icons:

- **Search** icon to search for the log information.
- **Reset** icon to re-enter the search information again.
- **Export** icon to export the call logs to the excel file format.



NOTICE: The Next and Previous buttons are highlighted only when there are more than 50 entries in the Audit log window. Dispatch automatically refreshes the audit logs to include the recent activities whenever there is an activity update.

24.5

Geofence Logs

Geofence logs provide logs for the fleet members who have crossed the fence that you create. To view the Geofence Logs, click the **Logstab** and then click the Geofence Logs sub-tab within it. Clicking **Snapshot** icon shows the location of the fleet member concerning to the fence associated with the talkgroup, when the log was created.

Figure 303: Geofence Logs

Talkgroup Name	Fence Name	Member Name	Phone Number	Event
Geofence	D4 sanity	Rejin ios	955-000-5375	
Geofence	D4 sanity	rej1	984-506-7001	
Geofence	D4 sanity	rej1	984-506-7001	

You can filter the Geofence logs on the following fields:

- **Event**
Filter by Outgoing or Incoming concerning to the fence.
- **Member Name**
Search by name of the fleet member.
- **Talkgroup Name**
Search by name of the talkgroup.
- **Fence Name**
Search by name of the fence.
- **From Date**
Allows filtering from a specific date.
- **To Date**
Allows filtering to a specific date. You can filter on a maximum of 30 days of data.

To view entries in logs the user sets up the filter and click the **Search** icon. You can use the previous and next buttons to navigate through the pages.

Click one of the following icons:

- **Search** to find the log information after applying your filters.
- **Reset** to re-enter the filters and search information again.
- **Export** to export the geofence logs to the excel file format.



NOTICE: The snapshot (path traversed by the fleet member) data does not export when you export the logs.

24.6

Location Report

The Location Information report provides information about the location of the fleet member at a specified time.

When and where to use: To generate the location information report, follow these steps:

Procedure:

- 1 Select the **Location Report** tab from the Logs tab.
- 2 Select the duration of the report from the From Date and To Date.

Figure 304: Location Report

MAP	MESSAGES	LOCATION HISTORY	GEOFENCES	AREA TALKGROUPS	LOGS
Alert Logs	Call Logs	Geofence Logs	Audit Logs	Location Reports	
From Date	To Date				
01/01/2019	01/30/2019				

- 3 To generate the location information report, click the **Excel** icon.



NOTICE: You can generate the location report for a difference of maximum 30 days. The Location Reports tab is visible only when the Location History feature is enabled for you.

The columns in the report provide information about the following:

- Name of the fleet member
- Phone Number of the fleet member
- Presence status of the fleet member (Available or Offline)
- Latitude of the fleet member location
- Longitude of the fleet member location
- Time and Date of the published location

Figure 305: Location Information Report

	A	B	C	D
1	Location Reports			
2	Search Criteria			
3	From Date	27-08-2018 00:00	To Date	25-09-2018 23:59
4				
5	Phone Number	Latitude	Longitude	Time
6	988-777-2229	77.62181944	13.04556944	17-09-2018 15:08
7	988-777-2229	77.62183056	13.04558611	17-09-2018 15:56
8	988-777-2229	77.62183056	13.04558611	17-09-2018 15:56
9	988-777-2229	77.62184444	13.04558611	17-09-2018 15:57
10	988-777-2229	77.62184444	13.04558611	17-09-2018 15:57
11	988-777-2229	77.62184444	13.04558611	17-09-2018 15:57
12	988-777-2229	77.62184444	13.04565833	17-09-2018 15:57
13	988-777-2229	77.62183889	13.04569444	17-09-2018 15:57
14	988-777-2229	77.62183889	13.04569444	17-09-2018 15:57
15	988-777-2229	77.62183333	13.04572222	17-09-2018 15:57
16	988-777-2229	77.62186111	13.04554722	17-09-2018 15:57
17	988-777-2229	77.62186111	13.04553333	17-09-2018 15:58
18	988-777-2229	77.62183889	13.04556944	17-09-2018 15:58
19	988-777-2229	77.62183889	13.04556944	17-09-2018 15:58
20	988-777-2229	77.62182778	13.04558333	17-09-2018 15:58
21	988-777-2229	77.621825	13.04556389	17-09-2018 15:58
22	988-777-2229	77.621825	13.04556389	17-09-2018 15:58
23	988-777-2229	77.621825	13.04556389	17-09-2018 15:58
24	988-777-2229	77.621825	13.04556389	17-09-2018 15:59
25	988-777-2229	77.621875	13.04558056	17-09-2018 16:32
26	988-777-2229	77.62188889	13.04556111	17-09-2018 16:32
27	988-777-2229	77.62189167	13.04555278	17-09-2018 16:32
28	988-777-2229	77.62184722	13.04558889	17-09-2018 16:32
		224-450-0017_LocationReport_201		(+)

Chapter 25

Backing up


The backup action ensures that the call recordings and messages including attachments and their meta data (details) are saved for the future reference. You can choose to take necessary action whenever a backup pending message displays. In the following conditions, a backup confirmation message displays:

When and where to use: To back up call recordings and messages, follow these steps:

Procedure:


- 1 If there are any call recordings or messages that you have not at all taken the backup, then a pop-up message displays every time you sign in.

Figure 306: Backup notification- Sign-in

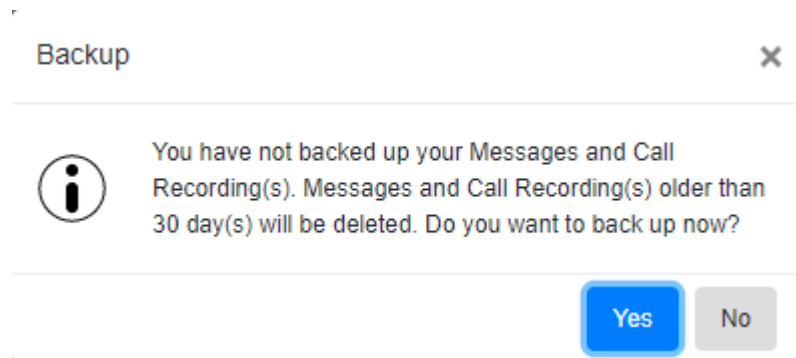


- Click **Yes** to take backup.
 - Click **No** to cancel the action.
- 2 If the backup is due and you have not backed up, then a pop-up message displays on the sign in.

Figure 307: Backup notification

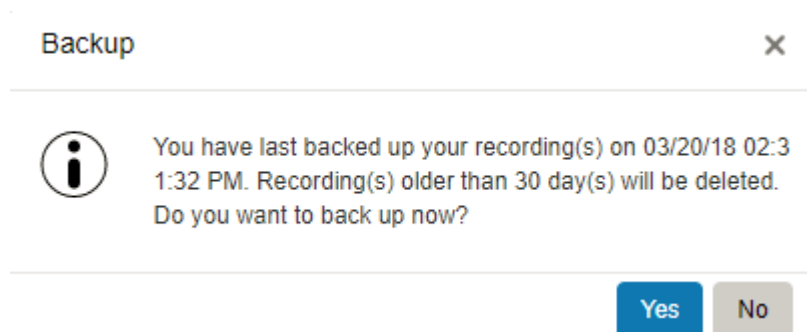


- Click **Yes** to take backup.
 - Click **No** to cancel the backup action.
- 3 Clicking **Yes** starts the backup and the backup file downloads to the browser downloads. A confirmation message displays as shown to make sure that the backup file is downloaded to the download folder.

Figure 308: Backup file download - Confirmation message

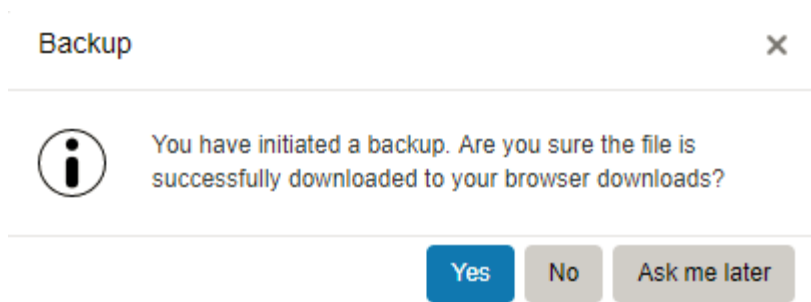

- Click **Yes** to confirm that the download is successful.
- Clicking **No** confirms that the backup is unsuccessful.
- Click **Ask me later** which then pops-up the confirmation message until you confirm that the download completes.

The recordings and messages older than the configured period is deleted and a reminder through a periodic toast message displays until you take the successful backup.

 **NOTICE:** The backup interval and periodic reminder notification for backup depends on the server configuration.


In the header, a warning icon displays next to the Settings, if you do not take the backup of the call records and secured messages. The last backup date, backup due date, and the configured backup interval show under the Settings>General. The dispatcher can take the backup anytime from the Settings. The backup file contains the details after the last backed up date. The backup file, which is in ZIP format, contains the details of calls and secured messages. A link to the file (except text message and location) is available in HTML format.

Figure 309: Backup HTML file

Dispatch (Name: Jack; email: jack.guna@motorolasolutions.com; MDN: 919916142494)							
Exported recordings at 03/26/18 12:14:57 PM (UTC + 05:30)							
Number of records: 14							
Name	Time	Direction	Phone Number	Duration	Type	Delivery Report	Audio File
Cab_East	03/26/18 10:12:18 AM	Outgoing	912222201522 912222220608 918050533081 919066000450 919902844299 919880066322 917090546777	00:00:32	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-12-18_0.mp3
Cab_East	03/26/18 10:12:56 AM	Outgoing	912222201522 912222220608 918050533081 919066000450 919902844299 919880066322 917090546777	00:00:03	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-12-56_0.mp3
Michael George	03/26/18 10:14:44 AM	Incoming	917090546777	00:00:00	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-14-44_0.mp3
Michael George	03/26/18 10:14:44 AM	Incoming	917090546777	0	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-14-44_0.mp3
Cab_South	03/26/18 10:20:56 AM	Outgoing	912222201522 919591605500 919902844299 912222201462 919880066322 917090546777	00:00:04	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_10-20-56_0.mp3
Robert_Handset	03/26/18 10:31:22 AM	Outgoing	912525001002	00:00:07	One-to-one call	Not Available	Recording_Export_919916142494_03-26-18_10-31-22_0.mp3
Cab_South	03/26/18 12:01:29 PM	Incoming	912222201462 912222201522 917090546777 919591605500 919880066322 919902844299	00:00:37	Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-01-29_0.mp3
Fire Control	03/26/18 12:09:46 PM	Outgoing	919916142494	00:00:07	Broadcast call	Missed Call: 2 Offline: 0 Rejected: 0 Successful Delivery: 1 Total: 3 Unavailable: 0	Recording_Export_919916142494_03-26-18_12-09-46_0.mp3
Talkgroup75	03/26/18 12:10:00 PM	Outgoing	919066000339 919066000362 9190000112233	00:00:02	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-10-00_0.mp3
Cab Services	03/26/18 12:10:34 PM	Outgoing	9190000112233 919066000339 919066000362	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-10-34_0.mp3
Cab Services	03/26/18 12:11:49 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:06	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-11-49_0.mp3
Cab Services	03/26/18 12:12:02 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-12-02_0.mp3
Cab Services	03/26/18 12:12:18 PM	Outgoing	9190000112233 919066000339 919066000362 919880066322	00:00:07	My Talkgroup call	Not Available	Recording_Export_919916142494_03-26-18_12-12-18_0.mp3

The backup file downloads to the download folder configured on the web browser. For more details, refer to [General on page 242](#) in the [Settings on page 242](#) section of this document.

Figure 310: Backup Now - Settings

Last Backup date:	03/12/18 02:32:21 PM
Backup due date:	03/13/18 02:32:21 PM 
Backup Interval:	1 Day(s)

[Backup Now](#)




NOTICE: If there is an ongoing backup of recording or secured messages and you sign out from the Dispatch, then a cancellation confirmation message appears. Selecting Continue signs out the Dispatch and cancels the backup.

Chapter 26

Settings

Dispatch provides several Settings that you can configure as per your need. Click the **Settings** icon from the Setting in the header of the Dispatch. Select the individual tabs to view or modify the appropriate setting options, which are described below.

Figure 311: Dispatch Global Settings

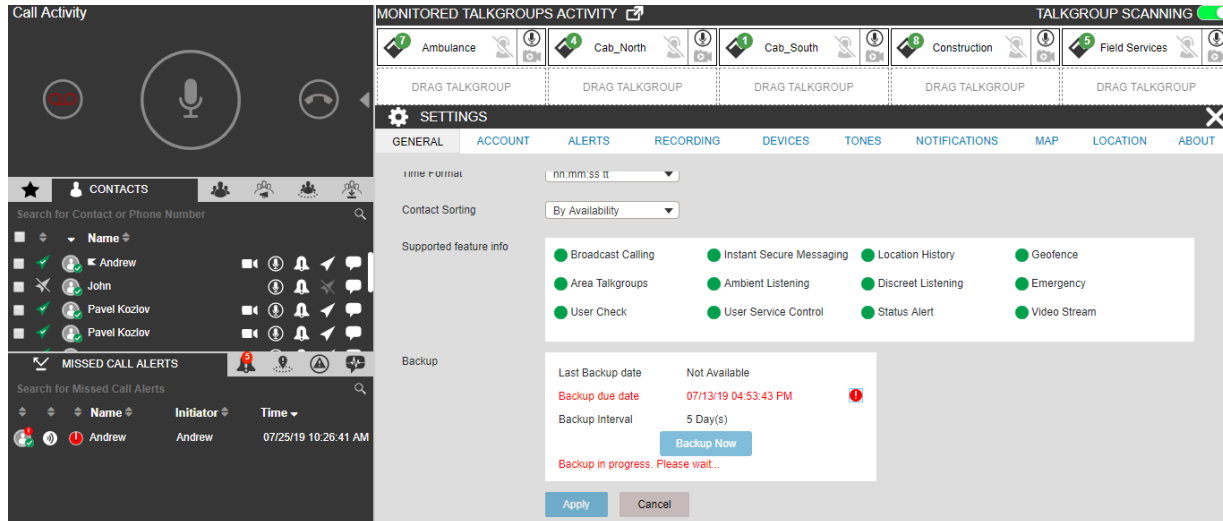


26.1

General

Allows you to configure the following settings options.


- **Date Format**
Using this setting, you can change how the date displays on the Dispatch. Supported Date formats are MM/dd/yy and dd/MM/yy.
- **Time Format**
Using this setting, you can change how the time displays on the Dispatch. Supported Time formats are HH:mm, HH:mm:ss, and HH:mm:ss tt.
- **Language**
Allows you to select the supported language for the Dispatch. Sign out and sign in to the Dispatch once you change the language for the new language to take effect (Default English).
- **Contact Sorting**
Allows you to choose the sorting of the contacts in the Contacts and Talkgroups window. You can select to sort the contacts by Alphabetically or Availability of the Fleet members.
- **Supported feature info**
Allows you to see the list of supported features that are enabled/disabled for the Dispatch UI. The enabled features are marked in Green and disabled features are marked with the Gray. A sample screen is shown here.

Figure 312: Supported Features Info

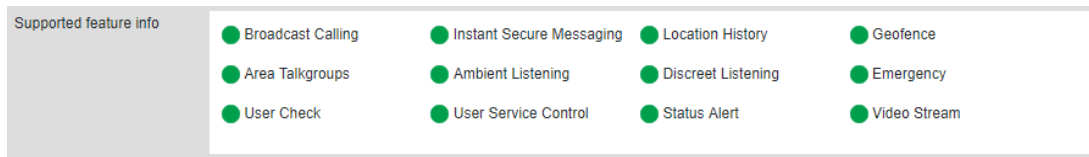

- Call recording backup**
 Allows you to see the last backup date, backup due date, and backup interval (configured in the server). You can click **Backup Now** button to take the backup of the call records manually at any time. A warning icon is next to the backup due date indicates that the backup is not taken successfully before the due date.

Figure 313: Backup Information

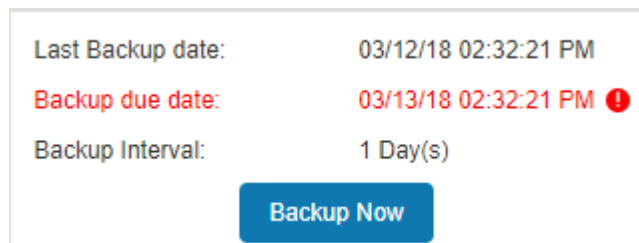

26.2


Account Settings

Allows you to change the password for the sign in the Dispatch.

When and where to use:

To change the sign-in password, follow these steps:

Figure 314: Account Settings

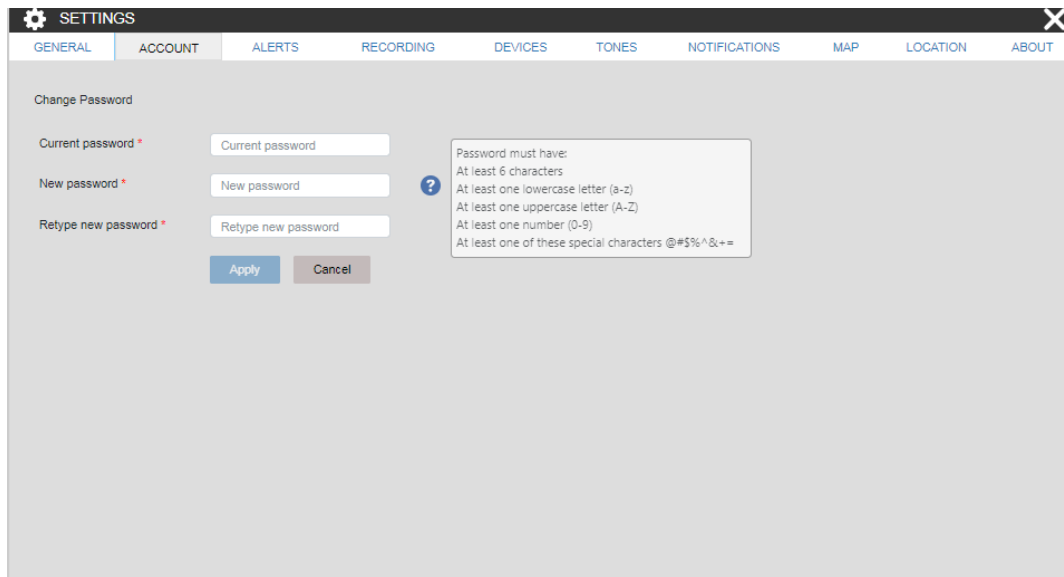

Procedure:

- 1 Enter the old password.
- 2 Enter the new password.
- 3 Re-enter the new password and click the **Apply** button.

26.3

Alert Settings

Specifies how long alerts can stay on the Alerts window. After that time, alerts move to Logs. You can keep the alerts in the alert window from 12 to 24 hours before they move to Logs. You can also choose whether you want to suppress the reminders for Status alerts, Instant Personal Alerts, Missed Call Alerts, and Geofence alert.

Alert Settings is categorized in two sections:

- Generic
- Status

26.3.1

Generic Alerts

The following are the settings, which you can configure for the alert reminder for the unattended IPAs, missed call or geofence alerts:

- **Alert Duration**
This setting allows you to set the expiry period (Minimum: 20 sec, Maximum: 3600 sec, Default: 500 sec) after which it is marked as an expired unattended alert.
- **Alert Frequency**
This setting allows you to set the frequency (Minimum: 15 sec, Maximum: 900 sec, Default: 25 sec) at which periodic tone plays and displays a toast message.
- **Move Alerts Older Than**
This setting allows you to set the period (Minimum: 12 hr, Maximum: 24 hr., Default: 12 hr.) after which the alerts move to alert logs.
- **Repeat Count**
This setting allows you to set the number of times (Minimum: 1 Maximum: Unlimited, Default: 3) the periodic tone plays and displays a toast message.

26.3.2

Status Alerts

The following are the settings, which you can configure for the alert reminder for the unattended status alerts:

- **Move Status Alerts Older Than**
This setting allows you to set the period (Minimum: 12 hr, Maximum: 24 hr., Default: 12 hr.) after which the alerts are moved to alert logs.
- **Status Alert Duration**
This setting allows you to set the expiry period (Minimum: 20 sec, Maximum: 3600 sec, Default: 500 sec) after which it is marked as an expired unattended alert.
- **Status Alert Frequency**
This setting allows you to set the frequency (Minimum: 15 sec, Maximum: 900 sec, Default: 25 sec) at which periodic tone plays and displays a toast message.
- **Status Alert Repeat Count**
This setting allows you to set the number of times (Minimum: 1 Maximum: Unlimited, Default: 3) the periodic tone plays and displays a toast message.
- **Display status alert list under alerts**
This setting allows you to set the details which you want to see for each status alerts. You can select one of the following from the drop-down:
 - With short message only

- With status code only
- With status code and short message

Figure 315: Alert Settings

The screenshot shows the 'Alerts' settings page. It features two columns of settings: 'Generic Alerts' and 'Status Alerts'. Each column includes fields for 'Move Alerts Older Than (Hours)', 'Alert Reminder', 'Alert Duration (Seconds)', 'Alert Frequency (Seconds)', and 'Repeat Count'. The 'Status Alerts' column also includes a 'Display status alert list under alerts' dropdown menu. The 'Apply' button is highlighted in blue.


26.4

Recording Settings

Allows you to choose your recording settings using the following options.

- **Recording Type**
Using this setting, you can change the call recording to either manual or full session. For more information, refer to the [Record Manually on page 150](#) and [Record Always on page 150](#) sections of this document.
- **Export Type**
Using this setting, you can change the recording file type that you save. You can save the recording file type as MP3.
- **File Name**
Using this setting, you can change where to position the 'Recording' word in the name of the backup file you download. You can select either at the start (Prefix with) or at the end (Suffix with) of the file name. You can change the name of the prefix and suffix word.

Figure 316: Recording Settings

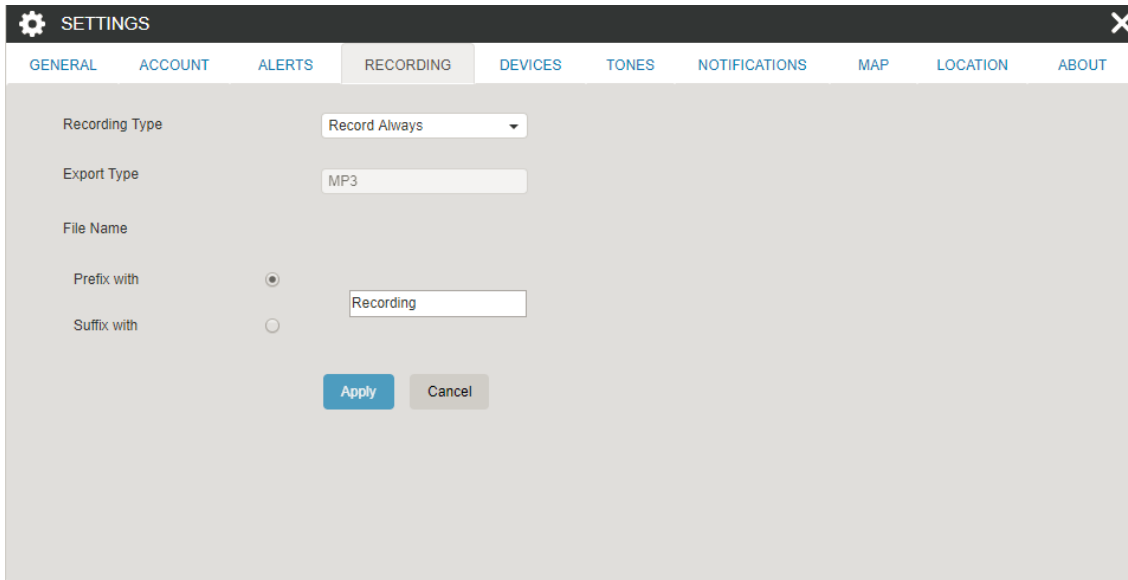


26.5

Devices Settings

Using the device settings, you can select the device used to call and control the PTT floor using the supported accessories. For more information, refer to the [Accessory Specifications on page 225](#) section of this document.

Figure 317: Device Settings

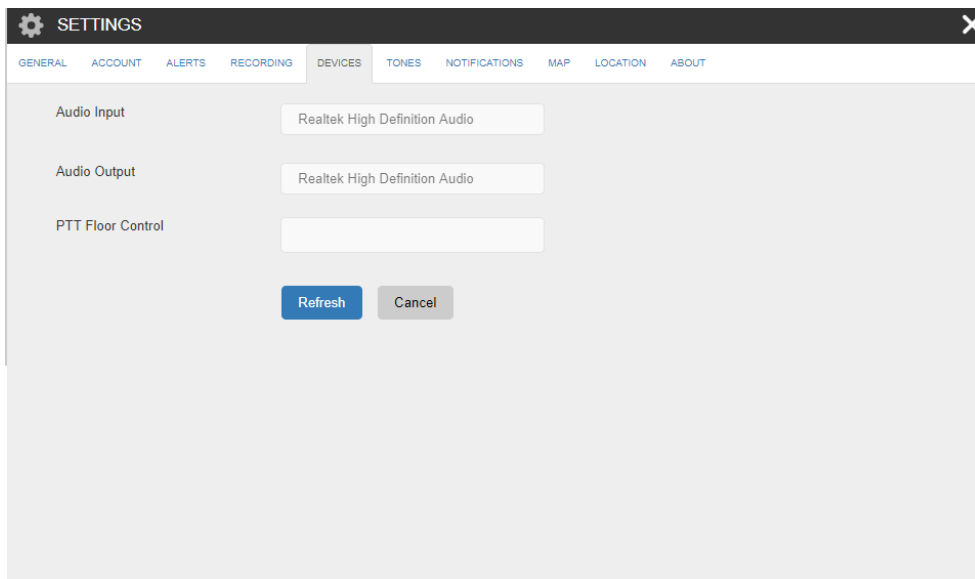


26.6

Tones

This setting allows you to enable or disable call tones and other tones. It also enables you to select a specific tone to be played for Instant Personal Alerts, message, voice message, geofence, and missed calls. The following tone choices are available.

- **Geofence Alert Tones**
 Allows you to select the tone you want to hear for a geofence alert. You can also choose not to play any tone for the for geofence alerts.
- **Instant Personal Alert Tone**
 Allows you to select the tone you want to hear for an Instant Personal Alert. You can also choose not to play any tone for the instant personal alerts.
- **Missed Call Alert Tone**
 Allows you to select the tone you want to hear for a missed call alert. You can also choose not to play any tone for the missed call alerts.
- **Message Alert**
 Allows you to select the tone you want to hear for a message. You can also choose not to play any tone for message that display from the “Enable other tones”.
- **Voice Message Talk Tone**
 Allows you to select the tone you want to hear for a voice message. You can also choose not to play any tone for the voice message talks.
- **Emergency Alert**
 Allows you to select the tone you want to hear for emergency alert. You can also choose not to play any tone for the emergency alerts.
- **Status Alert**
 Allows you to select the tone you want to hear for the status alert. You can also choose not to play any tone for the status alerts.

Figure 318: Tones Settings

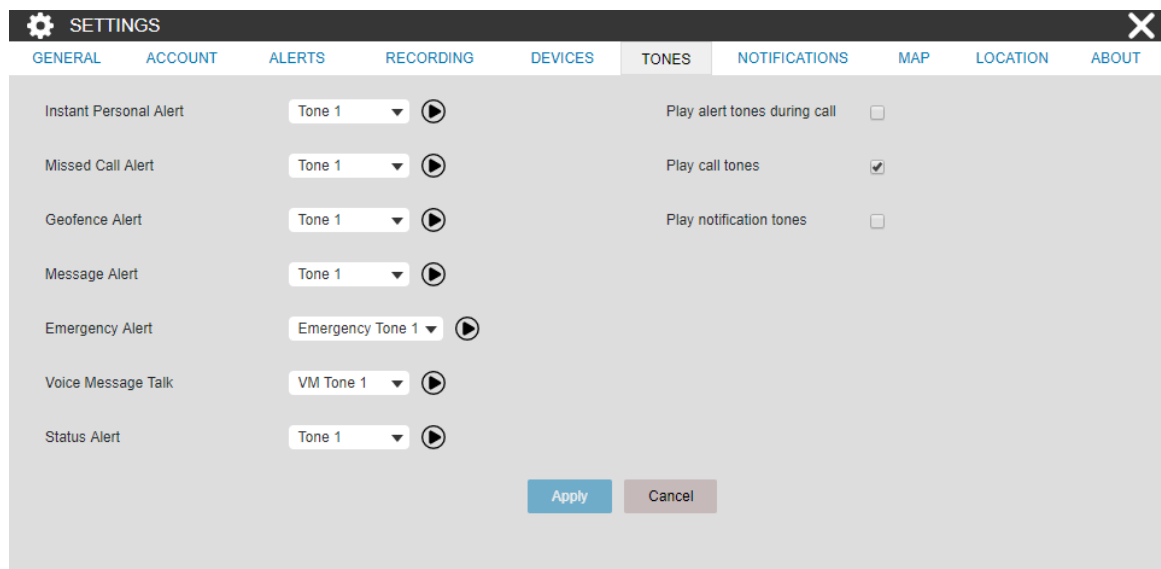

You can configure whether the tones must be played for a message, geofence, IPA, or missed call alerts when you are in an active call. By default, tone is set to disabled. With the setting disabled, you do not receive audible tones for IPA or missed call alerts and alerts are shown only in the alerts window.

26.7

Notifications


This setting allows you to enable or disable the notifications, which show if there are alerts and incoming messages. By using this option, you can either enable or disable the desktop notifications for all incoming calls, alerts, alerts reminders, and incoming messages if the Dispatch browser is in minimized mode or not on the active tab. You can clear or select the check boxes and apply to disable or enable the desktop notifications.

You can select whether the visual toast message show for messaging, geofence, IPA, emergency, status alert, and Missed call. You can clear or select the check boxes to disable or enable the visual toast message.

- **Initial Notifications for Geofence Members**

- Allows you to select whether the notifications are sent to fleet member when the geofence is initially enabled for the talkgroup. To enable initial Notifications for Geofence Members, select the check box “Notify members before notifying me” to notify the fleet members before you, when you initially enable the fence for that talkgroup. Depend on the selection from the drop-down, the initial notifications are sent. You can select from the options:
 - Members outside the fence
 - Members inside the fence
 - Member inside and outside the fence.

Figure 319: Notification Settings

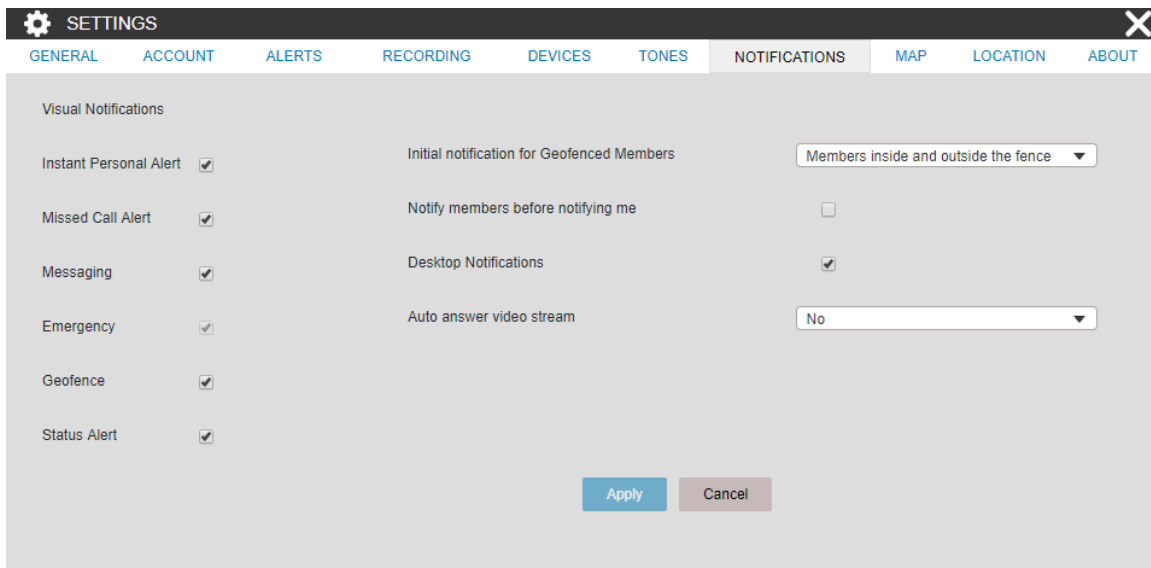

26.8

Map Settings


This setting allows you to choose a color for contacts and talkgroups that display on the map. You can choose a color for a contact, a talkgroup, and members belonging to multiple talkgroups. The chosen color push pin for the selected contact or talkgroup displays on the map when you locate a specific contact or talkgroup on the map.

When and where to use: To set a color, follow these steps:

Procedure:


- 1 Click the Default Color Setting option in Settings.

Figure 320: Map Settings

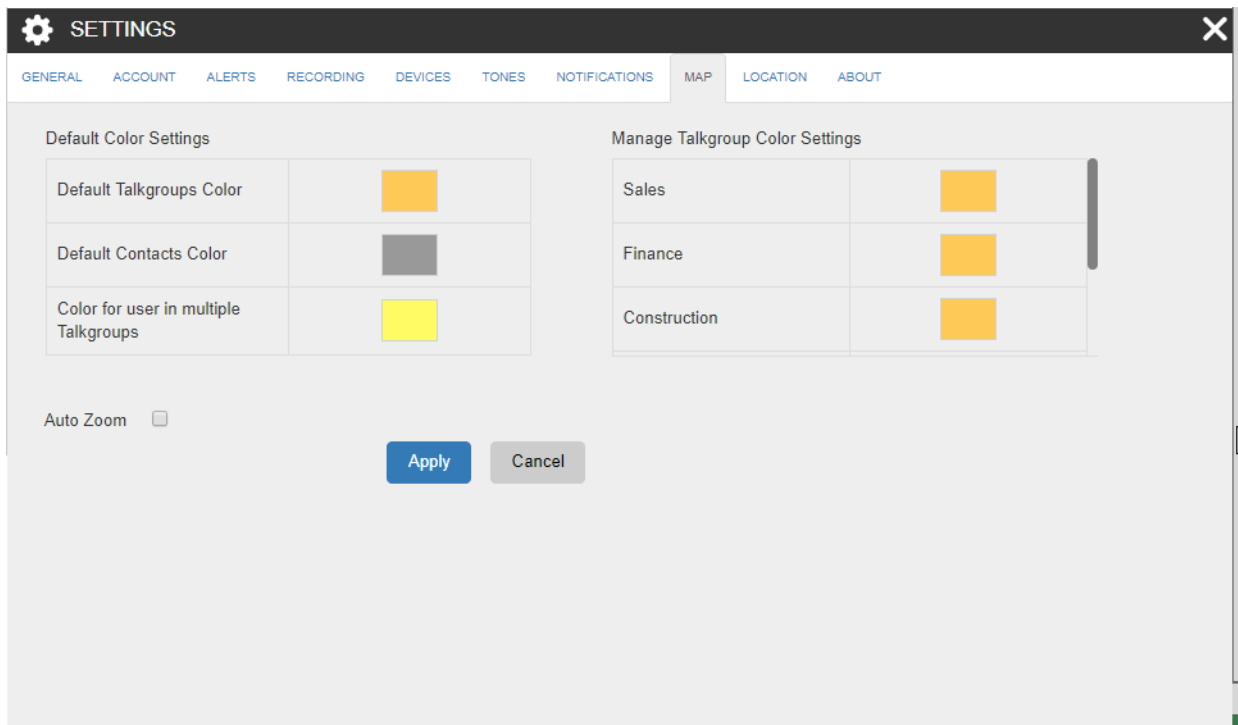

- 2 Click the Default Contacts Color row, and then click the color, which displays the color palette.

Figure 321: Map Color Settings for Contact

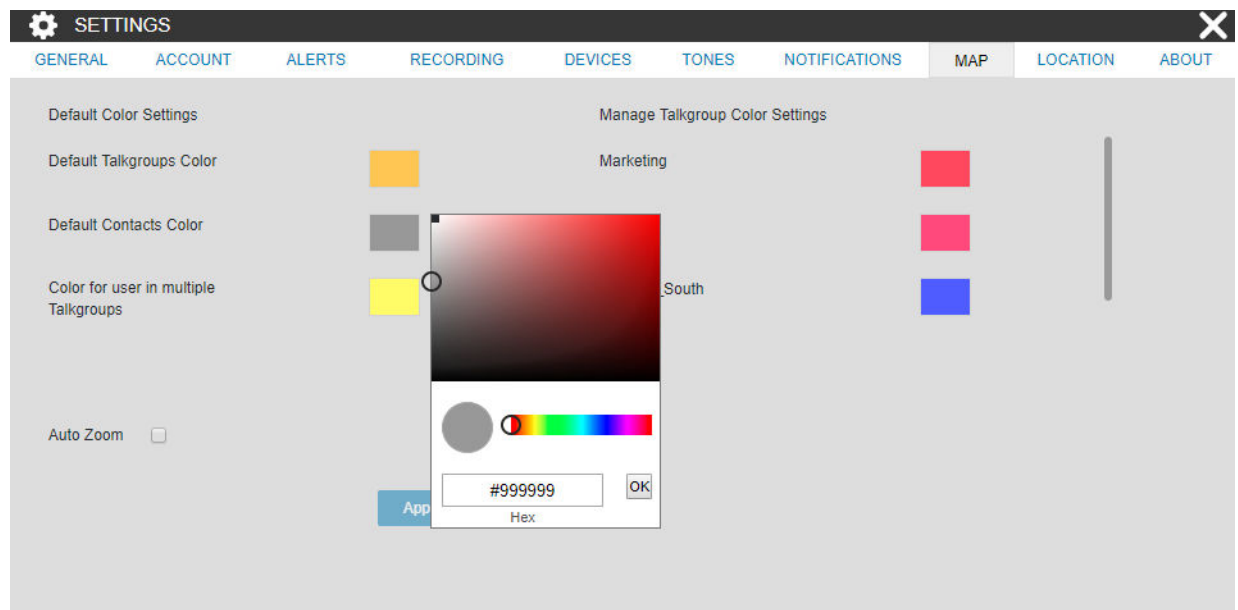


- 3 Select the new color you wish to assign to a contact.
- 4 To save the changes, click the **Apply** button at the bottom of the screen.
- 5 In the following screen shot, the location of the selected contact is shown with the push pin on the map.



NOTICE: All the contacts push pins are shown in the same color on the map. If a contact is also a talkgroup member, the push pin displays using the talkgroup color.

Figure 322: Selected color push pin on map for contact

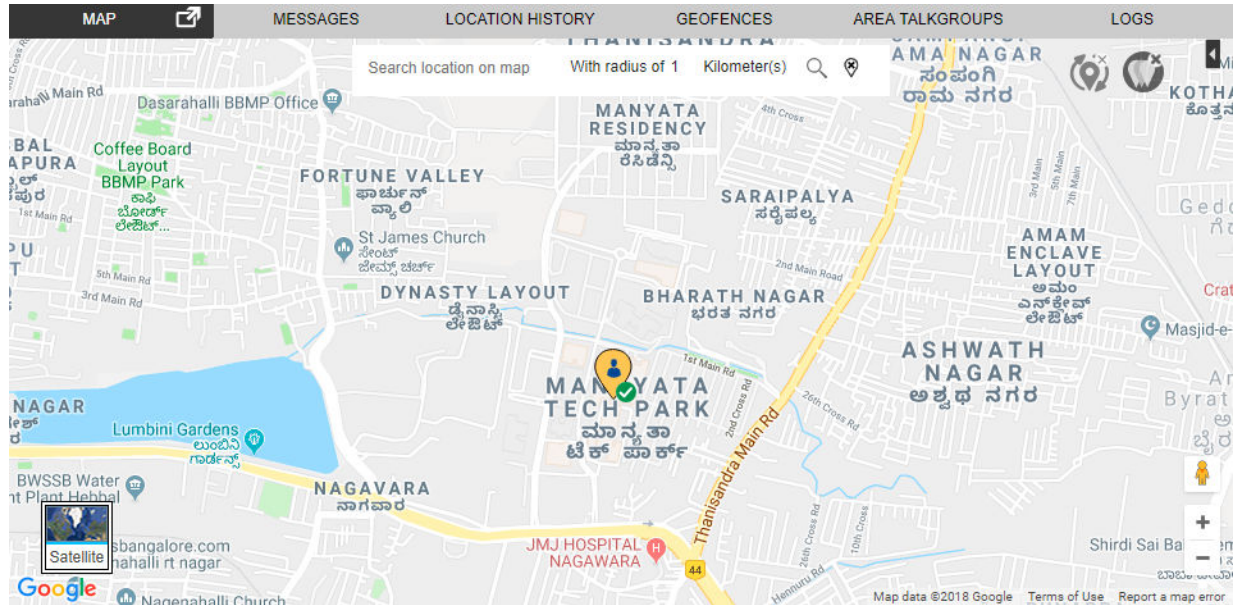

26.8.1


Setting the Default Color for a Talkgroup:

This setting allows you to select a default color for a talkgroup when no color is previously chosen for the talkgroup:

Procedure:

- 1 Click the **Map Settings**.


Figure 323: Map Color Settings for Talkgroup

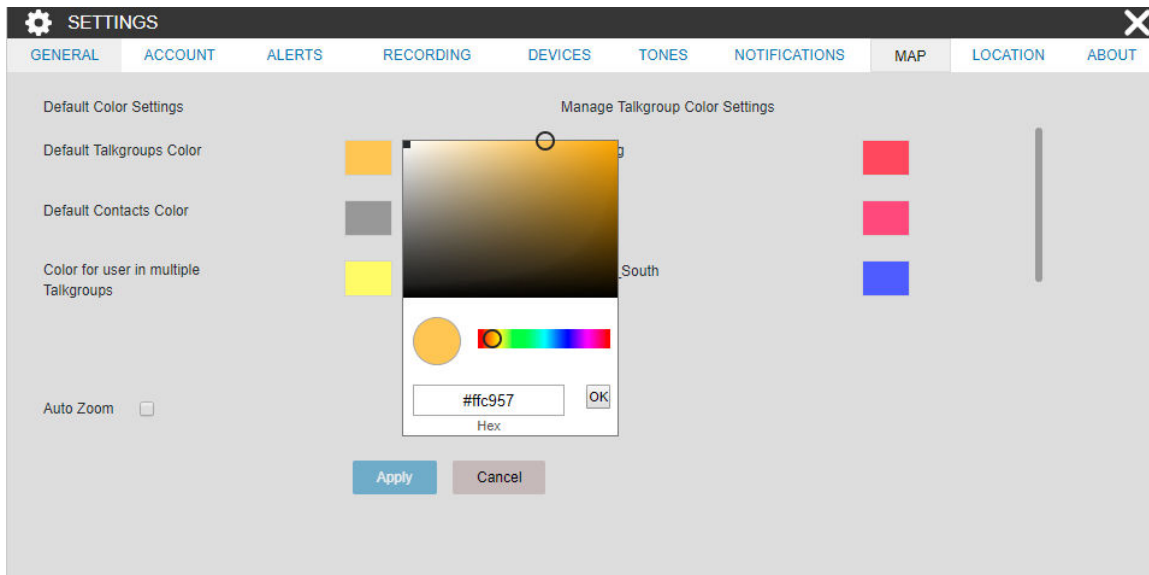

- 2 Click the Talkgroup Color row, and then click the color, which displays the color palette.
- 3 Select the color you wish to assign to a talkgroup member.

- 4 To save the changes, click the **Apply** button at the bottom of the screen.
- 5 When you locate a talkgroup member, the assigned color push pin appears on the map.

Figure 324: Selected color push pin on map for Talkgroup

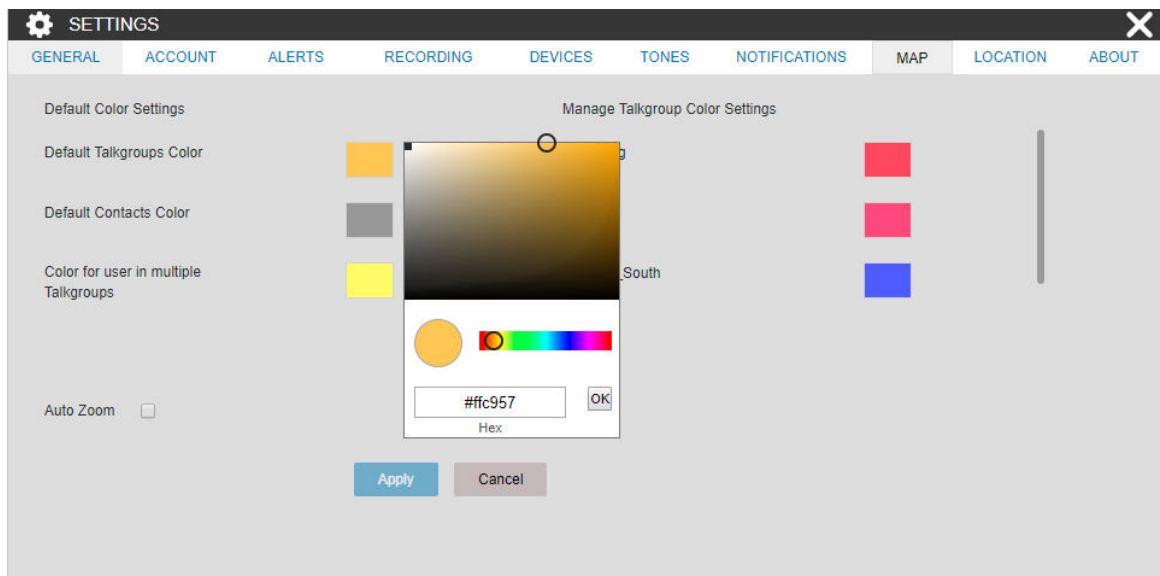

26.8.2

Setting a Color for a Common Member in Multiple Talkgroups


This settings allows you to select a color for the fleet member who is part of more than one talkgroup.

When and where to use: To select a color for the fleet member who is part of more than one talkgroup, follow these steps:


Procedure:

- 1 Click the **Map Settings**.
- 2 Click the **Color for user in multiple talkgroups** row. A color selection panel opens.
- 3 Click the color which displays the color palette.

Figure 325: Map Color Settings for User in Multiple Talkgroup Member

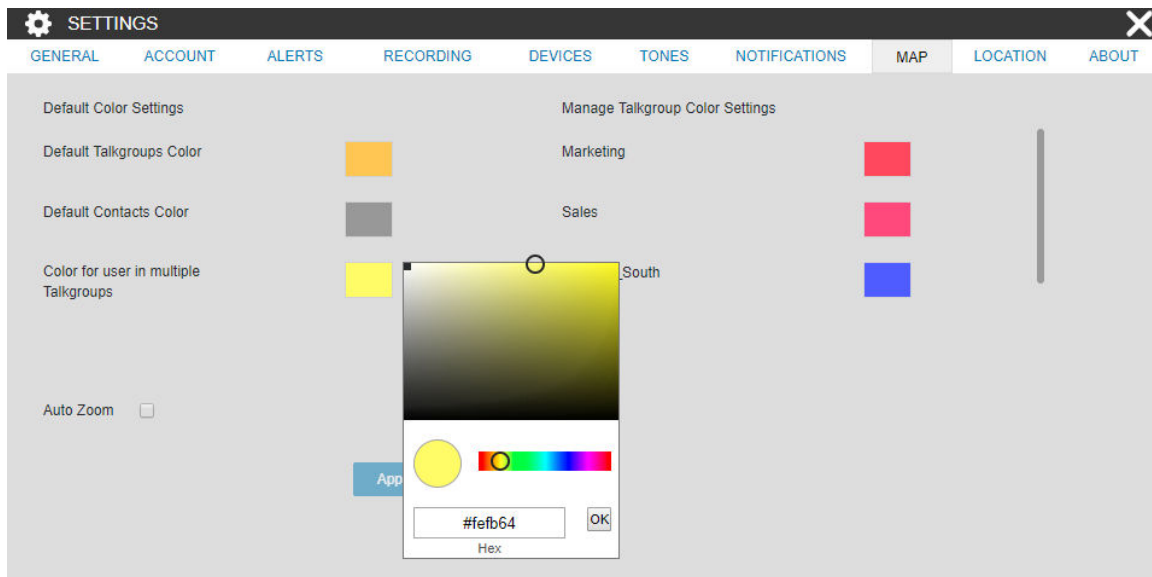

- 4 Select the new color you wish to assign to a common member.
- 5 To save the changes, click the **Apply** button at the bottom of the screen.
- 6 When you locate a talkgroup member, the assigned color push pin appears on the map.

 **NOTICE:** If you attempt to set the same color for both 'Talkgroup' and 'Common Member', you get an error message and Dispatch does not allow you to save the changes.

26.8.3

Setting a Color for a Talkgroup


This setting allows you to select a common color for all the fleet members in one talkgroup.

When and where to use: To select a common color for all the fleet members in one talkgroup, follow these steps:

Procedure:

- 1 Click the **Map Settings**.
- 2 Click the Talkgroup list in the Manage Talkgroup Color Settings pane.
- 3 Click the color, which displays the color palette.

Figure 326: Color Settings for Talkgroup

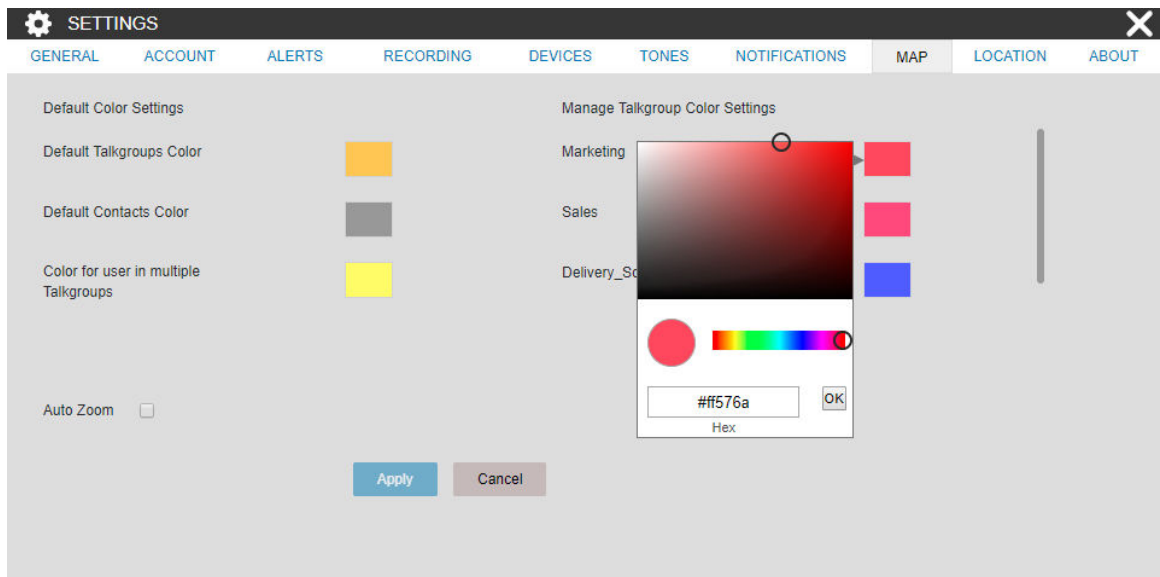

- 4 Select the new color you wish to assign to a Talkgroup.
- 5 To save the changes, click the **Apply** button at the bottom of the screen.
- 6 When you locate a talkgroup member that belongs to this talkgroup, the assigned color push pin appears on the map indicating the fleet members in this talkgroup.

26.8.4

Setting a Color to a Default Contact and Talkgroup Color for a Talkgroup


This setting allows you to change the color back to default contacts color or default talkgroups color for a talkgroup.

When and where to use: To change the color back to default contacts color or default talkgroups color for a talkgroup, follow these steps:

Procedure:

- 1 Click the **Map Settings**.
- 2 To view the “Set to Default Talkgroup Color” and “Set to default Contact Color” options, right-click on any Talkgroup in the Talkgroup Color Settings pane as shown in the following screens.

Figure 327: Default Color Settings for Talkgroup

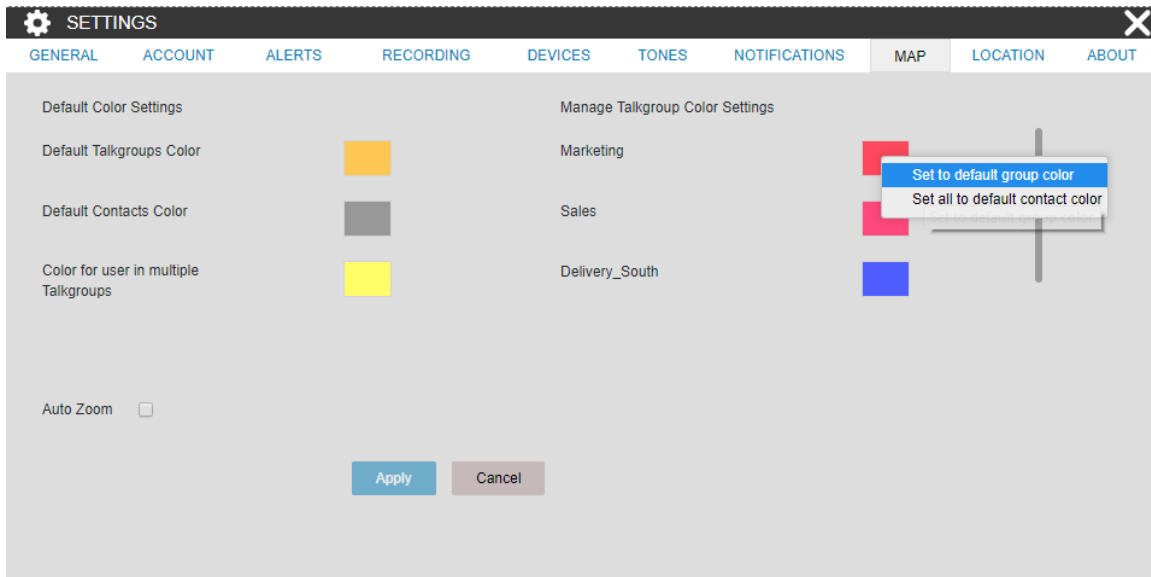

- 3 Select the option “Set to default Talkgroup color” to change the assigned Talkgroup color to that of Default Talkgroups Color.
- 4 Select the option “Set all to default contact color” to change the color of all the Talkgroups, default talkgroups color and Default Common Member color to that of the Default Contacts Color.

26.8.5

Auto Zoom

When you enable the Auto Zoom feature, the map zooms in and out and center itself automatically to ensure that it display all the located fleet members on the map. If you disable this feature in the settings, then scroll the map to find them when they go out of the map coverage area or relocate them to bring them into view.

26.9

Location

- **Location Expiry**
Fleet members report their GPS location at a set frequency decided by your carrier, for example, 10 minutes. Your administrator sets the location expiry, for example, 45 minutes. The location publishes every 10 minutes for the fleet member. If the fleet member does not report location within the set expiry period, then the location of the fleet member location is marked as expired. The time frame for the location expiry setting can range from a minimum of 1 minute to a maximum of 3 days, default 45 minutes. You cannot configure the location expiry from the Dispatch Settings.
- **On-demand Location**
The Periodic location update feature provides accurate information and whereabouts of a fleet member. You can set the location update interval and the duration of the location update instances using this setting. For example, if the interval is set to 3 minutes while the duration is set to 2 hours, the location is refreshed every 3 minutes for 2 hours.
- **Location Update Interval**
This setting allows you to set the location update interval of the fleet member. Minimum 1 minute to maximum of 60 minutes, default 60 minutes.
- **Location Period**

This setting allows you to set the duration of the location update of the fleet member. Minimum 1 minute to maximum of 1440 minutes, default 30 minutes.

- **Map Center**

This setting displays you the address, latitude, and longitude of the center on the map which you have saved from the settings under the Map tab. You cannot edit the map center details from the Map Center under the Settings.



NOTICE: If you do not set the On-demand location settings for your fleet members (a maximum of 100 fleet members can have On-demand settings), the location information of your fleet member updates according to the GPS settings. Battery Optimized iPhone clients do not report location as per On-demand Location settings. Battery Optimized iPhone clients only report location every 7- 10 minutes regardless of the On-demand Location settings.

- **Geofence**

Geofence alert provides notification when there is any movement of the member from the specified boundary on the map as defined by you.

- **Location Update Interval**

Allows you to specify the interval of the notification sent to you when the member is out of the fence.

- **Fence Period**

Allows you to specify the duration for which the fence is applicable for a geofence enabled talkgroup. After which again enable the fence to the talkgroup.

- **Fence Distance**

Allows you to specify the distance of the fence (in radius) from a selected location on the map for an enabled fence (Minimum: 0.1 kilometers Maximum: 1000 kilometers, Default: 1 Kilometer).



NOTICE: The distance units for fence, minimum value, maximum value, and default value for the On-demand location and Geofence settings depends on the server configuration.

- **Area Talkgroup**

This setting allows you to set the default radius around the area talkgroup. When you set the radius, the same is shown under the Area Talkgroup slider at the time of area talkgroup creation.

- **Use Google Map for Location History traversed path**

This setting allows you to set the method to display the location history of the fleet member. If you clear the check box, then the traversed path fleet member shows as a straight line.

Figure 328: Location Settings

26.10

About

You can find the Dispatch database and map version information by selecting the About option. This window also displays the End User License Agreement for the Dispatch. You can click the End User License Agreement (EULA) link to view the agreement. You can also download the EULA details.

Chapter 27

Troubleshooting

This section describes common issues that have been identified and their corrective action.

27.1

Sign in and Plug-in Issue

The 'Agree' button in the EULA window is disabled.

After reading the EULA, scroll down to bottom of the EULA page and select the check box to enable the 'Agree' button.

Opening the Dispatch link shows a website security error message as mentioned here:

- 1 "Not secure" in the address bar of the Chrome browser.
- 2 "There is a problem with this website's security certificate" in the Internet Explorer page.

Contact your IT support for the root certificate, if you see these error messages.

Can open the Dispatch link but cannot install the Plug-in.

The browser you are using to open the Dispatch link may not be compatible with the OS version of your PC or Laptop. For more information, refer to [Software Requirements on page 30](#) of this document.

Internet Explorer is not allowing to open the Dispatch URL. The button is disabled.

Make sure that the security level of the zone in Internet Explorer is appropriate to allow the Dispatch URL.

When accessing Dispatch in incognito mode, an "Add extension" pop-up displays, although the extension is added to the chrome.

Make sure that you enable the check box "Allow in incognito" in the extension. To enable the extension in incognito mode, go to **Menu** → **More Tools** → **Extensions** → **Dispatcher Plug-in**. Select the check box "Allow in incognito". Once enabled, close the browser tab and reopen.

Cannot see the Dispatch Sign in page though Internet is working fine, and the Dispatch link is correct.

Make sure that the PostScript is enabled in the browser settings.

To check the Java Script settings, do the following:

- If you are using Internet Explorer, click **Settings** → **Internet options** → **Security** → **Custom level** → **Scripting**.
- If Scripting is disabled, select **Enable** and click **OK**.
 - 1 If you are using Chrome browser, click **Chrome menu** → **Settings** → **Advance** → **Content Settings** → **Java Script**.
- If the Java Script is blocked, choose Allow.

Clicking the Sign In button shows an error message “An add-on for this website failed to run”.

Make sure that you enable the “Dispatch Plug-in” in the add-ons or extensions.

To check the add-ons settings, follow these steps:

- If you are using Internet Explorer, click **Settings** → **Manage add-ons** → **“Dispatch Plug-in”**.
- If disabled, right-click and change the status.
 - 1 If you are using Chrome, click **Menu** → **More Tools** → **Extensions**
- If unchecked, check the check box of the Dispatcher Plug-in.

After signing in to Dispatch, the browser does not allow the Plug-in to download automatically.

Make sure that the automatic download option is enabled in your browser to allow the Plug-in download. In the chrome browser, if the automatic download option is disabled, then the browser asks you to either Save or Cancel the download.

To check the download settings, do the following:

- If you are using Internet Explorer, click **Settings** → **Internet options** → **Security** → **Custom level** → **Download**.
- If the File download is disabled, select **Enable** and click **OK**.
 - 1 If you are using Chrome browser, click **Chrome menu** → **Settings** → **Advance** → **Content Settings** → **Automatic downloads**
- If the Automatic download is disabled, choose **Enable**.

A repetitive Plug-in install message displays when signing in to the Dispatch in IE 11, even though the latest Dispatch Plug-in is installed.

If repetitive plug-in install message displays, follow these steps:

- 1 Make sure that you enable the “Dispatch Plug-in” in the add-ons. To enable the “Dispatch Plug-in” follow these steps:
 - 2 Click **Settings** → **Manage add-ons** → **“Dispatch Plug-in.”**
 - Right-click and change the status to enabled, if disabled.
 - 1 Make sure that you disable the “Enable Enhance Protected Mode” in the Internet Security Settings. To disable the “Enable Enhance Protected Mode” follow these steps:

Click **Settings** → **Internet options** → **Advanced** → **Security** → **Enable Enhance Protected Mode**.

If “Enable Enhance Protected Mode” is enabled, clear the check box and click **OK** to disable.

Unable to un-install the Dispatch Plug-in. The Dispatch Plug-in pop-up stays in the screen but nothing happens.

Sign out and close the Dispatch browser tab and retry un-installing the Dispatch Plug-in.

27.2

User Interface Issues

Unable to click the Apply button in the Settings page.

There are no changes made to apply.

Cannot see any contacts or talkgroups in the Contacts and Talkgroups window.

Allow some time to sync with the server. If the issue still exists, contact your administrator.

Can see the Geofence, Location History, and other features in my Dispatch although these features are disabled in the Central Admin Tool or server.

Sign out and sign in to the Dispatch for the changes to take effect, for the features that are disabled in the Central Admin Tool or server.

Unable to take the floor while a call is in progress and there is a confirmation message because of closing the Dispatch browser tab.

When there is a call-in progress and if you close the Dispatch browser, a confirmation message displays as “Do you want to leave this site?”

Click **Stay** to continue to the Dispatch and take the floor.

When refresh or reload the Dispatch in the chrome browser, the undocked window turns to blank page, although the undocked window docked to the Dispatch.

There is a limitation when you refresh or reload an undocked window of the Dispatch in chrome browser. Close the blank page once docked.

Not getting any toast messages or not able to listen to tones when minimize the Dispatch or open in another browser tab.

Dispatch does not show toast messages if you are not in the active browser tab or if you minimize the Dispatch browser. Make sure that you are in active Dispatch browser tab or you do not minimize the Dispatch browser to see the notifications or listen to the tones. Sometimes, the Dispatch does not play the tones. This issue mostly happens in the chrome browser.

Chapter 28

Glossary

28.1

Call Types

The following types of calls supported by the Dispatch.

Private Call (One-to-One Call)

A private call (also known as a one-to-one call) is a call between you and one other person.

Talkgroup Call

A talkgroup call is a call to a talkgroup with a group of member or people.

Quick Group Call (Quick Call)

A Quick Group call is a talkgroup call that is created on-the-fly by selecting call members from your contact list.

Broadcast Call

A Broadcast Call is a call that allows a designated broadcaster to make high-priority calls typically used for making important announcements.

Scanned Talkgroup Call

On the monitored talkgroup window, when the talkgroup is scanned, the call that comes in for that talkgroup can be heard immediately, depending on the set priority for the talkgroup.

Monitored Talkgroup Call

The Dispatch allows you to monitor up to 20 talkgroups. When monitoring, if a call is active, you can see call activity on monitored talkgroups and optionally join the talkgroup call. Monitoring call is helpful when you want to be aware of the call activity on specific talkgroups but do not necessarily want to participate immediately.

Video Call

Video streaming allows you to initiate or receive video call to or from the fleet member to who can do video streaming. The Dispatch supports two types of video streaming: Video Push and Video Pull.

Instant Personal Alert (IPA)

An Instant Personal Alert (IPA) is a way for a fleet member to ask for a call-back from you. An IPA is especially useful if the fleet member you want to call has a presence status of Do Not Disturb.

28.2

Secured Message

You can send and receive text, location, and multimedia messages with the contacts and talkgroups from the Message window. A multimedia file includes document, picture, audio, and video. You can share and receive the location to and from the fleet member.

28.3

Dispatch Dispatcher Identity

Your display name is shown to others during a PTT call and is shown in their PTT call history.

28.4

Floor Control

While in a PTT call, only one person can speak at a time. The person speaking is said to “have the floor”. The following terms are used throughout this guide:

Floor Acquired

When you take the floor by pressing the PTT button, the on-screen microphone icon turns blue.”

The blue PTT icon indicates that you have the floor and can speak while you press the PTT button.

When you stop talking, release the PTT button.

Idle

While no one is speaking, the floor is “idle” and is available for anyone to take. The screen shows a light white button and shows the message “No one is speaking...” If you want to speak, wait until the floor is idle, then you can press the PTT button to acquire the floor.

Floor Unavailable

Whenever someone else is speaking, you can see the name of the speaker and the on-screen PTT button turns white.

28.5

Talkgroup

A talkgroup is a type of PTT contact that connects you to multiple people at once.

28.6

Quick Group

Quick Group allows you to make a PTT call to up to ten people without first creating a talkgroup. Quick group is handy if you want to call a small talkgroup of people quickly that are not already in a talkgroup.

28.7

Area Talkgroup

Area Talkgroup allows the dispatcher to create temporary talkgroup with fleet members on the geographical area. Dispatcher can call, send message (text, image, video, document, and location) to the area talkgroups.

28.8

Geofence

Geofence allows you to define and enable a virtual boundary around the talkgroup on the map. If fleet member crosses the fence, you and/or fleet member receive a notification.

28.9

Location History

Location History allows you to track and display the paths, which the member has traversed. You can select the contact or talkgroup from the location history tab and can specify the duration for which you want to see the path on the map. You can play, pause, stop, and view the details of any location of that path any time during the location history play.

28.10

On-demand Location Updates

The following types of updates enable you to receive location updates from fleet members on an as-needed basis.

Periodic Location Updates

Enables you to receive periodic location updates from a fleet member based on your periodic update settings.

One Time Location Updates

Enables you to receive a one-time location update of one or more fleet members.



NOTICE: On-demand location updates are only supported for release 7.7 and higher clients.

28.11

User Monitoring

User monitoring is a feature that allows the dispatcher to monitor the current situation of a fleet member who is not responding. Depend on the information evaluated and accessed, the dispatcher

can activate ambient listening, discreet listening or can remotely disable the device of the fleet member.

28.12

Emergency

If there is any life threatening situation, emergency feature allows the dispatcher to initiate the emergency on behalf of the target user and participate. The emergency calls in nature are always the top priority and preempt any ongoing call except another ongoing emergency call.

28.13

Backup

Backup action allows the dispatcher to take the backup of call recordings and messages including attachments along with their meta data (details) that are saved for the future reference. Dispatcher can choose to take necessary action whenever a backup pending message displays. The backed-up files are saved under the pre-configured folder in local PC.

28.14

Status Alerts

Status alerts allow you to receive status message from the fleet member and to know their quick status such as on-duty, on-route, busy, at-incident, off-duty.